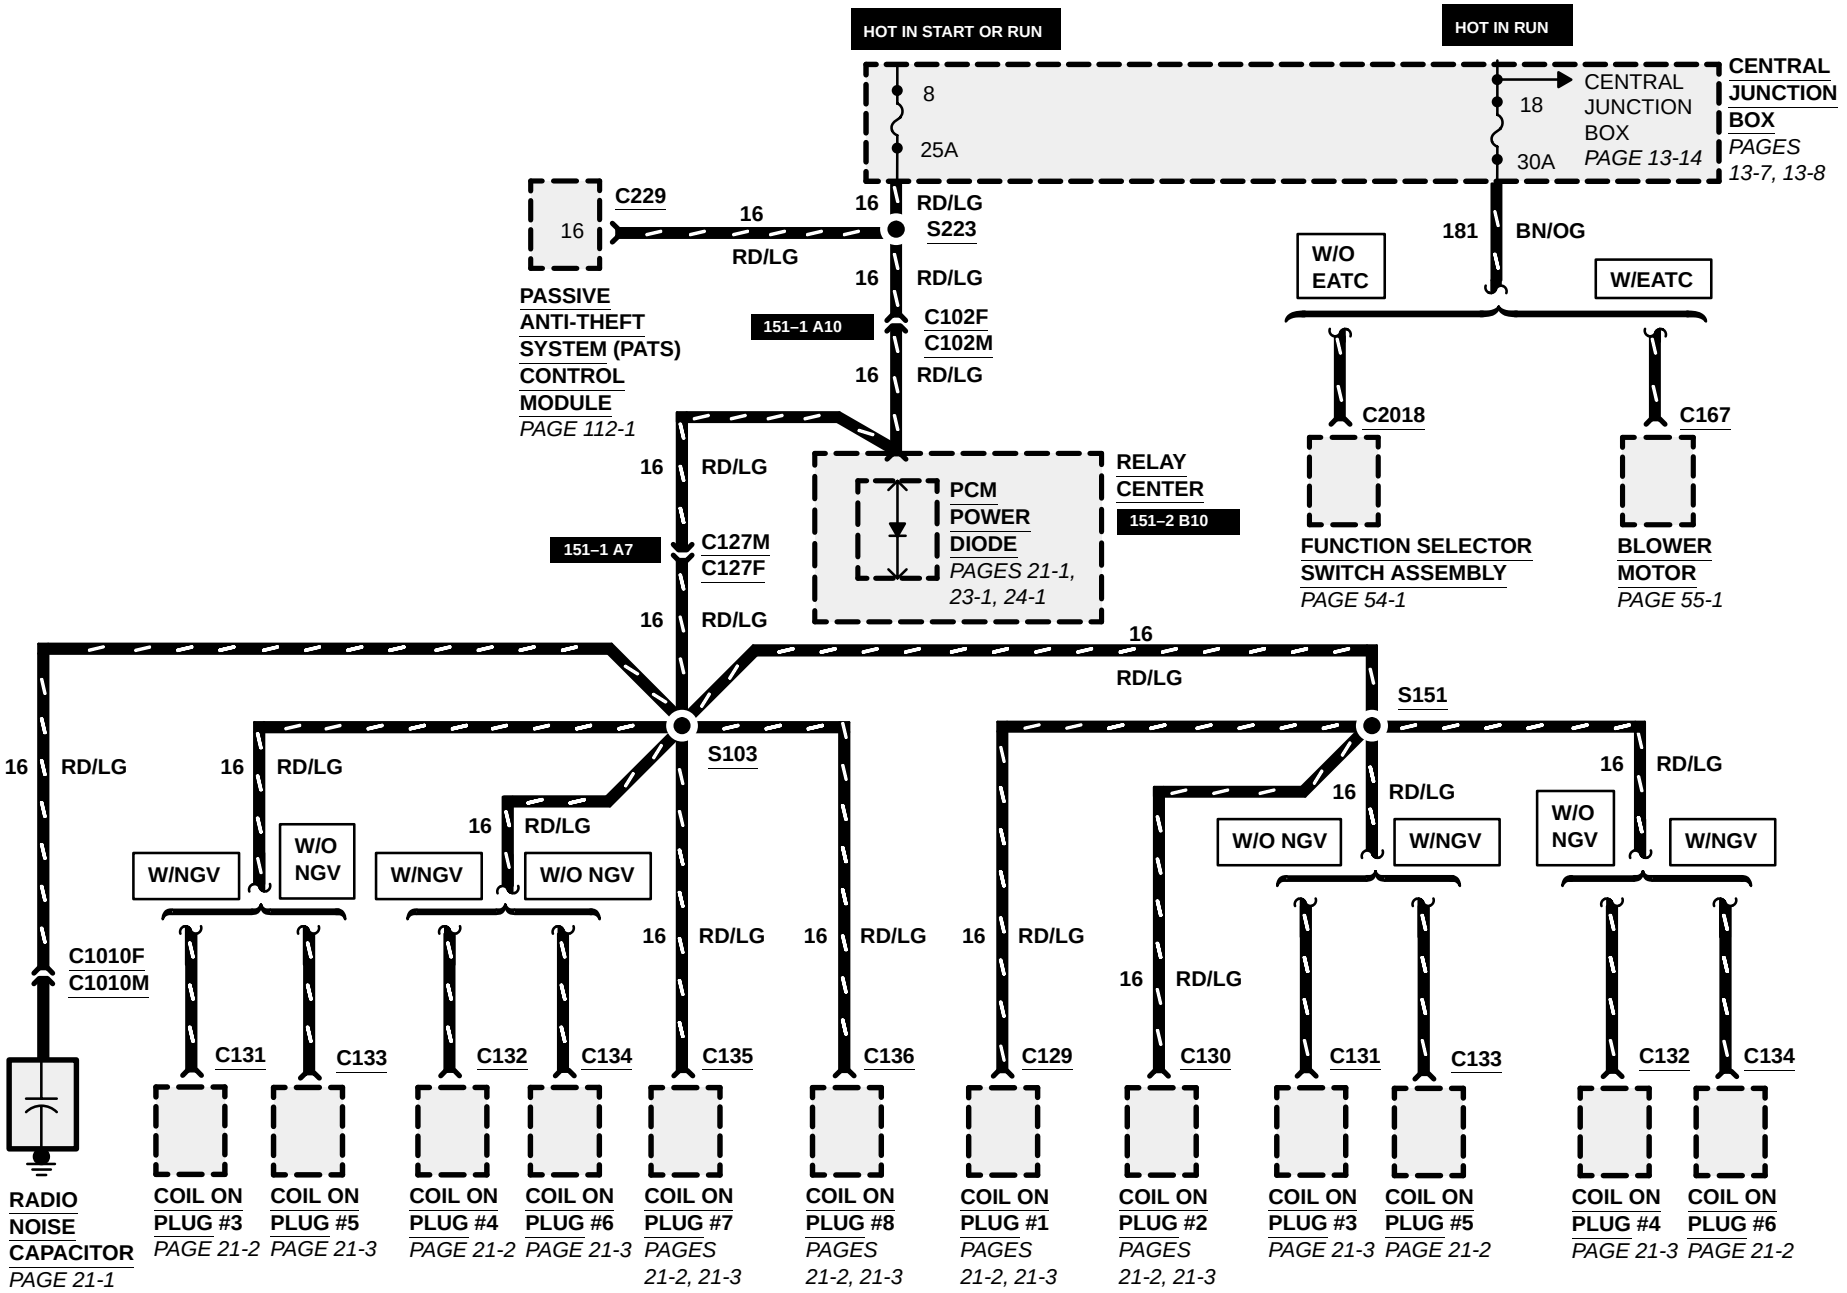
HOT IN START OR RUN
HOT IN RUN
8
25A
18
30A
CENTRAL JUNCTION BOX
PAGE 13-14
CENTRAL JUNCTION BOX
PAGES 13-7, 13-8
C229
16
16 RD/LG
S223
16 RD/LG
181 BN/OG
W/O EATC
W/EATC
PASSIVE ANTI-THEFT SYSTEM (PATS) CONTROL MODULE
PAGE 112-1
151–1 A10
C102F
C102M
16 RD/LG
C2018
C167
16 RD/LG
RELAY CENTER
151–2 B10
PCM POWER DIODE
PAGES 21-1, 23-1, 24-1
151–1 A7
C127M
C127F
16 RD/LG
FUNCTION SELECTOR SWITCH ASSEMBLY
PAGE 54-1
BLOWER MOTOR
PAGE 55-1
16 RD/LG
S151
S103
16 RD/LG
16 RD/LG
16 RD/LG
16 RD/LG
16 RD/LG
16 RD/LG
16 RD/LG
16 RD/LG
W/NGV
W/O NGV
W/NGV
W/O NGV
W/O NGV
W/NGV
W/O NGV
W/NGV
C1010F
C1010M
C131
C133
C132
C134
C135
C136
C129
C130
C131
C133
C132
C134
RADIO NOISE CAPACITOR
PAGE 21-1
COIL ON PLUG #3
PAGE 21-2
COIL ON PLUG #5
PAGE 21-3
COIL ON PLUG #4
PAGE 21-2
COIL ON PLUG #6
PAGE 21-3
COIL ON PLUG #7
PAGES 21-2, 21-3
COIL ON PLUG #8
PAGES 21-2, 21-3
COIL ON PLUG #1
PAGES 21-2, 21-3
COIL ON PLUG #2
PAGES 21-2, 21-3
COIL ON PLUG #3
PAGE 21-3
COIL ON PLUG #5
PAGE 21-2
COIL ON PLUG #4
PAGE 21-3
COIL ON PLUG #6
PAGE 21-2