C2099

14401

N475
Passenger Air bag
Deactivation (PAD)
switch

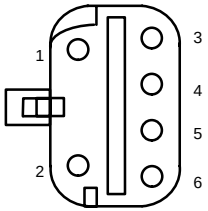

F06052

Pin	Circuit	Circuit function
1	–	not used
2	–	not used
3	1113 (YE/LG)	Passenger Air bag Deactivation (PAD) switch, indicator, control
4	609 (OG/YE)	Voltage supplied at all times (overload protected)
5	649 (BK/OG)	Vehicle identification
6	1112 (WH/LB)	Passenger Air bag Deactivation (PAD) switch, input

C2103

14A005

P5
Clutch triple function
switch jumper

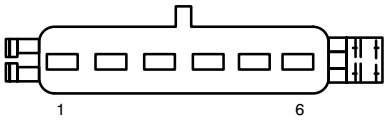

F06084

Pin	Circuit	Circuit function
1	92 (LB/YE)	Voltage in Run (overload protected)
2	1093 (TN/RD)	not used
3	306 (TN/LB)	not used
4	810 (RD/LG)	Brake pedal position switch (13480), input – Gasoline engines
	640 (RD/YE)	Voltage supplied in Start and Run (overload protected) – Diesel engines
5	33 (WH/PK)	Voltage in Run (overload protected) – gasoline engines
6	199 (LB/YE)	not used