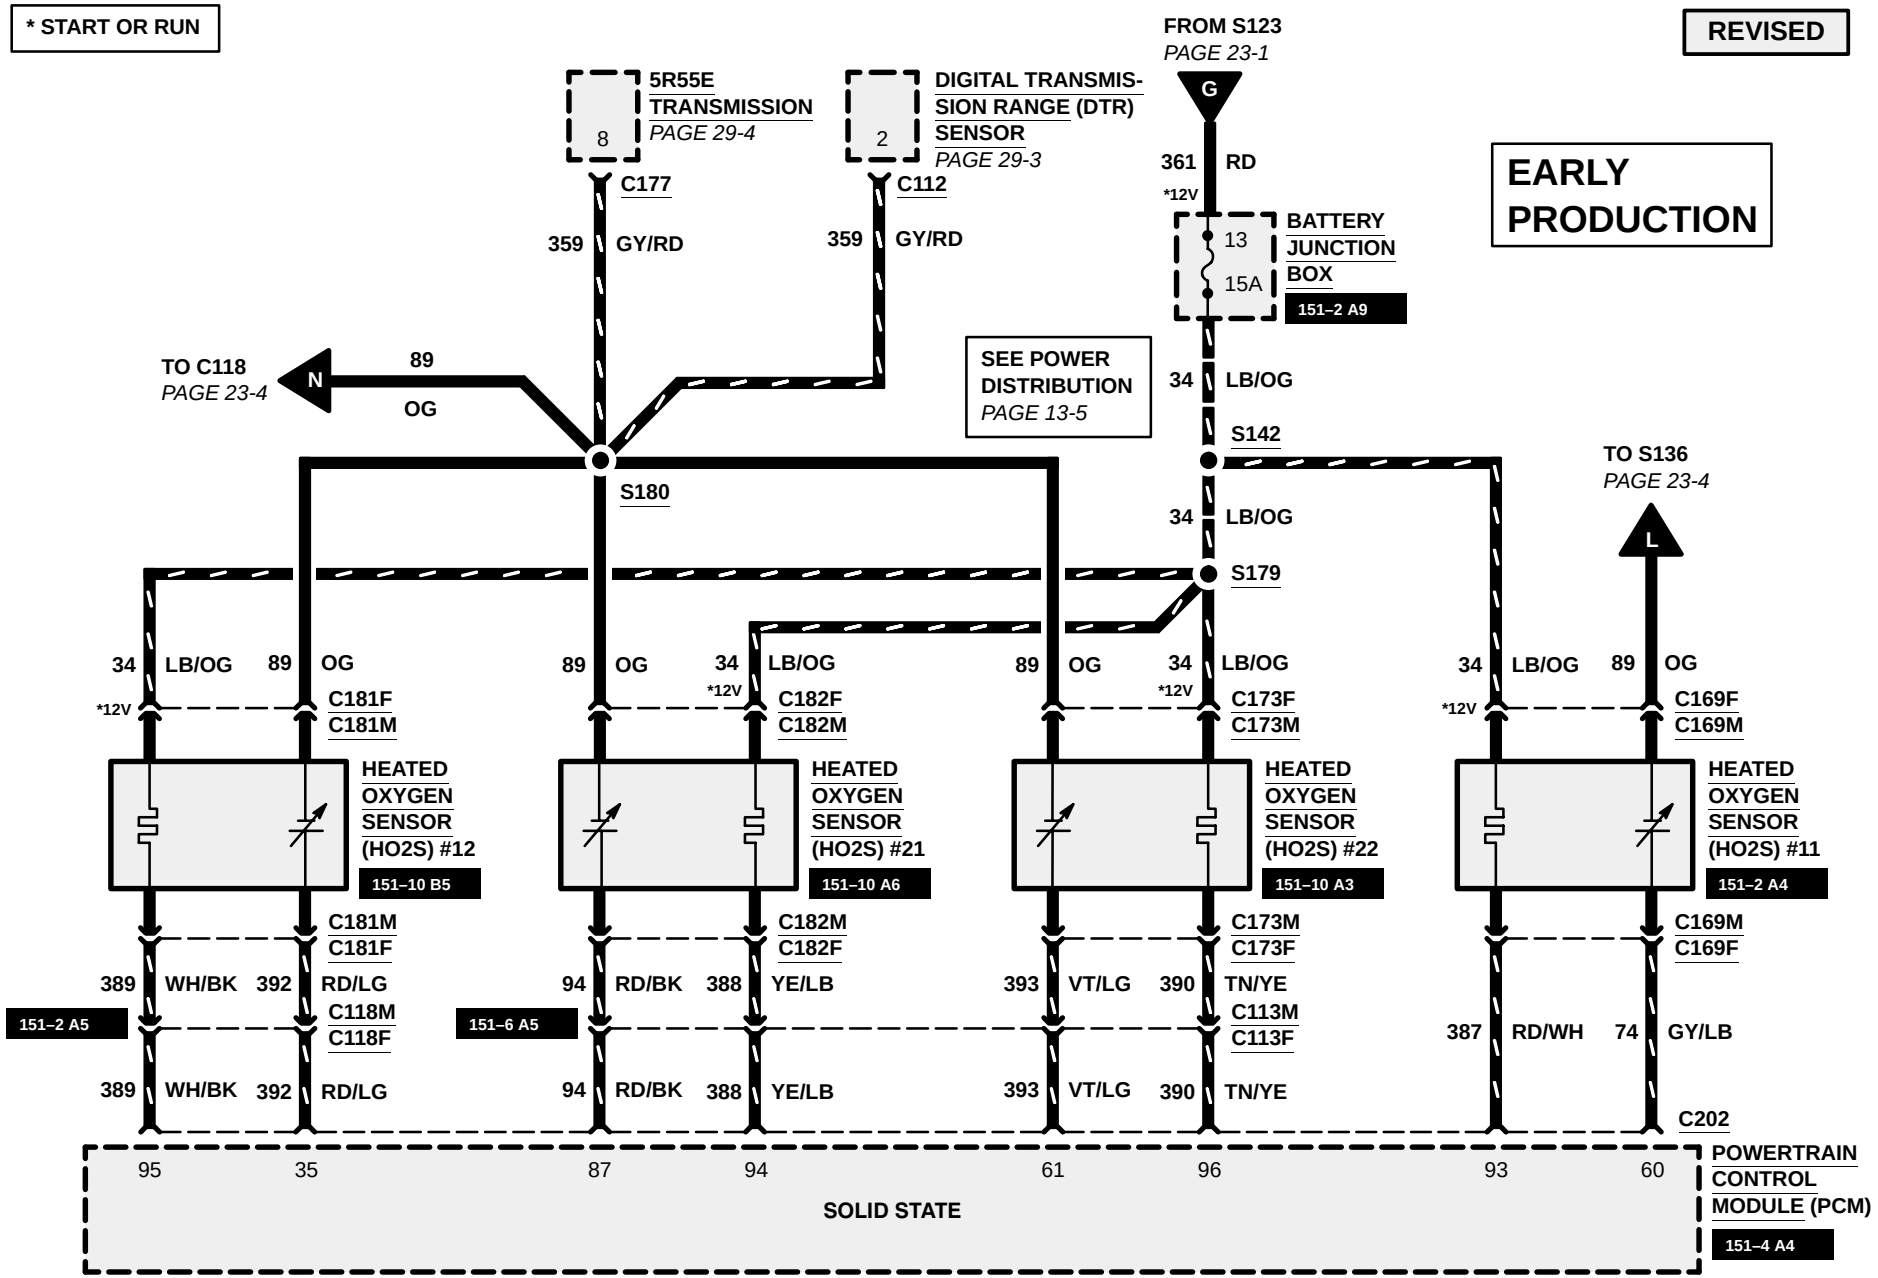
* START OR RUN
REVISED
FROM S123
PAGE 23-1
G
361 RD
*12V
5R55E TRANSMISSION
PAGE 29-4
8
C177
359 GY/RD
DIGITAL TRANSMISSION RANGE (DTR) SENSOR
PAGE 29-3
2
C112
359 GY/RD
EARLY PRODUCTION
BATTERY JUNCTION BOX
13
15A
151–2 A9
TO C118
PAGE 23-4
N
89
OG
SEE POWER DISTRIBUTION
PAGE 13-5
34 LB/OG
S142
S180
34 LB/OG
S179
TO S136
PAGE 23-4
L
34 LB/OG 89 OG
*12V
C181F
C181M
HEATED OXYGEN SENSOR (HO2S) #12
151–10 B5
89 OG 34 LB/OG
*12V
C182F
C182M
HEATED OXYGEN SENSOR (HO2S) #21
151–10 A6
89 OG 34 LB/OG
*12V
C173F
C173M
HEATED OXYGEN SENSOR (HO2S) #22
151–10 A3
34 LB/OG 89 OG
*12V
C169F
C169M
HEATED OXYGEN SENSOR (HO2S) #11
151–2 A4
C181M
C181F
389 WH/BK 392 RD/LG
C118M
C118F
151–2 A5
389 WH/BK 392 RD/LG
C182M
C182F
94 RD/BK 388 YE/LB
151–6 A5
94 RD/BK 388 YE/LB
C173M
C173F
393 VT/LG 390 TN/YE
C113M
C113F
393 VT/LG 390 TN/YE
C169M
C169F
387 RD/WH 74 GY/LB
C202
95 35 87 94 61 96 93 60
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
151–4 A4