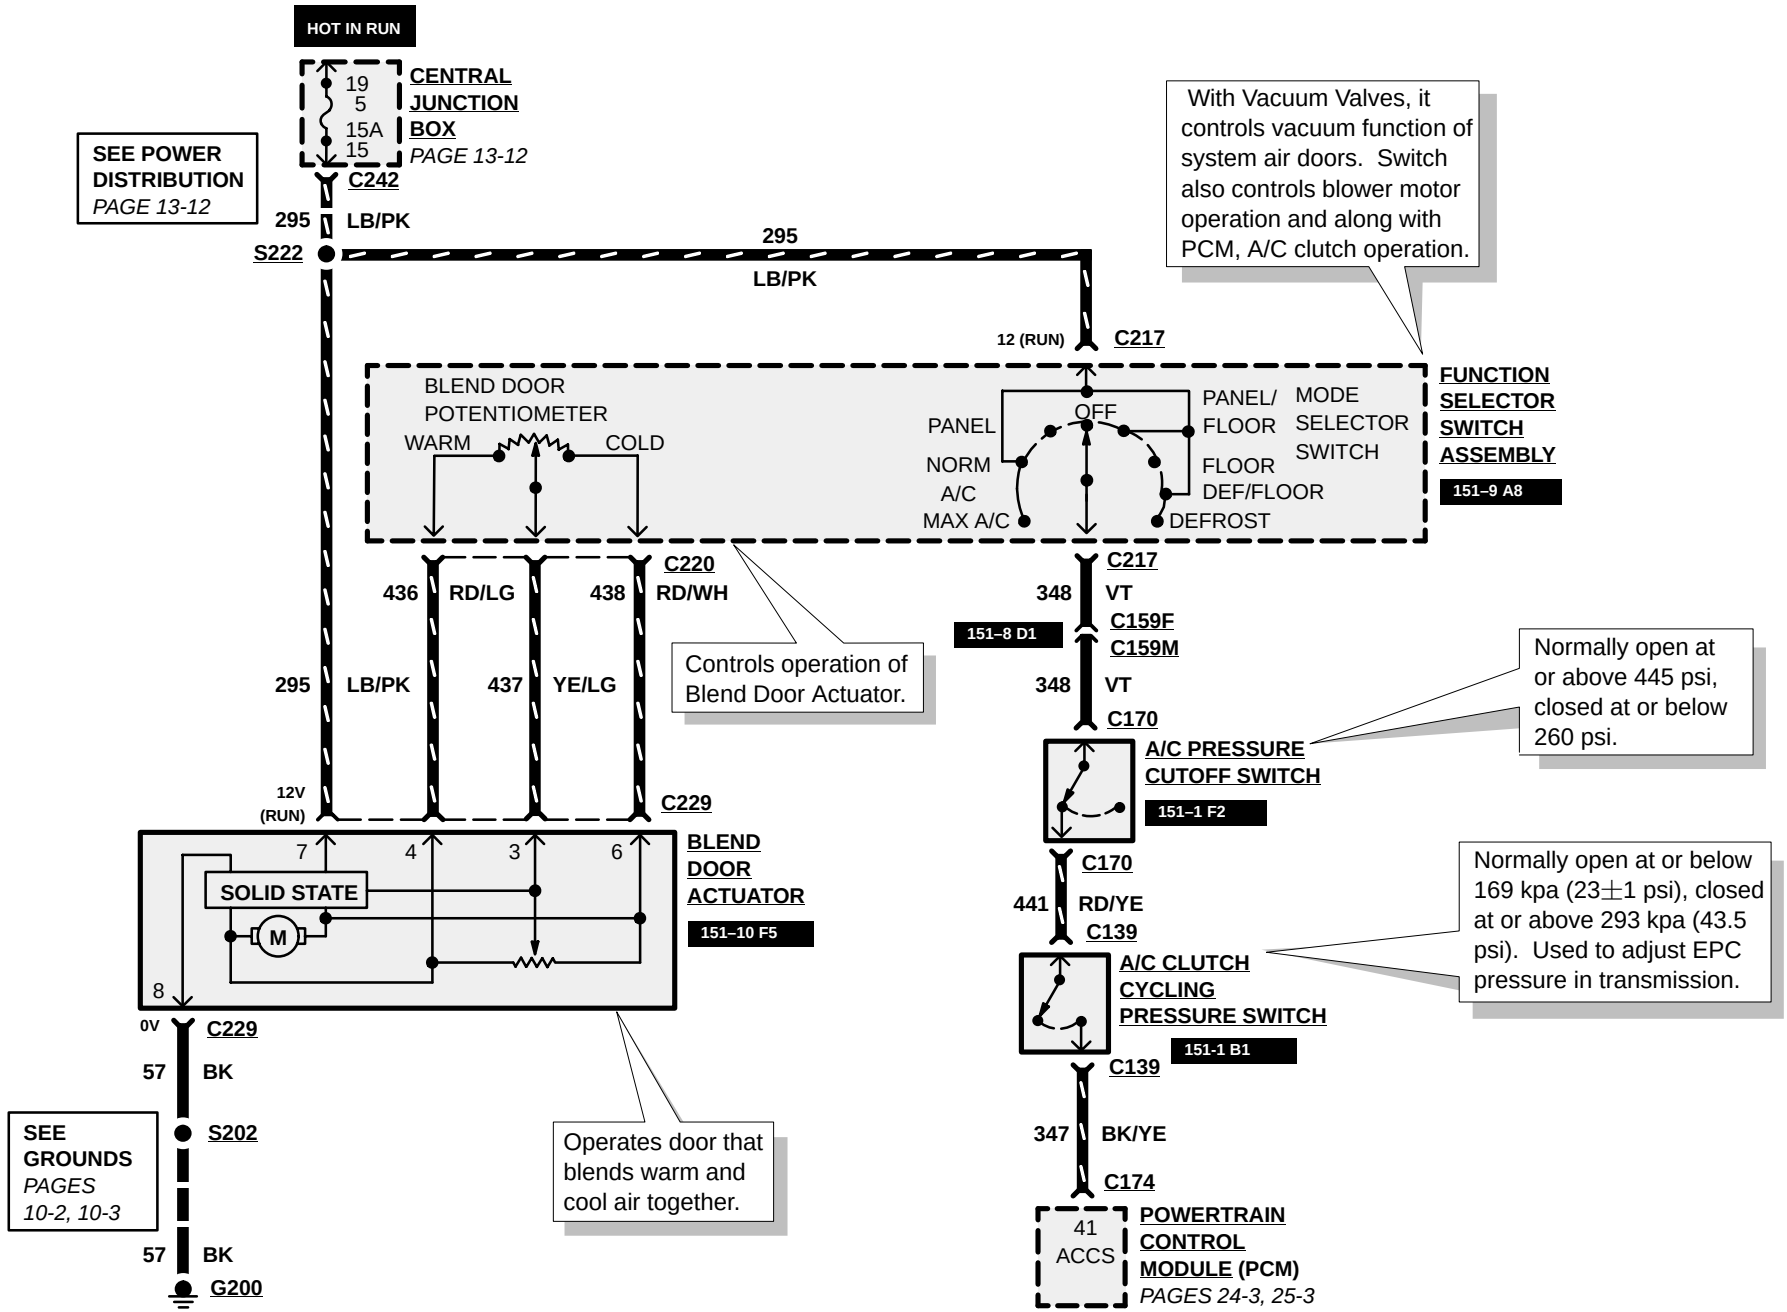
HOT IN RUN
19
5
15A
15
CENTRAL JUNCTION BOX
PAGE 13-12
SEE POWER DISTRIBUTION
PAGE 13-12
C242
295 LB/PK
S222
295
LB/PK
12 (RUN)
C217
With Vacuum Valves, it controls vacuum function of system air doors. Switch also controls blower motor operation and along with PCM, A/C clutch operation.
BLEND DOOR POTENTIOMETER
WARM
COLD
PANEL
OFF
PANEL/ FLOOR
MODE SELECTOR SWITCH
NORM A/C
FLOOR DEF/FLOOR
MAX A/C
DEFROST
FUNCTION SELECTOR SWITCH ASSEMBLY
151–9 A8
C220
436 RD/LG
438 RD/WH
C217
348 VT
151–8 D1
C159F
C159M
295 LB/PK
437 YE/LG
348 VT
C170
Controls operation of Blend Door Actuator.
Normally open at or above 445 psi, closed at or below 260 psi.
A/C PRESSURE CUTOFF SWITCH
151–1 F2
12V (RUN)
C229
7
4
3
6
SOLID STATE
M
BLEND DOOR ACTUATOR
151–10 F5
C170
441 RD/YE
C139
Normally open at or below 169 kpa (23±1 psi), closed at or above 293 kpa (43.5 psi). Used to adjust EPC pressure in transmission.
A/C CLUTCH CYCLING PRESSURE SWITCH
151-1 B1
8
0V
C229
57 BK
C139
347 BK/YE
SEE GROUNDS
PAGES
10-2, 10-3
S202
C174
Operates door that blends warm and cool air together.
41
ACCS
POWERTRAIN CONTROL MODULE (PCM)
PAGES 24-3, 25-3
57 BK
G200