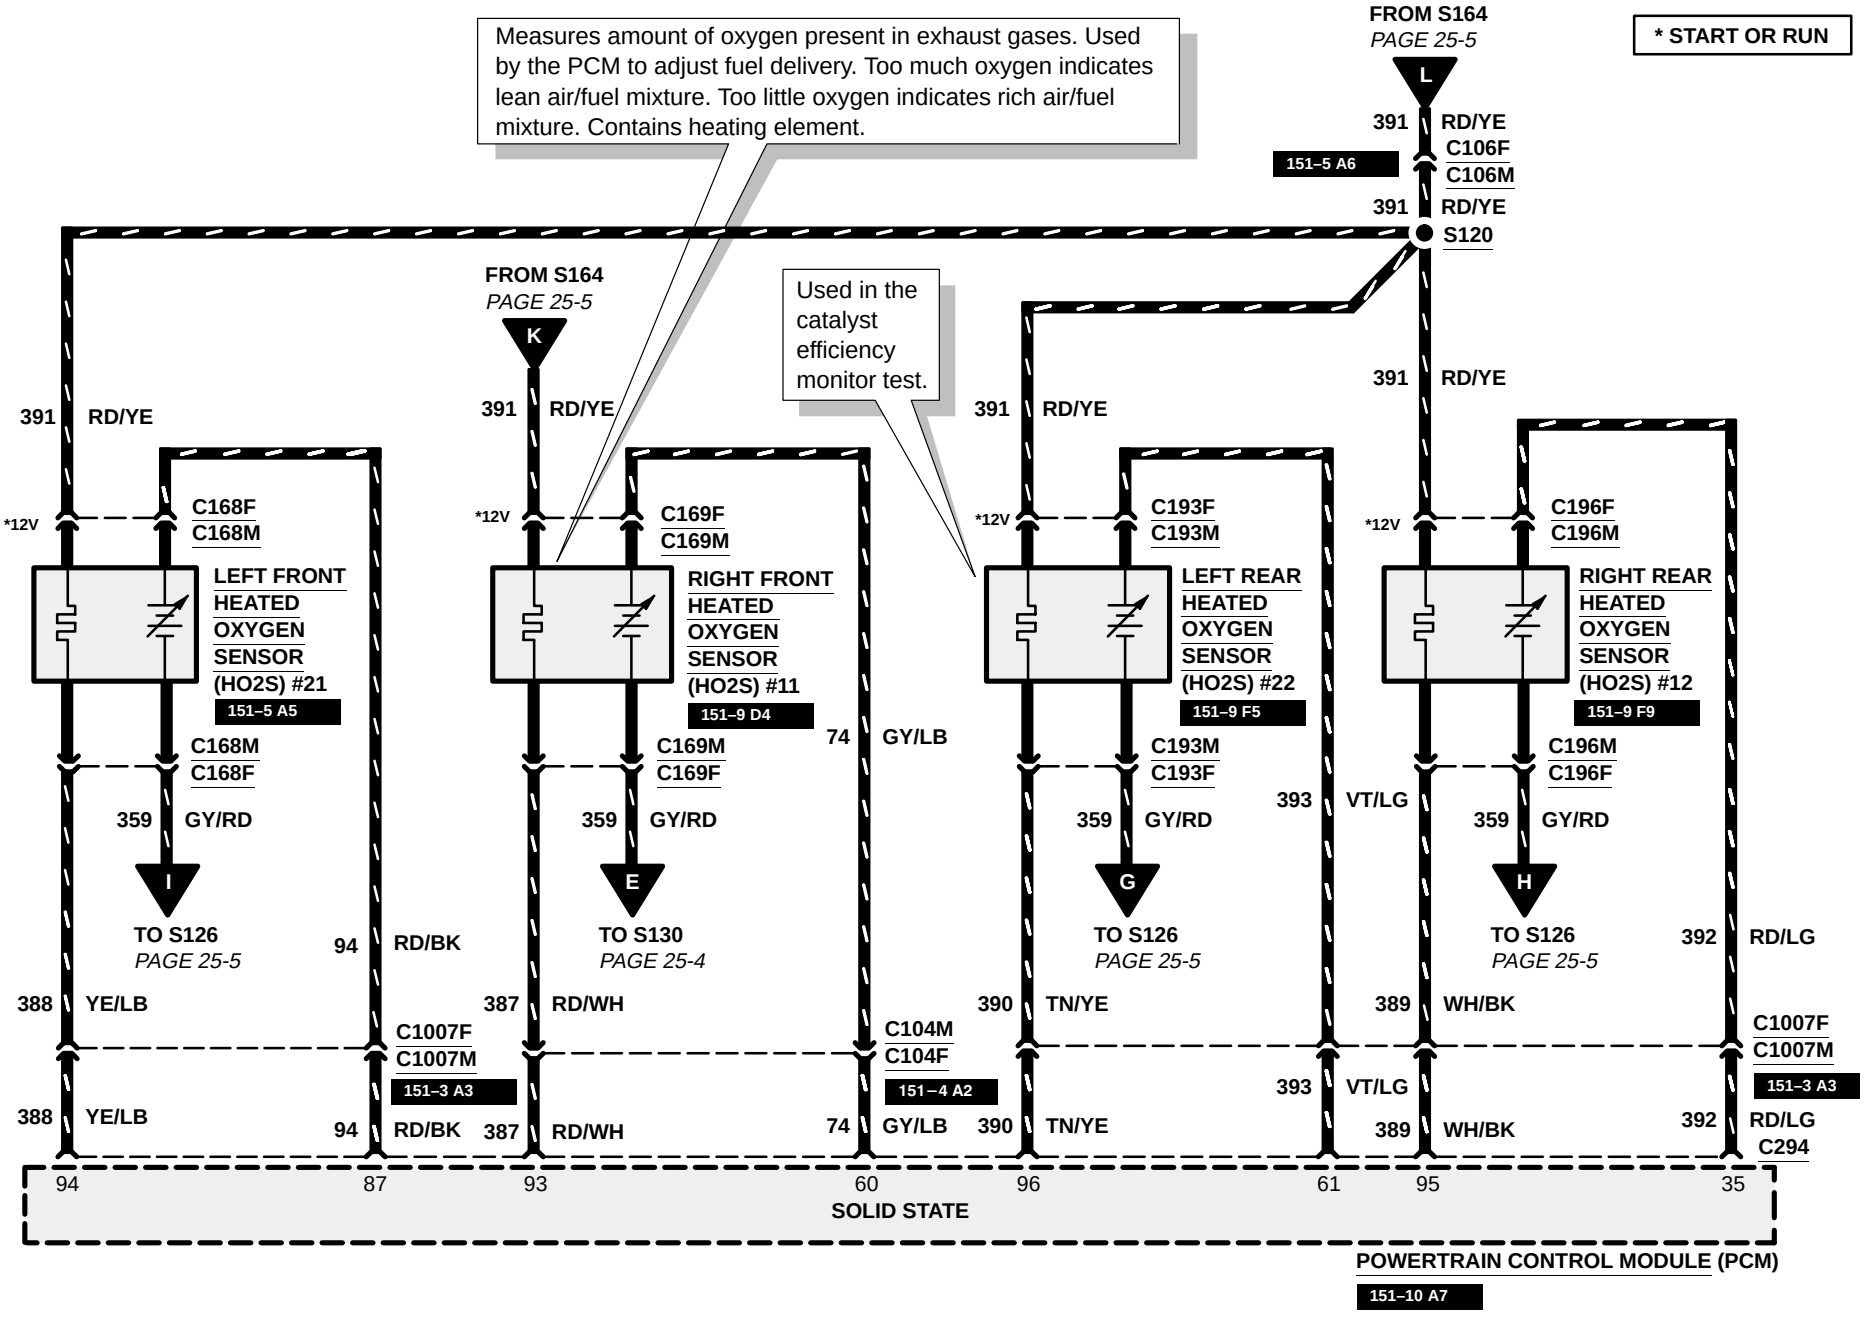
Measures amount of oxygen present in exhaust gases. Used by the PCM to adjust fuel delivery. Too much oxygen indicates lean air/fuel mixture. Too little oxygen indicates rich air/fuel mixture. Contains heating element.
Used in the catalyst efficiency monitor test.
* START OR RUN
FROM S164
PAGE 25-5
L
391 RD/YE
151–5 A6
C106F
C106M
391 RD/YE
S120
FROM S164
PAGE 25-5
K
391 RD/YE
391 RD/YE
391 RD/YE
391 RD/YE
*12V
C168F
C168M
LEFT FRONT HEATED OXYGEN SENSOR (HO2S) #21
151–5 A5
C168M
C168F
359 GY/RD
I
TO S126
PAGE 25-5
94 RD/BK
388 YE/LB
C1007F
C1007M
151–3 A3
388 YE/LB
94 RD/BK
*12V
C169F
C169M
RIGHT FRONT HEATED OXYGEN SENSOR (HO2S) #11
151–9 D4
C169M
C169F
359 GY/RD
E
TO S130
PAGE 25-4
74 GY/LB
387 RD/WH
C104M
C104F
151–4 A2
387 RD/WH
74 GY/LB
*12V
C193F
C193M
LEFT REAR HEATED OXYGEN SENSOR (HO2S) #22
151–9 F5
C193M
C193F
359 GY/RD
G
TO S126
PAGE 25-5
393 VT/LG
390 TN/YE
393 VT/LG
390 TN/YE
*12V
C196F
C196M
RIGHT REAR HEATED OXYGEN SENSOR (HO2S) #12
151–9 F9
C196M
C196F
359 GY/RD
H
TO S126
PAGE 25-5
392 RD/LG
389 WH/BK
C1007F
C1007M
151–3 A3
389 WH/BK
392 RD/LG
C294
94
87
93
60
96
61
95
35
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
151–10 A7