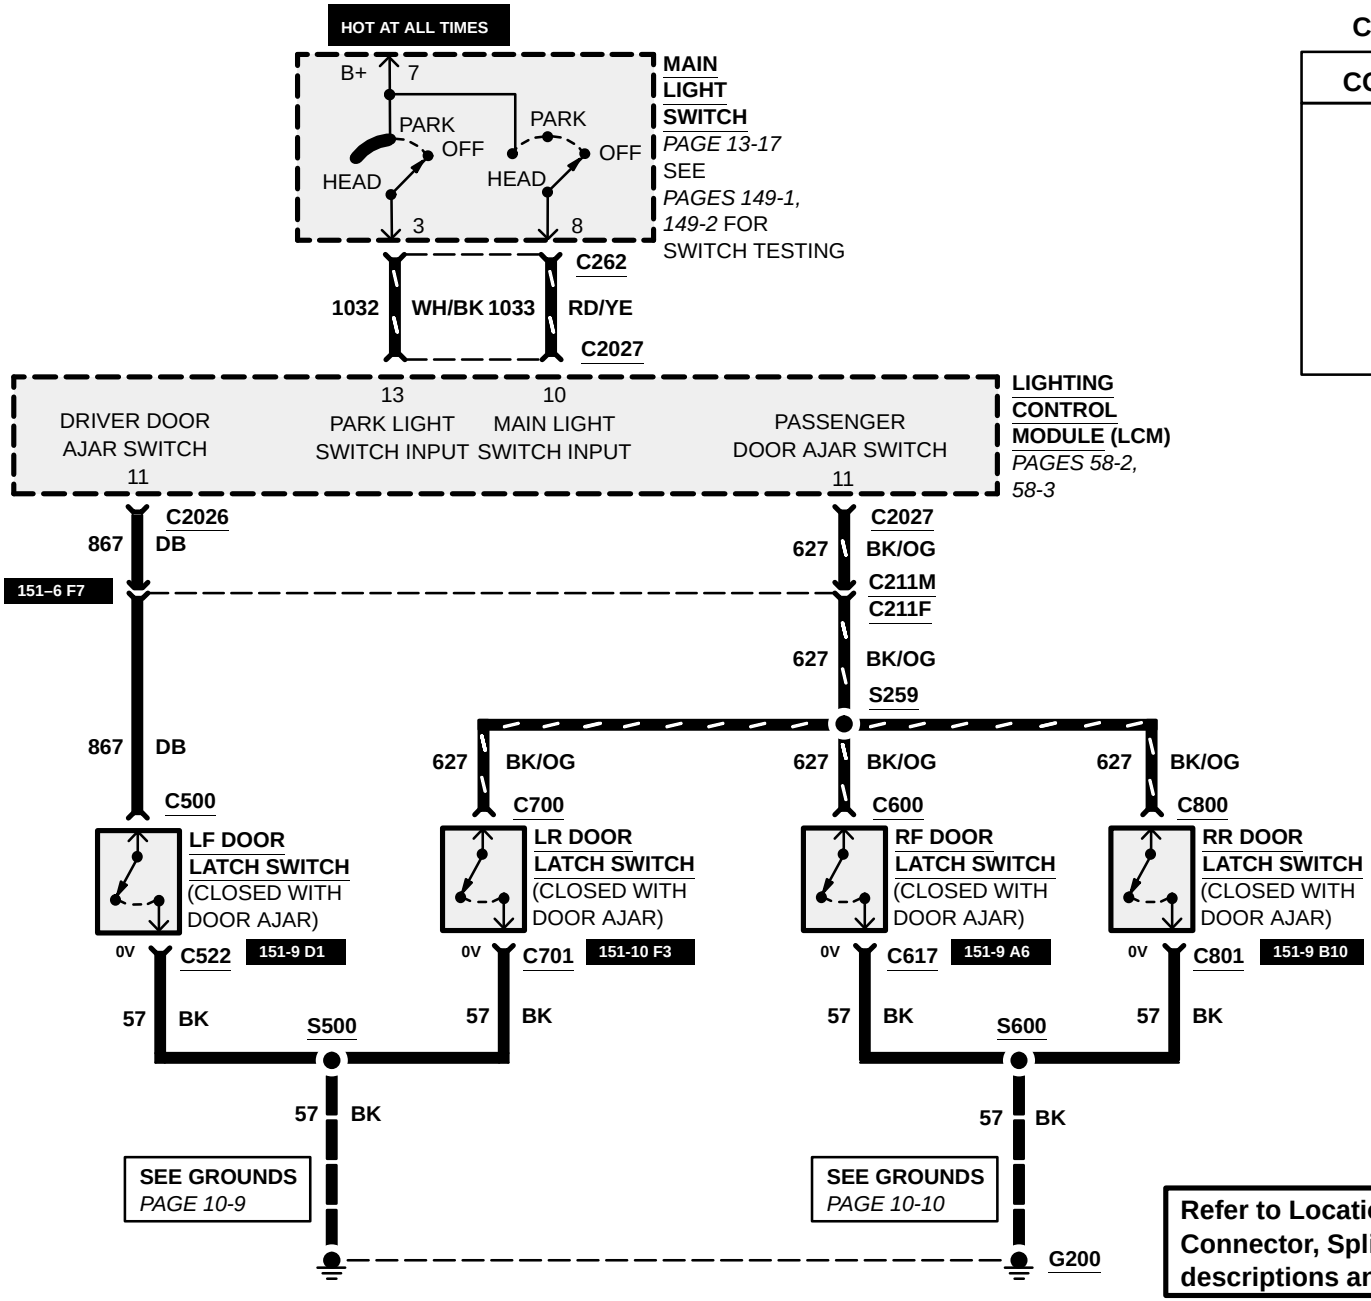

CONNECTOR REFERENCE LIST

CONNECTOR	SECTION-PAGE
C251	60-8
C255	63-5
C256	63-5
C262	13-18
C2026	58-4
C2027	58-4
C2029	58-5

Refer to Location Index, Cell 152, for Component, Connector, Splice, Ground and Base Part Number descriptions and locations.