
The first digit of every connector, ground, and splice number used in this publication references its location within the vehicle.

The chart below describes the different sections of the vehicle, and lists the number associated with each.

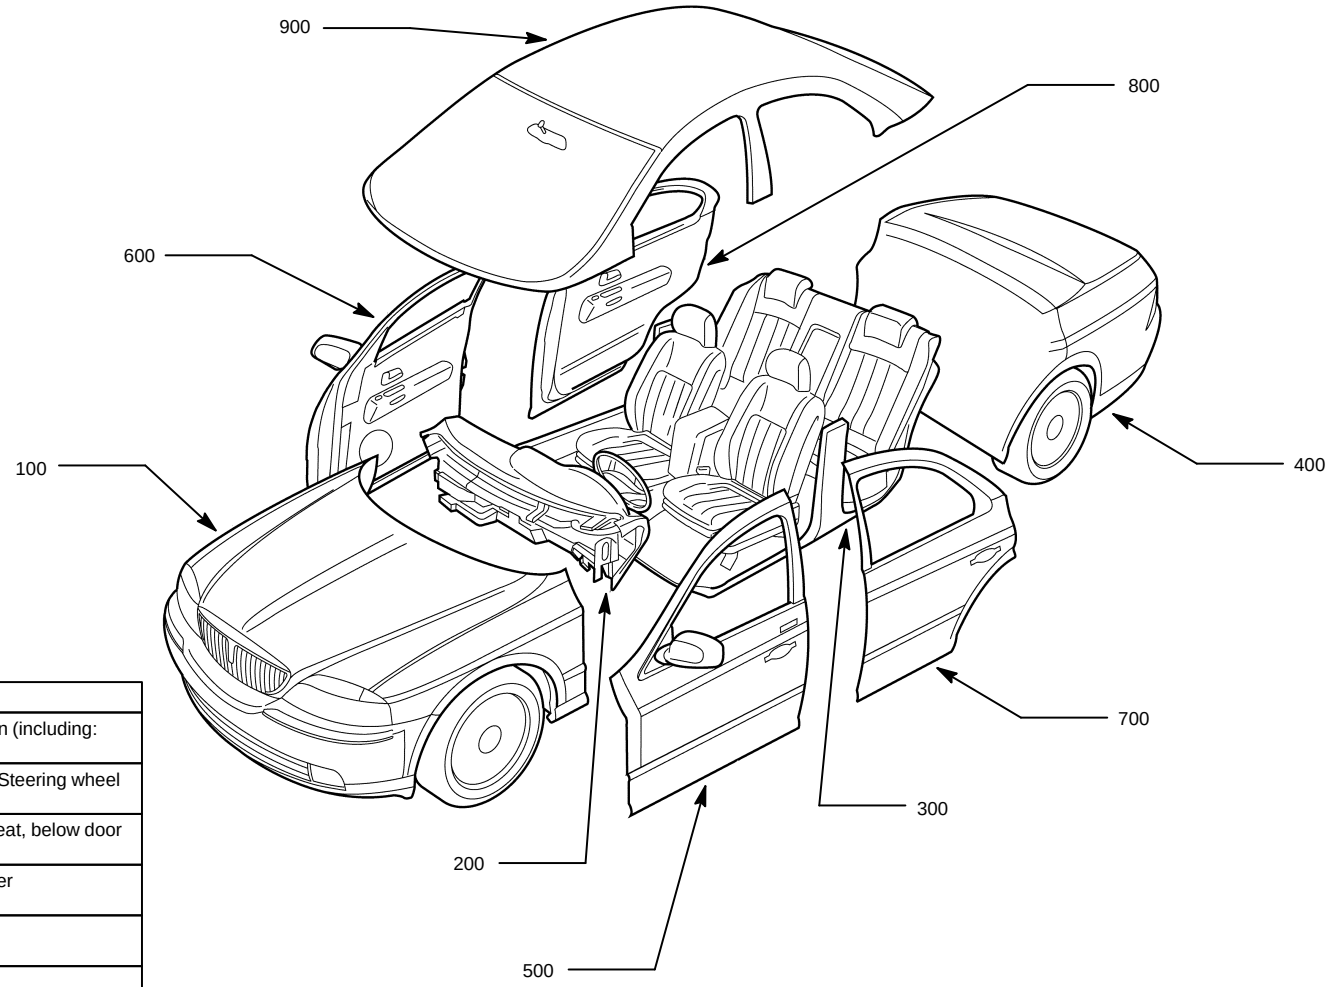

Number	Location
100	Engine compartment, Powertrain (including: axle/differential/transmission)
200	Instrument Panel and Console, Steering wheel assembly
300	From instrument panel to rear seat, below door trim panel
400	behind rear seats, to rear bumper
500	driver door
600	passenger door, front
700	passenger door, left rear
800	passenger door, right rear
900	Above door trim panel and headliner