C236 (WH)

14B188

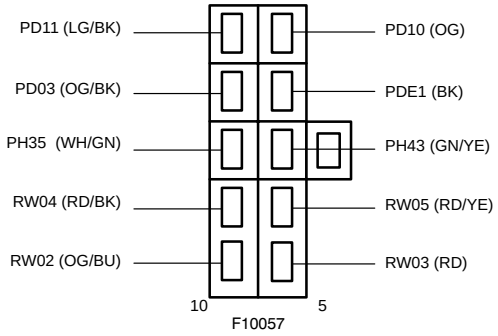

14N104

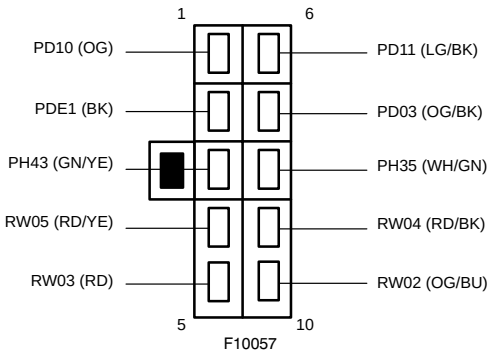

C237 (BK)

14N104

A144
CD changer

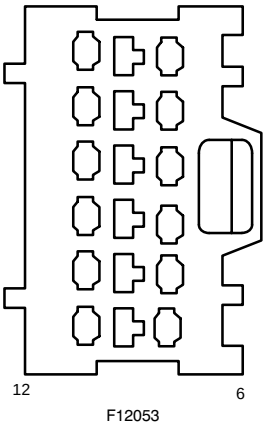

Pin	Circuit	Circuit Function
1	RB27 (RD)	Radio to CD changer
2	RB19 (BK)	Radio to CD changer
3	–	not used
4	RBE6 (BK)	Ground
5	–	not used
6	RB63 (LG)	Radio to CD changer
	RB24 (LG)	Radio to CD changer
7	RB25 (GN)	Radio to CD changer
8	RB20 (WH)	Radio to CD changer
9	RB95	Shield
10	RB61 (BN/WH)	Voltage supplied at all times (overload protected)
	RB50 (BN/WH)	Voltage supplied at all times (overload protected)
11	RB64 (YE/RD)	Radio to CD changer
	RB03 (YE/RD)	Radio to CD changer
12	RB62 (VT)	Radio to CD changer
	RB23 (VT)	Radio to CD changer

C240 (WH)

14N103

N114
Fog lamp switch

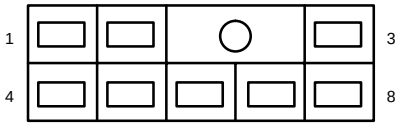

Pin	Circuit	Circuit Function
1	IJ79 (PK/BK)	Illumination, Ground
2	LGE1 (BK)	Ground
3	–	not used
4	LG05 (GN/OG)	Fog lamp relay, control
5	LG06 (OG/BK)	Fog lamp relay, switched power
6	IJ10 (PK)	Tail lamp relay, switched output
7	–	not used
8	–	not used

C242 (WH)

14N104

O23
Circuit breaker 1



Pin	Circuit	Circuit Function
1	PD50 (WH/BU)	Voltage supplied at all times (overload protected)
2	PD01 (LG)	Voltage supplied at all times (overload protected)