## C504a

### 14A005

N447
Master window adjust switch (14529)

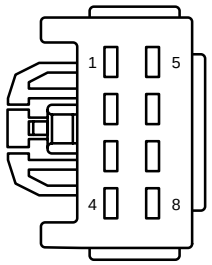


F08167

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | – | not used |
| 2 | 57 (BK) | Ground |
| 3 | 313 (WH/YE) | Window switch, feed, right front, Up |
| 4 | 314 (TN/LB) | Window switch, feed, right front, Down |
| 5 | – | not used |
| 6 | 400 (LB/BK) | Accessory relay, switched power, output |
| 7 | 991 (TN/LB) | Master window adjust switch (14529), feed, Down |
| 8 | 992 (WH/BK) | Master window adjust switch (14529), feed, Up |

## C504b

### 14A005

N447
Master window adjust switch (14529)

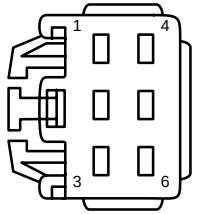


F06213

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | – | not used |
| 2 | 319 (YE/BK) | Window switch, feed, left rear, Down |
| 3 | 320 (RD/BK) | Window switch, feed, right rear, Down |
| 4 | 193 (YE/LG) | Window safety relay, switched output |
| 5 | 316 (YE/LB) | Window switch, feed, left rear, Up |
| 6 | 317 (GY/OG) | Window switch, feed, left rear, Down |