C438

12A522

B120
Transmission range sensor

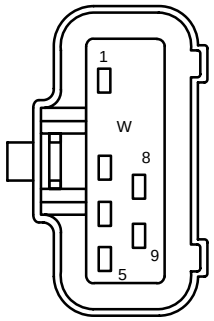

F06021

Pin	Circuit	Circuit function
1	15-LG28 (GN/WH)	Voltage, ignition switch in Start or Run (not overload protected)
3	15S-LG9 (GN/BK)	Voltage, ignition switch in Start or Run (not overload protected), Switched
4	31S-BB12 (BK/YE)	Ground, Switched
5	9-TA9 (BN/GN)	Sensor signal return (reference/ground)
8	31S-TA9 (BK/GN)	Ground, Switched
9	8-TA9 (WH/GN)	Sensor signal

C440

14K024

A35
Instrument interface module

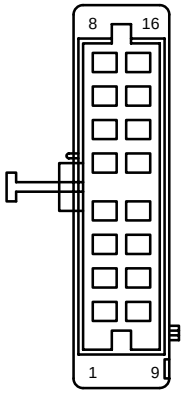

F16008

Pin	Circuit	Circuit function
1	–	not used
2	–	not used
3	–	not used
4	–	not used
5	8-GH11 (WH/GN)	Sensor signal
6	–	not used
7	15S-GG15 (GN/BK)	Voltage, ignition switch in Start or Run (not overload protected), Switched
8	31S-TA33 (BK/WH)	Ground, Switched
9	29S-GG20 (OG/BU)	Voltage supplied at all times (overload protected), Switched
10	–	not used
11	15-GG15 (GN/BK)	Voltage, ignition switch in Start or Run (not overload protected)
12	8-PG11 (WH/BK)	Sensor signal
13	31S-PG11 (BK/RD)	Ground, Switched
14	–	not used
15	91-GG15 (BK/GN)	Ground
16	–	not used