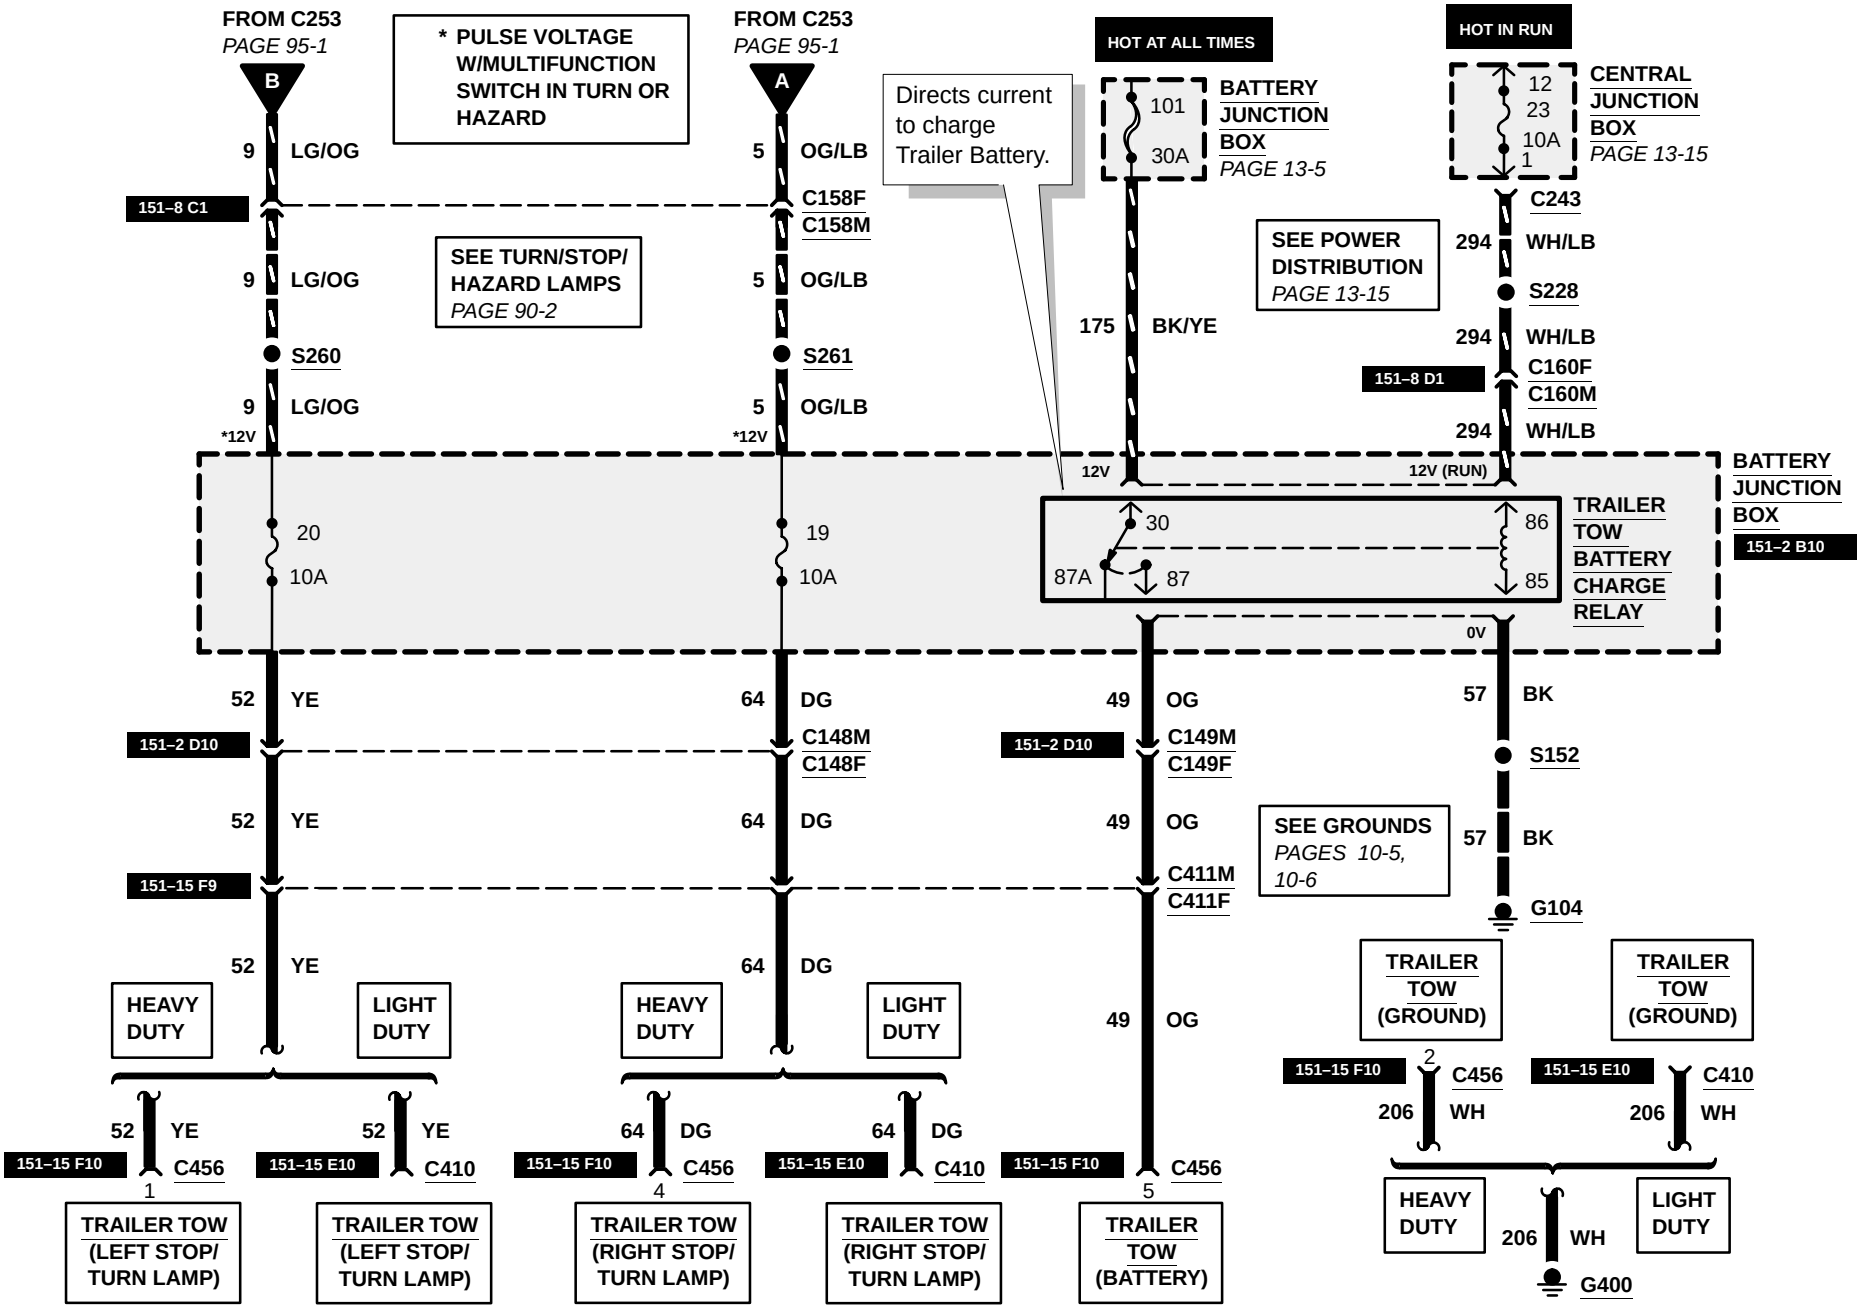
FROM C253
PAGE 95-1
B
* PULSE VOLTAGE W/MULTIFUNCTION SWITCH IN TURN OR HAZARD
FROM C253
PAGE 95-1
A
HOT AT ALL TIMES
HOT IN RUN
Directs current to charge Trailer Battery.
BATTERY JUNCTION BOX
PAGE 13-5
CENTRAL JUNCTION BOX
PAGE 13-15
9 LG/OG
151–8 C1
C158F
C158M
5 OG/LB
SEE TURN/STOP/ HAZARD LAMPS
PAGE 90-2
SEE POWER DISTRIBUTION
PAGE 13-15
C243
294 WH/LB
S228
175 BK/YE
S260
S261
151–8 D1
C160F
C160M
*12V
12V
12V (RUN)
BATTERY JUNCTION BOX
151–2 B10
20
10A
19
10A
30
86
87A
87
85
TRAILER TOW BATTERY CHARGE RELAY
0V
52 YE
64 DG
49 OG
57 BK
151–2 D10
C148M
C148F
C149M
C149F
S152
151–15 F9
C411M
C411F
SEE GROUNDS
PAGES 10-5, 10-6
G104
HEAVY DUTY
LIGHT DUTY
TRAILER TOW (GROUND)
151–15 F10
151–15 E10
C456
C410
206 WH
1
4
5
2
TRAILER TOW (LEFT STOP/ TURN LAMP)
TRAILER TOW (RIGHT STOP/ TURN LAMP)
TRAILER TOW (BATTERY)
G400