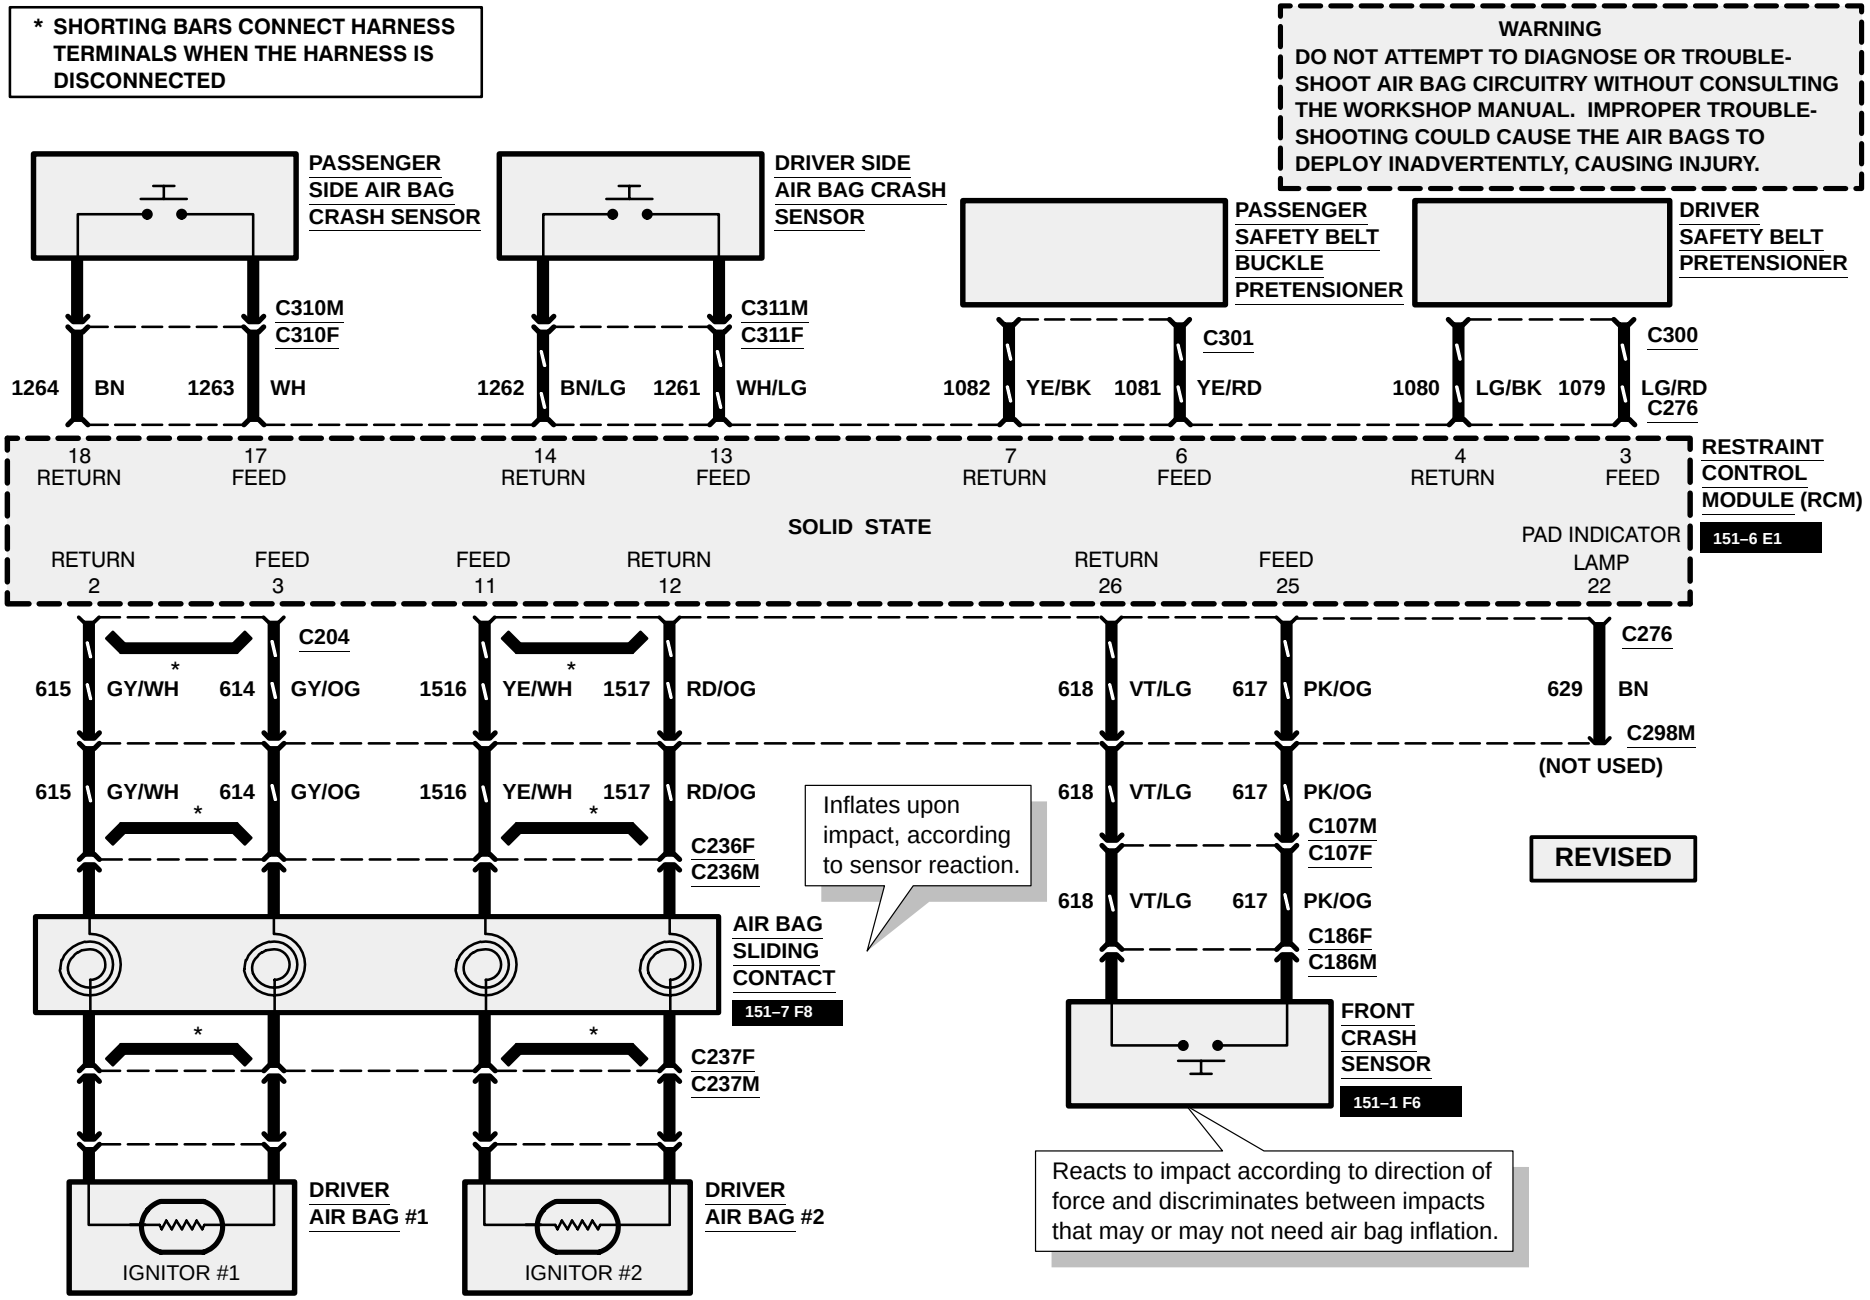
* SHORTING BARS CONNECT HARNESS TERMINALS WHEN THE HARNESS IS DISCONNECTED
WARNING
DO NOT ATTEMPT TO DIAGNOSE OR TROUBLE-SHOOT AIR BAG CIRCUITRY WITHOUT CONSULTING THE WORKSHOP MANUAL. IMPROPER TROUBLE-SHOOTING COULD CAUSE THE AIR BAGS TO DEPLOY INADVERTENTLY, CAUSING INJURY.
PASSENGER SIDE AIR BAG CRASH SENSOR
DRIVER SIDE AIR BAG CRASH SENSOR
PASSENGER SAFETY BELT BUCKLE PRETENSIONER
DRIVER SAFETY BELT PRETENSIONER
C310M
C310F
C311M
C311F
C301
C300
C276
1264 BN 1263 WH
1262 BN/LG 1261 WH/LG
1082 YE/BK 1081 YE/RD
1080 LG/BK 1079 LG/RD
18 RETURN
17 FEED
14 RETURN
13 FEED
7 RETURN
6 FEED
4 RETURN
3 FEED
RESTRAINT CONTROL MODULE (RCM)
151–6 E1
SOLID STATE
PAD INDICATOR LAMP
RETURN 2
FEED 3
FEED 11
RETURN 12
RETURN 26
FEED 25
22
C204
615 GY/WH * 614 GY/OG
1516 YE/WH * 1517 RD/OG
618 VT/LG 617 PK/OG
629 BN
C298M
(NOT USED)
C236F
C236M
C107M
C107F
C186F
C186M
REVISED
Inflates upon impact, according to sensor reaction.
AIR BAG SLIDING CONTACT
151–7 F8
C237F
C237M
FRONT CRASH SENSOR
151–1 F6
DRIVER AIR BAG #1
DRIVER AIR BAG #2
IGNITOR #1
IGNITOR #2
Reacts to impact according to direction of force and discriminates between impacts that may or may not need air bag inflation.