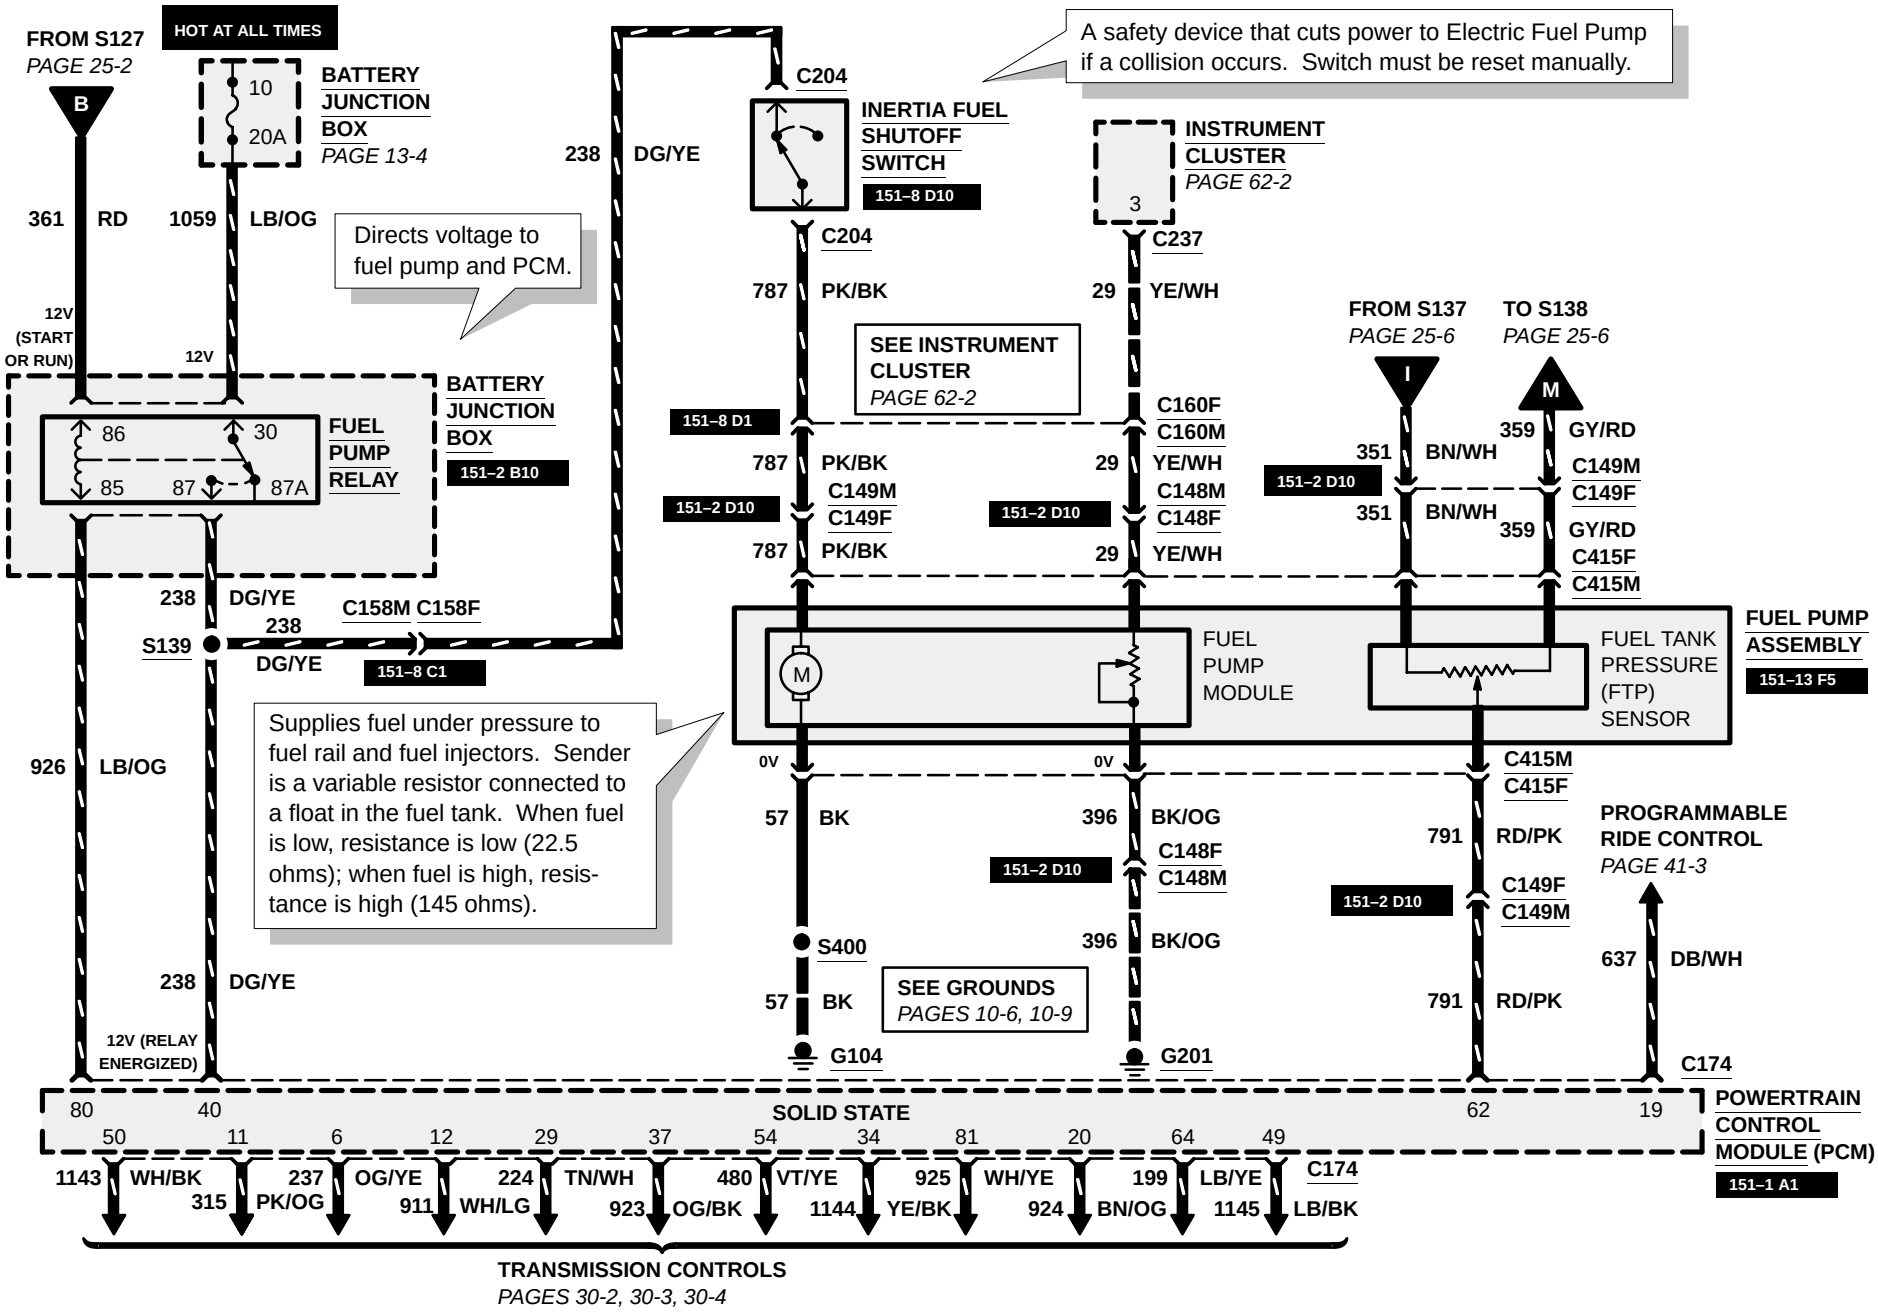
FROM S127
PAGE 25-2
HOT AT ALL TIMES
B
10
20A
BATTERY JUNCTION BOX
PAGE 13-4
361 RD
1059 LB/OG
238 DG/YE
C204
INERTIA FUEL SHUTOFF SWITCH
151–8 D10
A safety device that cuts power to Electric Fuel Pump if a collision occurs. Switch must be reset manually.
INSTRUMENT CLUSTER
PAGE 62-2
3
C237
Directs voltage to fuel pump and PCM.
12V (START OR RUN)
12V
787 PK/BK
29 YE/WH
SEE INSTRUMENT CLUSTER
PAGE 62-2
FROM S137
PAGE 25-6
TO S138
PAGE 25-6
I
M
86
30
85
87
87A
FUEL PUMP RELAY
BATTERY JUNCTION BOX
151–2 B10
151–8 D1
C160F
C160M
351 BN/WH
359 GY/RD
C149M
C149F
151–2 D10
C148M
C148F
C415F
C415M
238 DG/YE
C158M C158F
S139
151–8 C1
FUEL PUMP MODULE
FUEL TANK PRESSURE (FTP) SENSOR
FUEL PUMP ASSEMBLY
151–13 F5
Supplies fuel under pressure to fuel rail and fuel injectors. Sender is a variable resistor connected to a float in the fuel tank. When fuel is low, resistance is low (22.5 ohms); when fuel is high, resistance is high (145 ohms).
926 LB/OG
0V
57 BK
396 BK/OG
791 RD/PK
PROGRAMMABLE RIDE CONTROL
PAGE 41-3
637 DB/WH
S400
SEE GROUNDS
PAGES 10-6, 10-9
G104
G201
C174
12V (RELAY ENERGIZED)
80
40
SOLID STATE
62
19
50
11
6
12
29
37
54
34
81
20
64
49
1143 WH/BK
315 PK/OG
237 OG/YE
911 WH/LG
224 TN/WH
923 OG/BK
480 VT/YE
1144 YE/BK
925 WH/YE
924 BN/OG
199 LB/YE
1145 LB/BK
C174
LB/BK
POWERTRAIN CONTROL MODULE (PCM)
151–1 A1
TRANSMISSION CONTROLS
PAGES 30-2, 30-3, 30-4