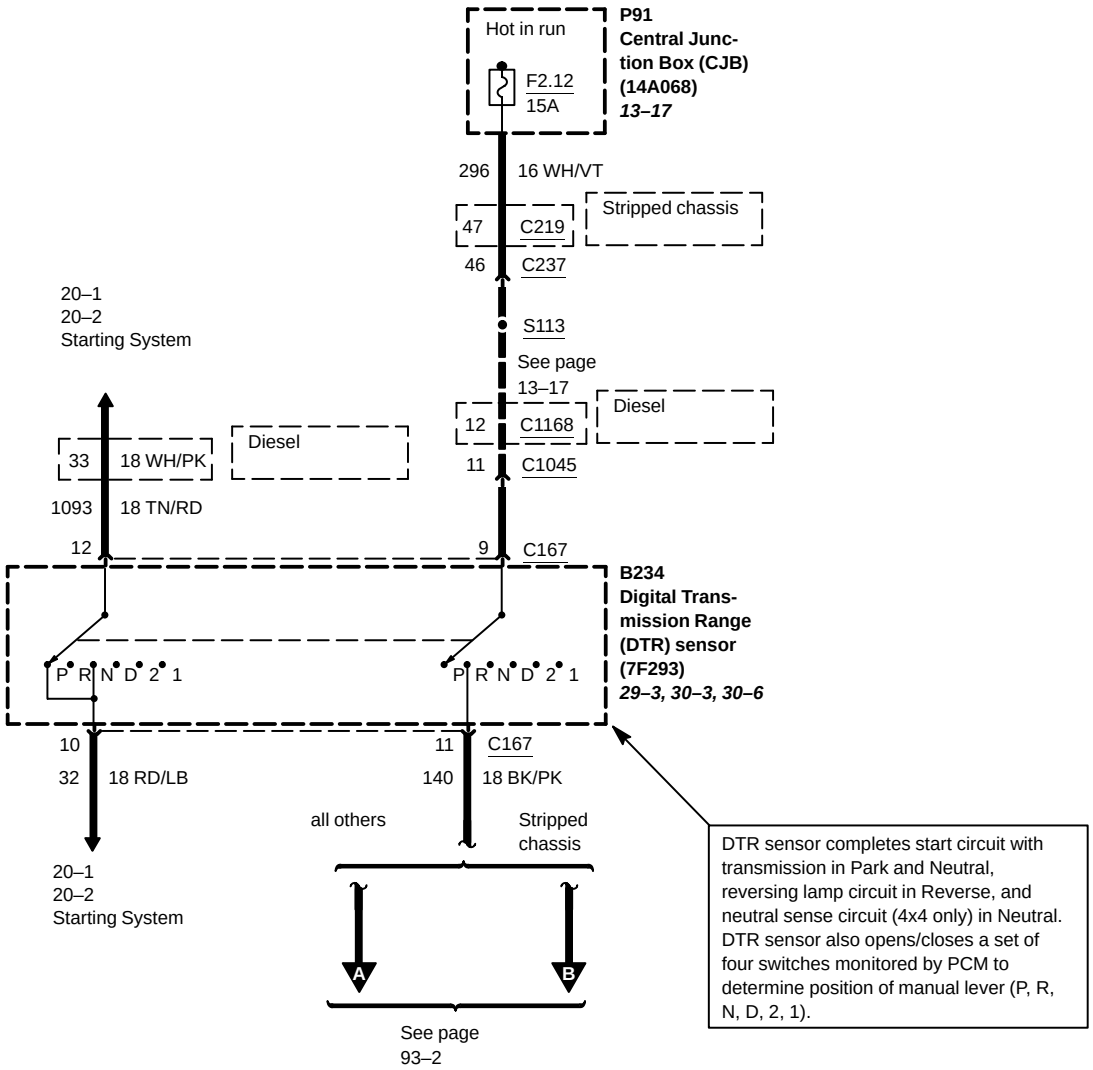
Hot in run
F2.12
15A
P91
Central Junction Box (CJB)
(14A068)
13–17
296
16 WH/VT
Stripped chassis
47
C219
46
C237
20–1
20–2
Starting System
S113
See page
13–17
Diesel
12
C1168
11
C1045
33
18 WH/PK
Diesel
1093
18 TN/RD
12
9
C167
B234
Digital Transmission Range
(DTR) sensor
(7F293)
29–3, 30–3, 30–6
P R N D 2 1
P R N D 2 1
10
32
18 RD/LB
11
C167
140
18 BK/PK
all others
Stripped chassis
20–1
20–2
Starting System
A
B
See page
93–2
DTR sensor completes start circuit with transmission in Park and Neutral, reversing lamp circuit in Reverse, and neutral sense circuit (4x4 only) in Neutral. DTR sensor also opens/closes a set of four switches monitored by PCM to determine position of manual lever (P, R, N, D, 2, 1).