*** SHORTING BARS CONNECT HARNESS TERMINALS WHEN THE HARNESS IS DISCONNECTED**

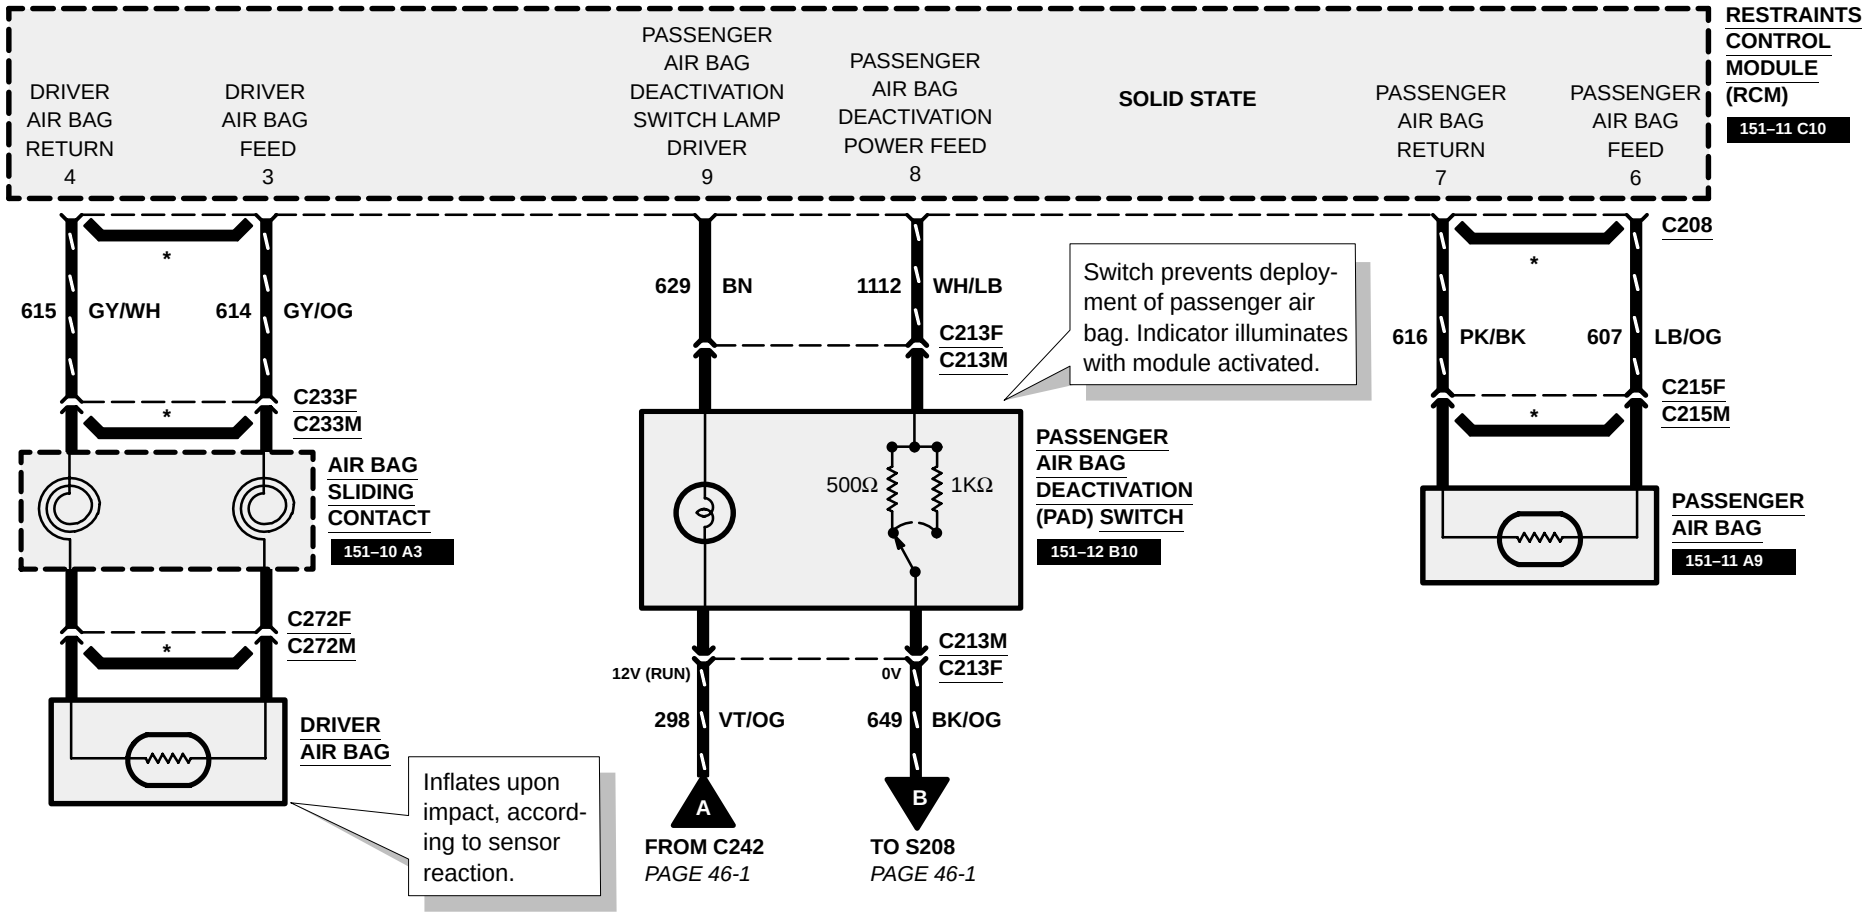

Refer to Location Index, Cell 152, for Component, Connector, Splice, Ground and Base Part Number descriptions and locations.