-75

C715

14B723

F07056

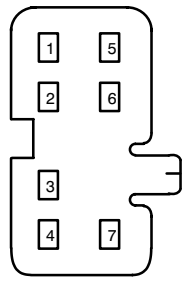

N216
Seat adjust switch,
driver side front

Pin	Circuit	Circuit Function
1	33-AH10	Switched between: Battery voltage, Ground or Open
2	29-AH6 (OG/YE)	Voltage supplied at all times (overload protected)
3	31-AH6A (BK)	Ground
4	–	not used
5	–	not used
6	31-AH6 (BK)	Ground
7	32-AH10 (WH/BK)	Switched between: Battery voltage, Ground or Open