C104

9H589

A149
Inlet manifold runner control (IMRC) module

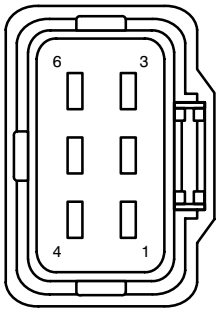

F06110

Pin	Circuit	Circuit Function
1	91S-RL20 (BK/RD)	Ground, switched
2	15-RS3 (GN/WH)	Voltage, ignition switch in Start or Run (not overload protected)
3	91-RS3 (BK/WH)	Ground
4	–	not used
5	91S-RJ16 (BK/BU)	Ground, switched
6	9-RS3 (BN/WH)	Sensor signal return (reference/ground)

C109

19K315

N317
Safety belt buckle switch

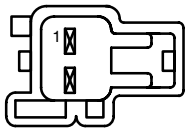

F02034

Pin	Circuit	Circuit Function
1	31-GE52 (BK)	Ground
2	31S-GE52 (BK/RD)	Ground, switched

C120

12A522

F12004

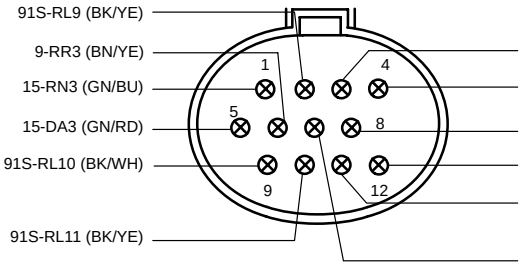

9H589
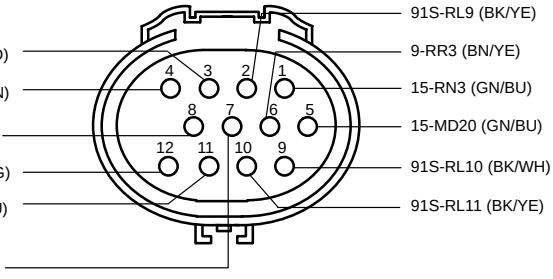
F12001