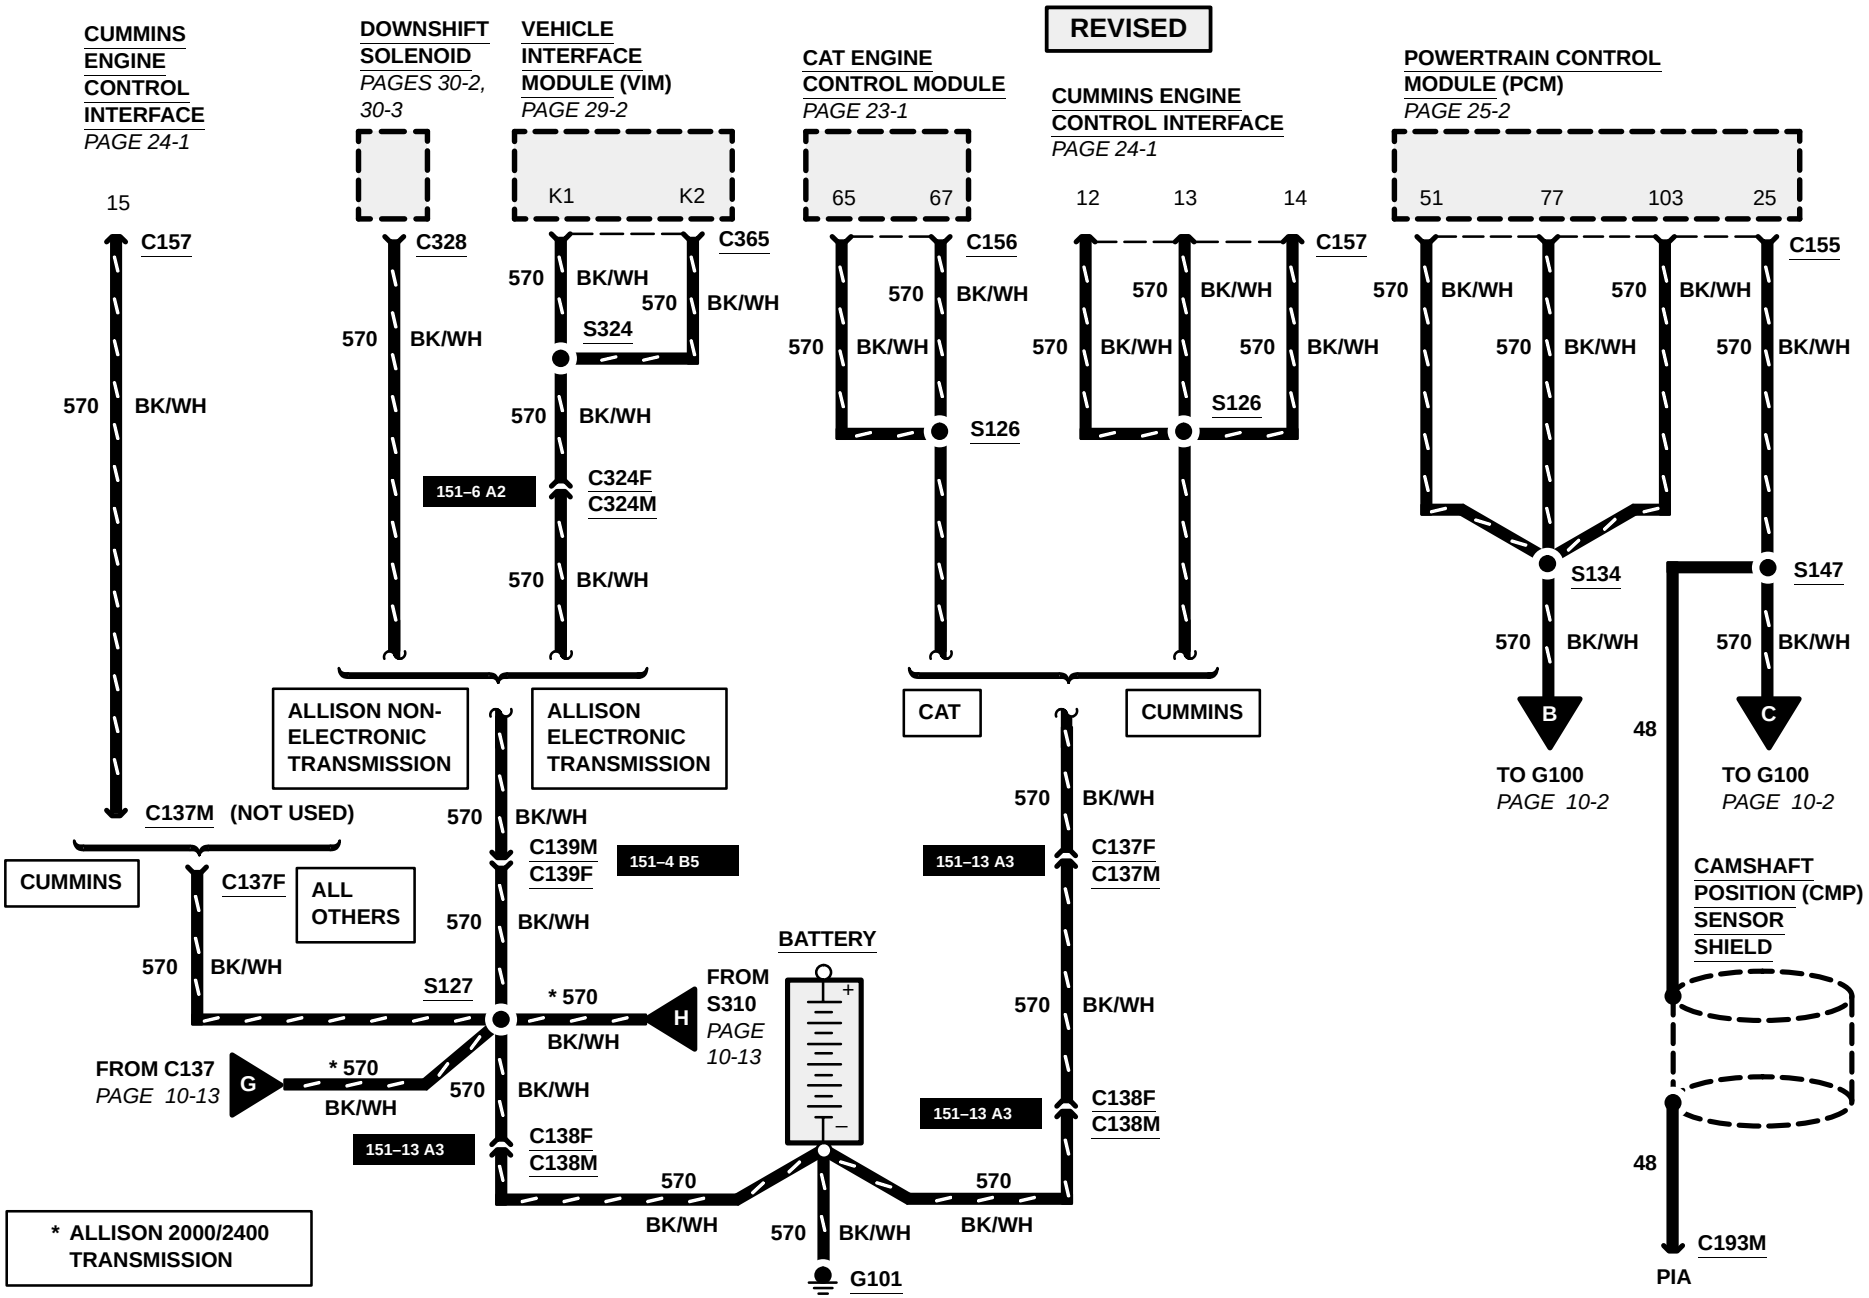
REVISED
CUMMINS ENGINE CONTROL INTERFACE
PAGE 24-1
15
C157
570 BK/WH
C137M (NOT USED)
CUMMINS
C137F
ALL OTHERS
570 BK/WH
DOWNSHIFT SOLENOID
PAGES 30-2, 30-3
C328
570 BK/WH
VEHICLE INTERFACE MODULE (VIM)
PAGE 29-2
K1
K2
C365
570 BK/WH
570 BK/WH
S324
570 BK/WH
151–6 A2
C324F
C324M
570 BK/WH
ALLISON NON-ELECTRONIC TRANSMISSION
ALLISON ELECTRONIC TRANSMISSION
570 BK/WH
C139M
C139F
151–4 B5
570 BK/WH
S127
570 BK/WH
* 570 BK/WH
H
FROM S310
PAGE 10-13
FROM C137
PAGE 10-13
G
* 570 BK/WH
570 BK/WH
151–13 A3
C138F
C138M
BATTERY
570 BK/WH
G101
* ALLISON 2000/2400 TRANSMISSION
CAT ENGINE CONTROL MODULE
PAGE 23-1
65
67
C156
570 BK/WH
570 BK/WH
S126
CUMMINS ENGINE CONTROL INTERFACE
PAGE 24-1
12
13
14
C157
570 BK/WH
570 BK/WH
570 BK/WH
S126
CAT
CUMMINS
570 BK/WH
151–13 A3
C137F
C137M
570 BK/WH
151–13 A3
C138F
C138M
570 BK/WH
570 BK/WH
POWERTRAIN CONTROL MODULE (PCM)
PAGE 25-2
51
77
103
25
C155
570 BK/WH
570 BK/WH
570 BK/WH
570 BK/WH
570 BK/WH
S134
S147
570 BK/WH
570 BK/WH
B
C
TO G100
PAGE 10-2
TO G100
PAGE 10-2
48
CAMSHAFT POSITION (CMP) SENSOR SHIELD
48
C193M
PIA