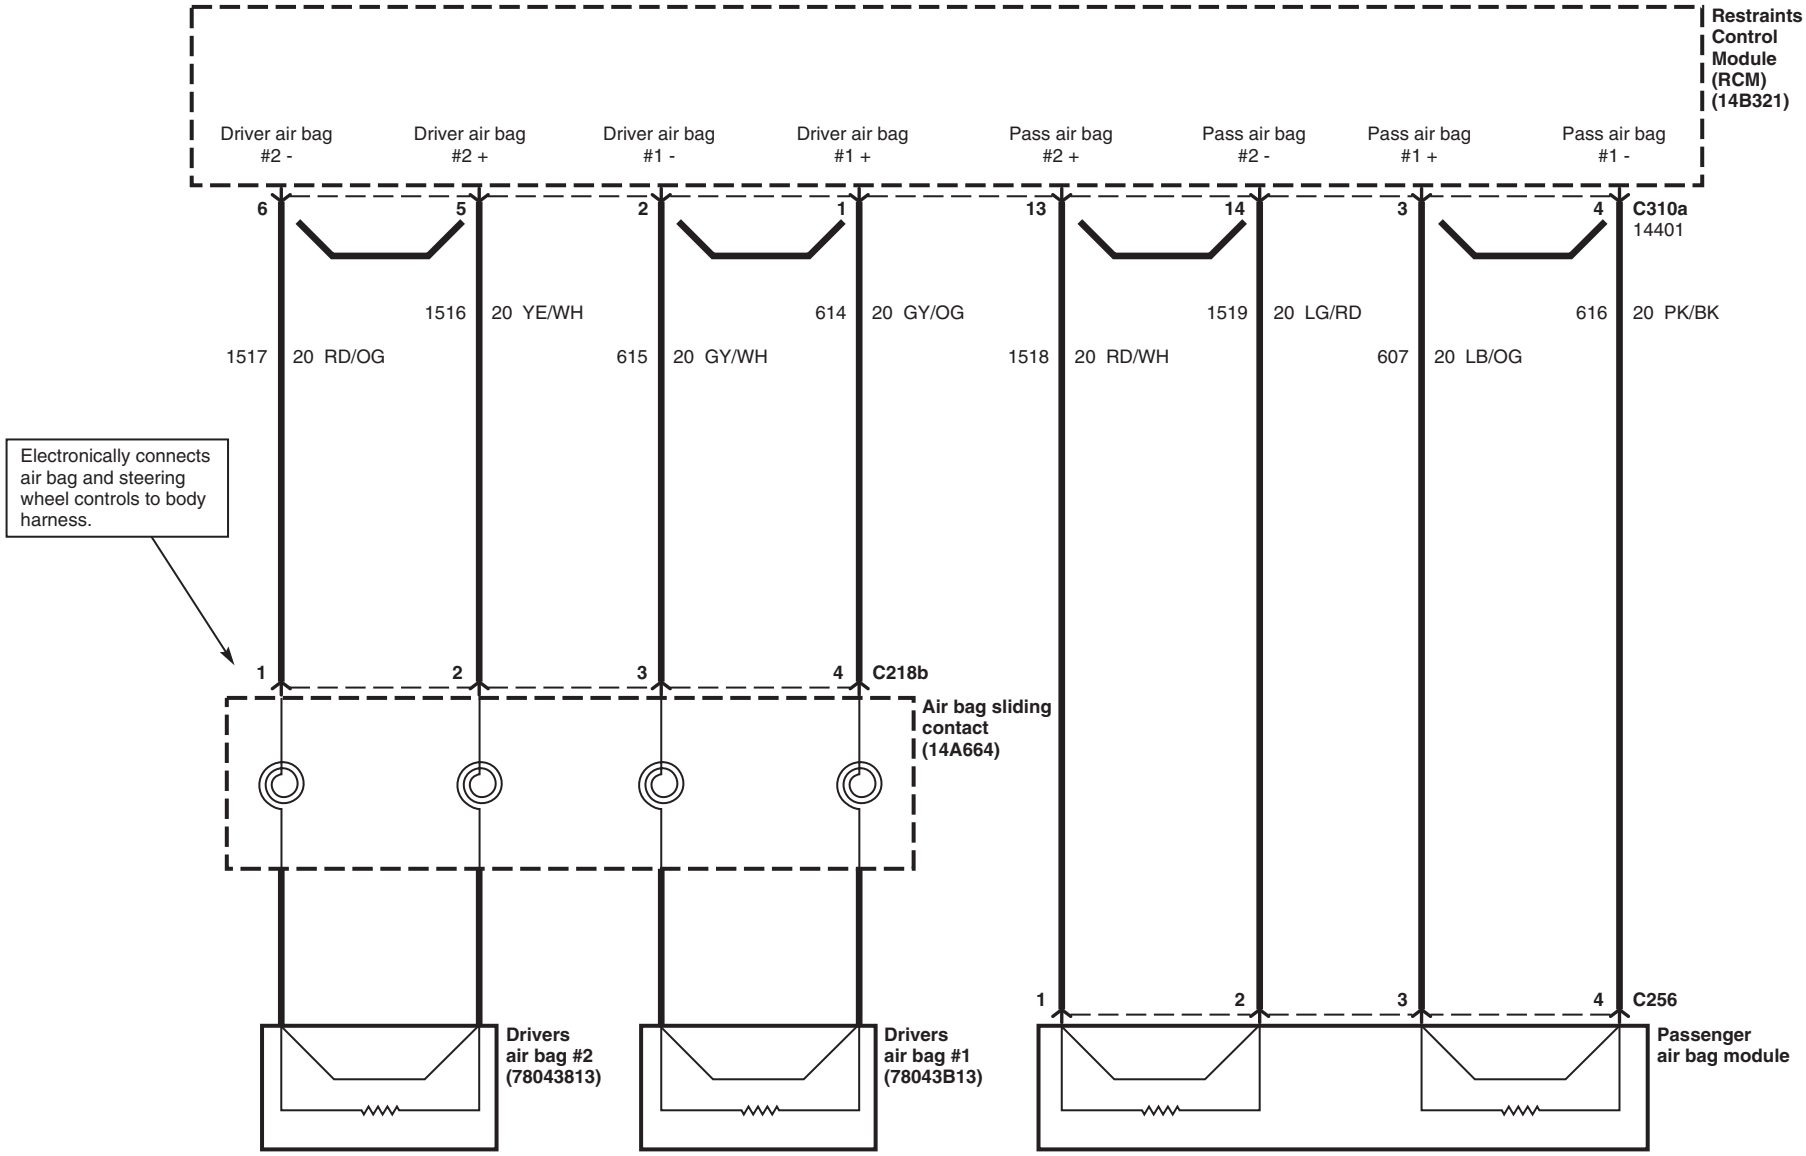
Restraints Control Module (RCM) (14B321)
Driver air bag #2 -
Driver air bag #2 +
Driver air bag #1 -
Driver air bag #1 +
Pass air bag #2 +
Pass air bag #2 -
Pass air bag #1 +
Pass air bag #1 -
6
5
2
1
13
14
3
4
C310a
14401
1516 20 YE/WH
614 20 GY/OG
1519 20 LG/RD
616 20 PK/BK
1517 20 RD/OG
615 20 GY/WH
1518 20 RD/WH
607 20 LB/OG
Electronically connects air bag and steering wheel controls to body harness.
1
2
3
4
C218b
Air bag sliding contact (14A664)
Drivers air bag #2 (78043813)
Drivers air bag #1 (78043B13)
1
2
3
4
C256
Passenger air bag module
Warning
Do not attempt to diagnose or troubleshoot air bag circuitry without consulting the Workshop Manual. Improper troubleshooting could cause the air bags to deploy inadvertently, causing injury.