## C3031b (BK)

### 14A699

Climate controlled seat module, driver side




F04311

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 1906 (VT) | UBP Bus |
| 2 | 294 (WH/LB) | Voltage supplied in Start and Run (overload protected) |
| 3 | 57 (BK) | Ground |
| 4 | 1153 (RD/BK) | Voltage supplied at all times (overload protected) |

## C3032 (BK)

### 14B079

Climate controlled seat switch, driver side

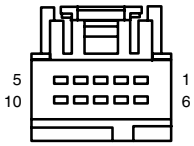


F10135

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 19 (LB/RD) | Illumination, Power |
| 2 | 1551 (VT/WH) | Climate controlled seat switch, heat, switch sense |
| 3 | – | not used |
| 4 | 57 (BK) | Ground |
| 5 | 57 (BK) | Ground |
| 6 | 1974 (LB) | Climate controlled seat switch, cool, indicator, control |
| 7 | 1550 (WH/OG) | Climate controlled seat switch, cool, switch sense |
| 8 | 1973 (RD) | Climate controlled seat switch, heat, indicator, control |
| 9 | 1019 (TN/LB) | Climate controlled seat switch, Temperature, signal – |
| 10 | 1018 (LG/OG) | Climate controlled seat switch, Temperature, signal + |

## C3033 (GY)

### 14A699

Climate controlled seat fan, driver side

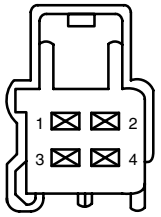


F04105

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 1565 (VT) | Climate controlled seat fan, driver side, signal |
| 2 | 1554 (WH) | Climate controlled seat fan, driver side, signal |
| 3 | 1552 (RD) | Climate controlled seat fan, driver side, motor + |
| 4 | 1553 (BK) | Climate controlled seat fan, driver side, motor – |