C1892

9H589

B8
Throttle Position Sensor (TPS)

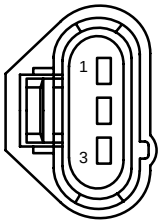

F03071

Pin	Circuit	Circuit Function
1	7-RJ28 (YE)	Voltage D.C. supplied at all times (sensor)
2	8-RJ28 (WH)	Sensor signal
3	9-RJ28 (BN)	Sensor signal return (reference/ground)

C1893

9H589

B41
Camshaft position sensor

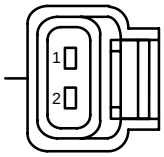

F02026

Pin	Circuit	Circuit Function
1	8-RJ3 (WH/VT)	Sensor signal
2	9-RJ3 (BN/WH)	Sensor signal return (reference/ground)

C1894

9H589

B43
Crankshaft position sensor

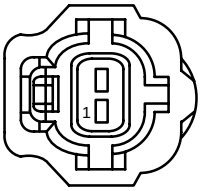

F02027

Pin	Circuit	Circuit Function
1	8-RJ4 (WH/RD)	Sensor signal
2	9-RJ4 (BN/RD)	Sensor signal return (reference/ground)

C1898

9F759

Y131
Evaporative emission (EVAP) canister vent valve

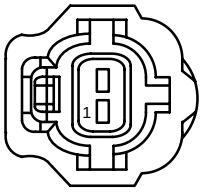

F02027

Pin	Circuit	Circuit Function
1	15-RL3 (GN/RD)	Voltage, ignition switch in Start or Run (not overload protected)
2	91S-RL3 (BK/OG)	Ground, switched

C1899

12A522

B11
Vehicle Speed Sensor (VSS)

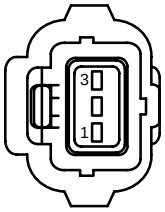

F03093

Pin	Circuit	Circuit Function
1	91-RJ29 (BK/OG)	Ground
2	8-RJ29 (WH/BU)	Sensor signal
3	15-RJ29 (GN/RD)	Voltage, ignition switch in Start or Run (not overload protected)

C1900

9H589

Y130
Camshaft timing actuator

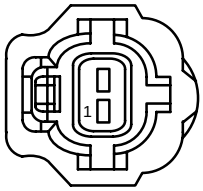

F02027

Pin	Circuit	Circuit Function
1	91S-RL27 (BK/RD)	Ground, switched
2	15-RL27 (GN/OG)	Voltage, ignition switch in Start or Run (not overload protected)