C523

19A044/14631

Y28
Speaker, left front
(18808)

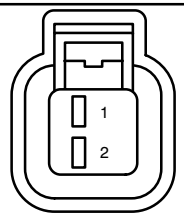

F02069

Pin	Circuit	Circuit function
1	804 (OG/LG)	Speaker, left front (18808) +
2	813 (LB/WH)	Speaker, left front (18808) –

C524

14631

M80
Power window motor, driver side front
(23395)



F02073

Pin	Circuit	Circuit function
1	992 (WH/BK)	Master window adjust switch (14529), feed, Up
2	903 (RD)	Window motor, feed, Down

C525

14631

M241
Door lock actuator, left front

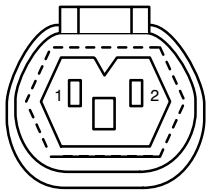

F02227

Pin	Circuit	Circuit function
1	163 (RD/OG)	Door unlock, output
2	117 (PK/BK)	Door lock, output

C526

19A044/14631

N84
Door ajar switch, left front

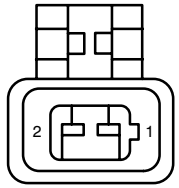

F02117

Pin	Circuit	Circuit function
1	765 (YE/BK)	Door ajar switch, left front
2	57 (BK)	Ground

C527

14631

N409
Exterior rear view mirror switch
(17B676)

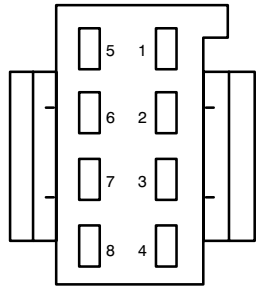

F08056

Pin	Circuit	Circuit function
1	956 (OG/LG)	Voltage supplied at all times (overload protected)
2	–	not used
3	543 (DG)	Right/Left mirror movement
4	540 (RD)	Right/Left mirror movement
5	57 (BK)	Ground
6	945 (YE/BK)	Mirror motor, feed
7	541 (DB)	Up/Down mirror movement
8	544 (VT)	Up/Down mirror movement