C4086

18W862

K330
Luggage compartment lid release relay

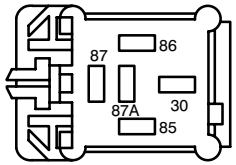

F05062

Pin	Circuit	Circuit Function
30	84 (VT/YE)	Luggage compartment lid release relay, switched power
86	554 (YE/BK)	Voltage supplied at all times (overload protected)
85	202 (OG/LG)	Luggage compartment lid release relay, control
87	554 (YE/BK)	Voltage supplied at all times (overload protected)
87A	–	not used

C4087

18W862

N353
Air suspension disable switch

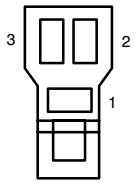

F04313

Pin	Circuit	Circuit Function
1	426 (RD/BK)	Reference voltage
2	–	not used
3	425 (BN/PK)	Air suspension disable switch, switched power

C4092

12614

B272
Height sensor, left rear

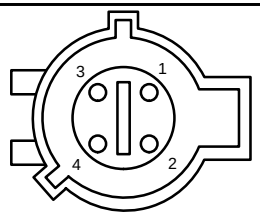

F04251

Pin	Circuit	Circuit Function
1	432 (BK/PK)	Signal return
2	427 (PK/BK)	Height sensor, left rear, input
3	426 (RD/BK)	Reference voltage
4	–	not used

C4093

12614

B273
Height sensor, right rear

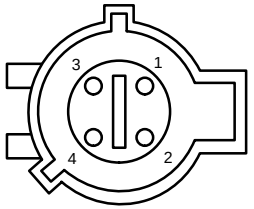

F04251

Pin	Circuit	Circuit Function
1	432 (BK/PK)	Signal return
2	428 (OG/PK)	Height sensor, right rear, input
3	426 (RD/BK)	Reference voltage
4	–	not used

C4094

13407

E135
Side lamp 1, LH rear

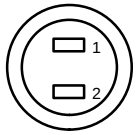

F02063

Pin	Circuit	Circuit Function
1	57 (BK)	Ground
2	1109 (OG/BK)	Parking Lamps

C4095

13407

E136
Side lamp 2, LH rear

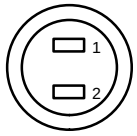

F02063

Pin	Circuit	Circuit Function
1	57 (BK)	Ground
2	1109 (OG/BK)	Parking Lamps