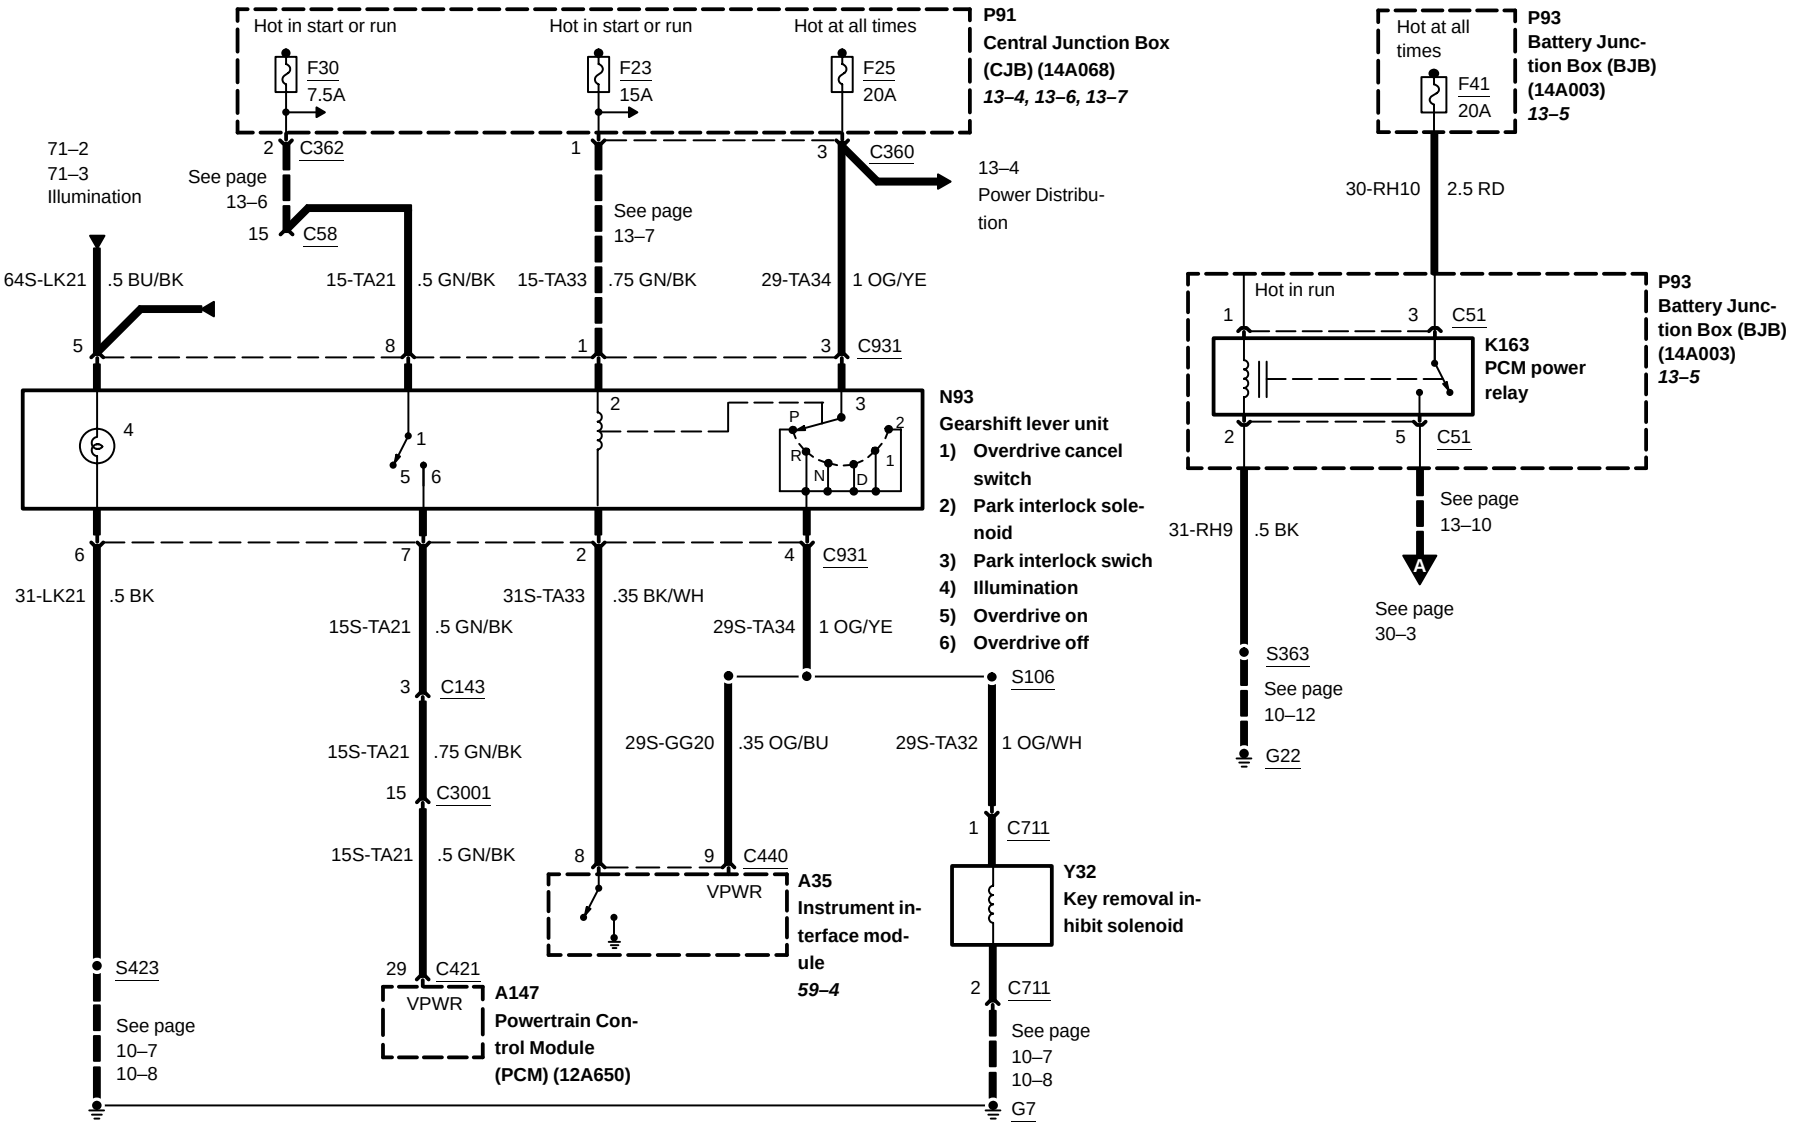
Hot in start or run
Hot in start or run
Hot at all times
F30
7.5A
F23
15A
F25
20A
P91
Central Junction Box
(CJB) (14A068)
13–4, 13–6, 13–7
71–2
71–3
Illumination
See page
13–6
See page
13–7
13–4
Power Distribu-
tion
C362
C58
C360
64S-LK21 .5 BU/BK
15-TA21 .5 GN/BK
15-TA33 .75 GN/BK
29-TA34 1 OG/YE
C931
N93
Gearshift lever unit
1) Overdrive cancel switch
2) Park interlock sole-noid
3) Park interlock swich
4) Illumination
5) Overdrive on
6) Overdrive off
31-LK21 .5 BK
31S-TA33 .35 BK/WH
15S-TA21 .5 GN/BK
29S-TA34 1 OG/YE
C143
15S-TA21 .75 GN/BK
29S-GG20 .35 OG/BU
29S-TA32 1 OG/WH
S106
C3001
15S-TA21 .5 GN/BK
C711
C440
VPWR
A35
Instrument in-terface mod-ule
59–4
Y32
Key removal in-hibit solenoid
S423
C421
VPWR
A147
Powertrain Con-trol Module
(PCM) (12A650)
See page
10–7
10–8
See page
10–7
10–8
G7
Hot at all
times
F41
20A
P93
Battery Junc-tion Box (BJB)
(14A003)
13–5
30-RH10 2.5 RD
Hot in run
C51
K163
PCM power
relay
31-RH9 .5 BK
See page
13–10
See page
30–3
S363
See page
10–12
G22