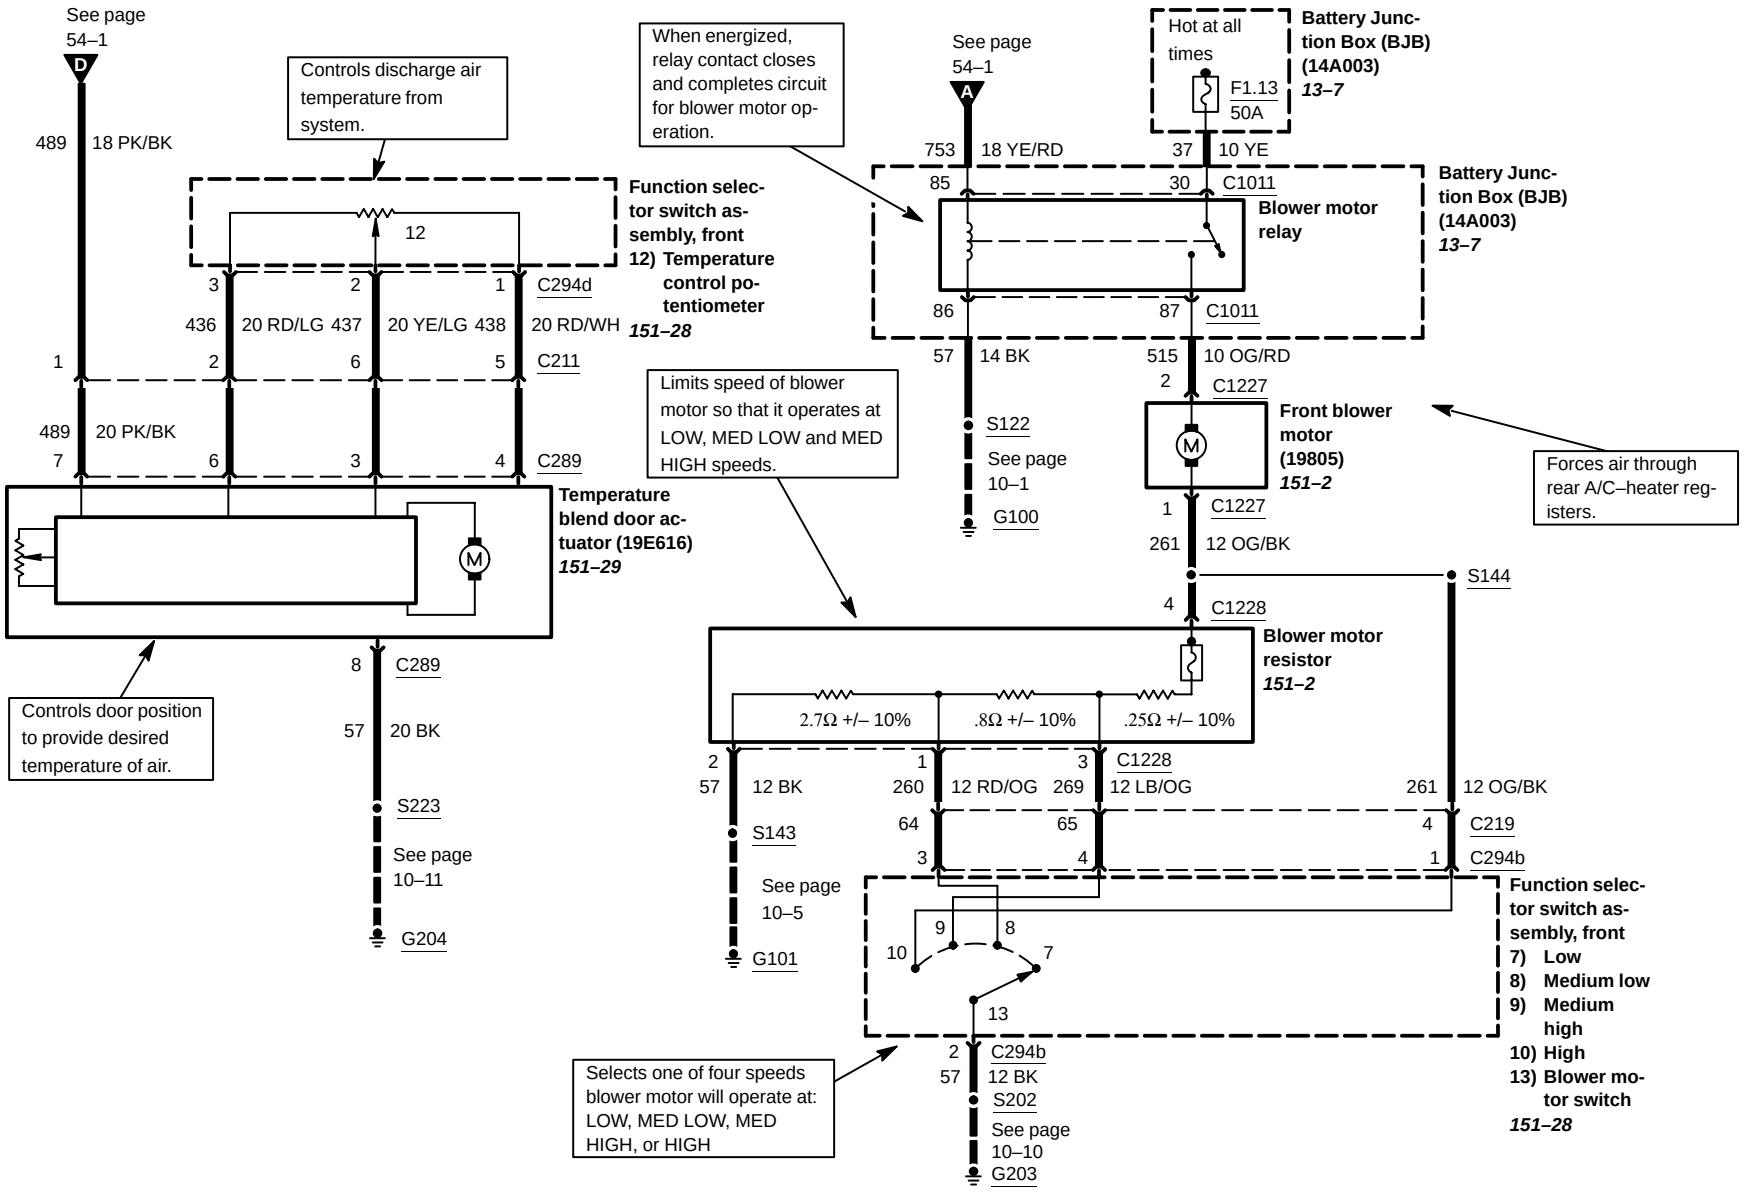
See page 54–1
D
489 18 PK/BK
Controls discharge air temperature from system.
Function selector switch assembly, front
12) Temperature control potentiometer
151–28
12
3 2 1 C294d
436 20 RD/LG 437 20 YE/LG 438 20 RD/WH
1 2 6 5 C211
489 20 PK/BK
7 6 3 4 C289
Temperature blend door actuator (19E616)
151–29
M
Controls door position to provide desired temperature of air.
8 C289
57 20 BK
S223
See page 10–11
G204
When energized, relay contact closes and completes circuit for blower motor operation.
See page 54–1
A
753 18 YE/RD
Hot at all times
F1.13 50A
37 10 YE
Battery Junction Box (BJB) (14A003)
13–7
85 30 C1011
Blower motor relay
86 87 C1011
Battery Junction Box (BJB) (14A003)
13–7
57 14 BK
S122
See page 10–1
G100
515 10 OG/RD
2 C1227
Front blower motor (19805)
151–2
1 C1227
261 12 OG/BK
Forces air through rear A/C–heater registers.
S144
Limits speed of blower motor so that it operates at LOW, MED LOW and MED HIGH speeds.
4 C1228
Blower motor resistor
151–2
2.7Ω +/– 10%
.8Ω +/– 10%
.25Ω +/– 10%
2 1 3 C1228
57 12 BK
260 12 RD/OG
269 12 LB/OG
261 12 OG/BK
64 65 4 C219
3 4 1 C294b
S143
See page 10–5
G101
9 8
10 7
13
Function selector switch assembly, front
7) Low
8) Medium low
9) Medium high
10) High
13) Blower motor switch
151–28
Selects one of four speeds blower motor will operate at: LOW, MED LOW, MED HIGH, or HIGH
2 C294b
57 12 BK
S202
See page 10–10
G203