C504a (BU)

14631

N447
Master window adjust switch

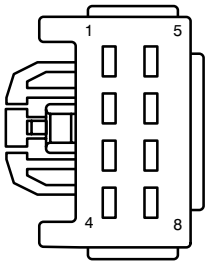

F08167

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	314 (TN/LB)	Window switch, feed, right front, Down
	320 (RD/BK)	Window switch, feed, right rear, Down
3	313 (WH/YE)	Window switch, feed, right front, Up
	314 (TN/LB)	Window switch, feed, right front, Down
4	400 (LB/BK)	Window safety relay, switched power, output
	313 (WH/YE)	Window switch, feed, right front, Up
5	–	not used
6	992 (WH/BK)	Master window adjust switch, feed, Up
7	992 (WH/BK)	Master window adjust switch, feed, Up
	991 (TN/LB)	Master window adjust switch, feed, Down
8	991 (TN/LB)	Master window adjust switch, feed, Down

C504b

14631

N447
Master window adjust switch

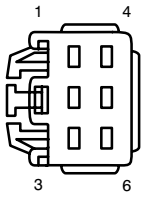

F06213

Pin	Circuit	Circuit function
1	170 (RD/LB)	Window lockout, switched power, output
2	57 (BK)	Ground
3	319 (YE/BK)	Window switch, feed, right rear, Up
4	400 (LB/BK)	Window safety relay, switched power, output
5	317 (GY/OG)	Window switch, feed, left rear, Down
6	316 (YE/LB)	Window switch, feed, left rear, Up