R1.53

14398

Trailer tow relay, right turn



Pin	Circuit	Circuit Function
1	1205 (BK)	Coil ground
2	378 (BN/YE)	Voltage to coil with right turn
3	175 (BK/YE)	Voltage supplied at all times (overload protected)
4	–	not used
5	64 (DG)	Trailer tow connector right turn feed

R1.54

14398

Trailer tow relay, left turn



Pin	Circuit	Circuit Function
1	1205 (BK)	Coil ground
2	374 (DB/WH)	Voltage to coil with left turn
3	175 (BK/YE)	Voltage supplied at all times (overload protected)
4	–	not used
5	52 (YE)	Trailer tow connector left turn feed

R1.55

14398

Blower motor relay

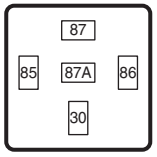

Pin	Circuit	Circuit Function
85	575 (YE/BK)	Coil feed
86	1205 (BK)	Coil ground
87	371 (PK/WH)	Blower motor relay, switched output to front blower
87A	–	not used
30	538 (GY/RD)	Voltage supplied at all times (overload protected)

R1.56

14398

Starter motor relay

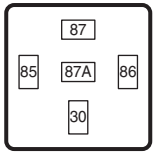

Pin	Circuit	Circuit Function
85	33 (WH/PK)	Switched power, to starter solenoid
86	461 (OG)	PCM to starter solenoid
87	113 (YE/LB)	Starter motor, to starter relay
87A	–	not used
30	1050 (LG/VT)	Fused ignition switch feed to run/run start

R1.57

14398

Powertrain Control Module (PCM) relay

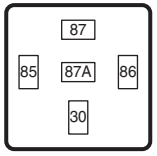

Pin	Circuit	Circuit Function
85	1205 (BK)	Coil ground
86	845 (TN/BK)	Voltage supplied at all times (overload protected)
87	361 (RD)	PCM relay, switched output to Battery Junction Box (BJB)
87A	–	not used
30	1075 (DG/OG)	Voltage supplied at all times (overload protected)