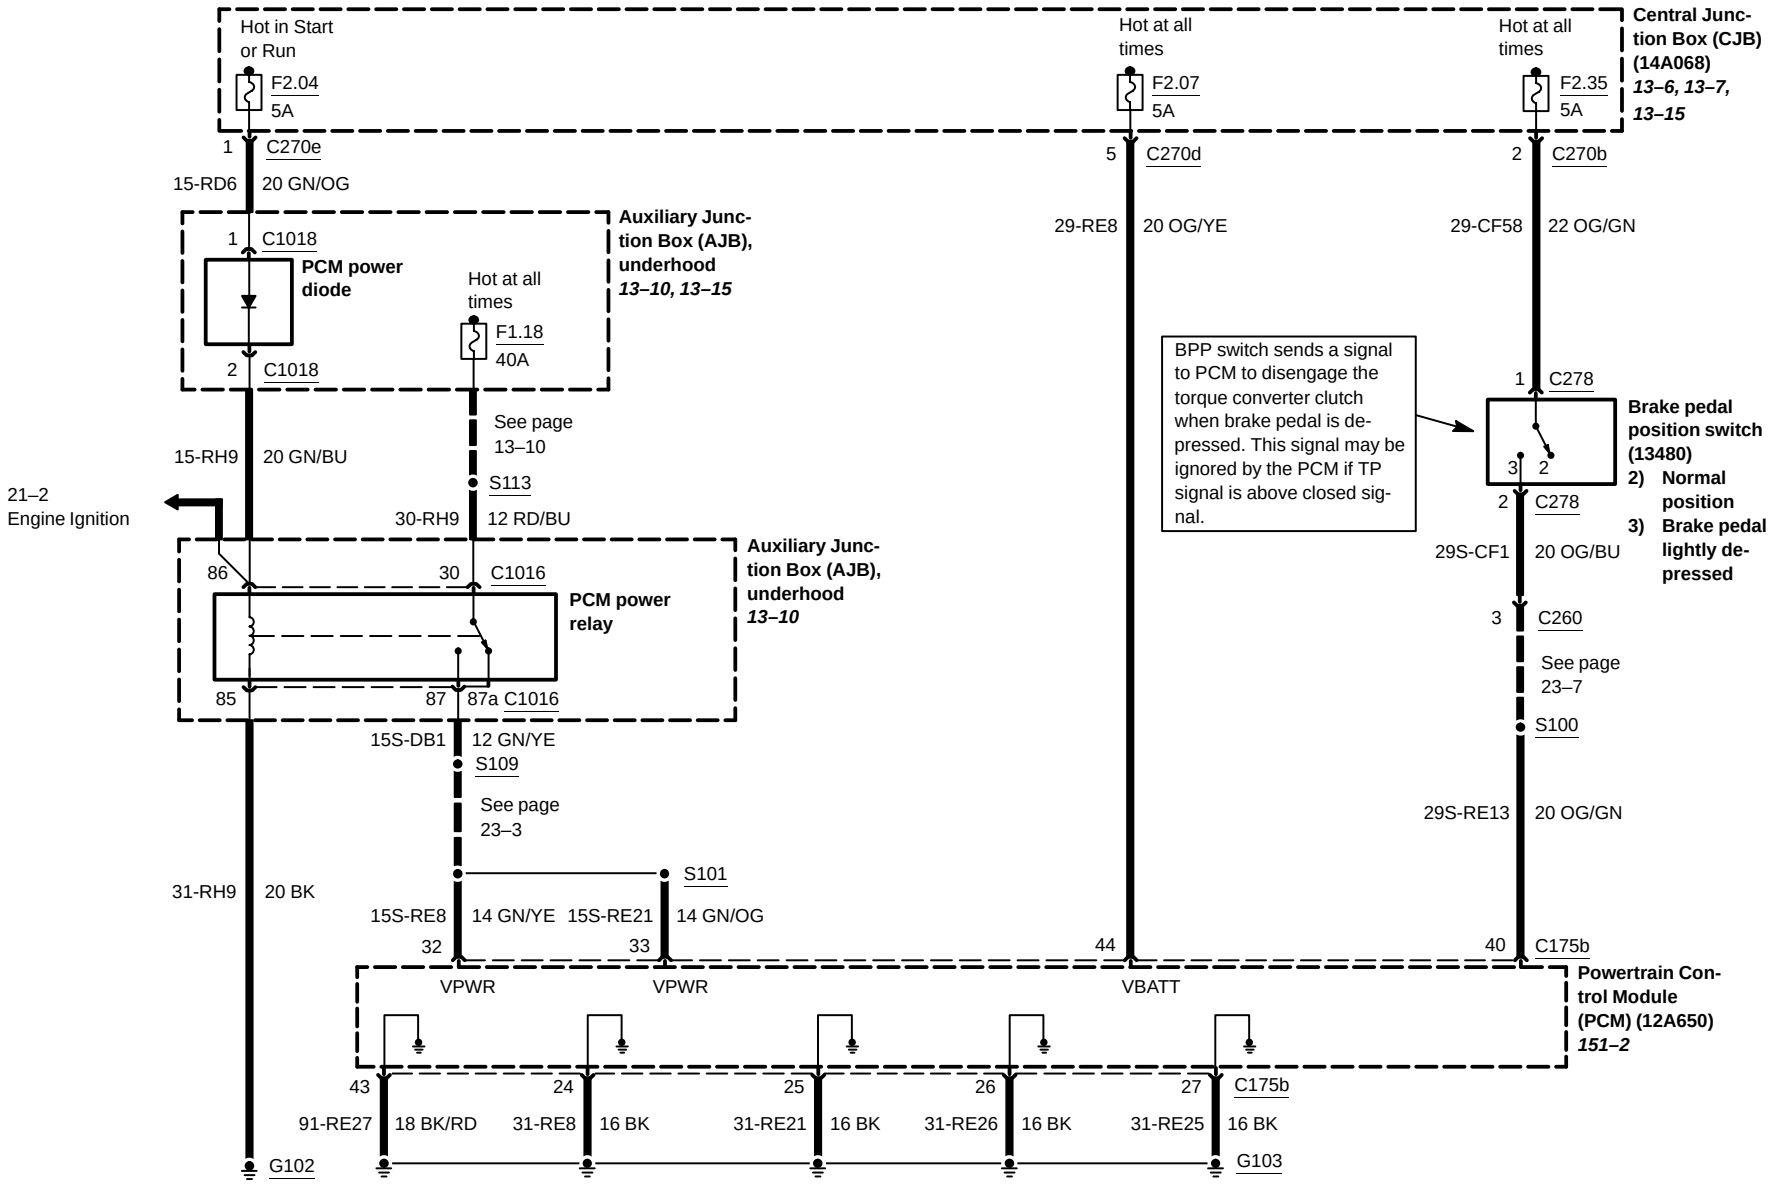
Hot in Start or Run
F2.04
5A
Hot at all times
F2.07
5A
Hot at all times
F2.35
5A
Central Junction Box (CJB) (14A068) 13–6, 13–7, 13–15
1 C270e
15-RD6 20 GN/OG
5 C270d
29-RE8 20 OG/YE
2 C270b
29-CF58 22 OG/GN
Auxiliary Junction Box (AJB), underhood 13–10, 13–15
1 C1018
PCM power diode
2 C1018
Hot at all times
F1.18
40A
See page 13–10
15-RH9 20 GN/BU
S113
30-RH9 12 RD/BU
21–2 Engine Ignition
BPP switch sends a signal to PCM to disengage the torque converter clutch when brake pedal is depressed. This signal may be ignored by the PCM if TP signal is above closed signal.
1 C278
Brake pedal position switch (13480)
2) Normal position
3) Brake pedal lightly depressed
3 2
2 C278
29S-CF1 20 OG/BU
3 C260
See page 23–7
S100
29S-RE13 20 OG/GN
Auxiliary Junction Box (AJB), underhood 13–10
86 30 C1016
PCM power relay
85 87 87a C1016
15S-DB1 12 GN/YE
S109
See page 23–3
31-RH9 20 BK
S101
15S-RE8 14 GN/YE
15S-RE21 14 GN/OG
32 33 44 40 C175b
VPWR VPWR VBATT
Powertrain Control Module (PCM) (12A650) 151–2
43 24 25 26 27 C175b
91-RE27 18 BK/RD
31-RE8 16 BK
31-RE21 16 BK
31-RE26 16 BK
31-RE25 16 BK
G102
G103