C1009

12A581

Natural Gas Vehicle (NGV) module

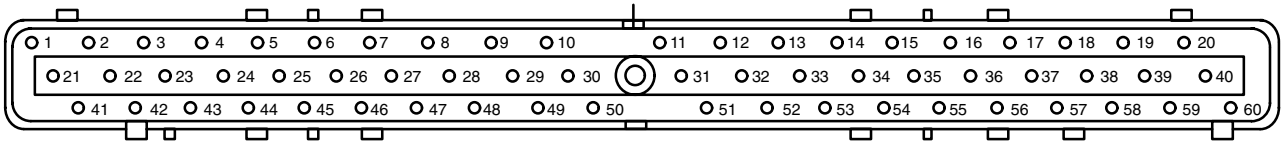

F60001

Pin	Circuit	Circuit function
1	729 (RD/WH)	Voltage supplied at all times (overload protected)
2	–	not used
3	1165 (WH/RD)	Powertrain Control Module (PCM) (12A650) signal – Fuel injector 1, control
4	1166 (YE/RD)	Powertrain Control Module (PCM) (12A650) signal – Fuel injector 2, control
5	1167 (WH/BK)	Powertrain Control Module (PCM) (12A650) signal – Fuel injector 3, control
6	–	not used
7	1161 (DG/OG)	Natural Gas Vehicle (NGV) fuel tank pressure sensor, signal
8	–	not used
9	–	not used
10	–	not used
11	–	not used
12	–	not used
13	–	not used
14	–	not used
15	–	not used
16	1503 (BK/LB)	Ground
17	–	not used
18	915 (PK/LB)	SCP Bus –
19	914 (TN/OG)	SCP Bus +
20	–	not used
21	–	not used
22	–	not used
23	1168 (YE/BK)	Powertrain Control Module (PCM) (12A650) signal – Fuel injector 4, control
24	1169 (WH/LB)	Powertrain Control Module (PCM) (12A650) signal – Fuel injector 5, control

Pin	Circuit	Circuit function
25	1170 (YE/LB)	Powertrain Control Module (PCM) (12A650) signal – Fuel injector 6, control
26	1160 (BN/WH)	Natural Gas Vehicle (NGV) fuel tank pressure sensor, Reference voltage
27	–	not used
28	–	not used
29	–	not used
30	–	not used
31	–	not used
32	–	not used
33	559 (TN/BK)	Fuel injector 5, control
34	–	not used
35	558 (BN/LB)	Fuel injector 4, control
36	–	not used
37	361 (RD)	Voltage supplied in Start and Run (overload protected)
38	29 (YE/WH)	Fuel pump/fuel gauge sender
39	557 (BN/YE)	Fuel injector 3, control
40	1502 (BK/YE)	Ground
41	–	not used
42	560 (LG/OG)	Fuel injector 6, control
43	1171 (WH)	Fuel injector 7, control
44	1172 (YE)	Fuel injector 8, control
45	–	not used
46	1163 (BN)	Signal return
47	1162 (LG/RD)	Natural Gas Vehicle (NGV) fuel tank temperature sensor, input
48	–	not used
49	–	not used
50	–	not used
51	–	not used

52	–	not used
53	561 (TN/RD)	Fuel injector 7, control
54	562 (LB)	Fuel injector 8, control
55	–	not used
56	–	not used
57	361 (RD)	Voltage supplied in Start and Run (overload protected)
58	555 (TN)	Fuel injector 1, control
59	556 (WH)	Fuel injector 2, control
60	1501 (BK)	Ground