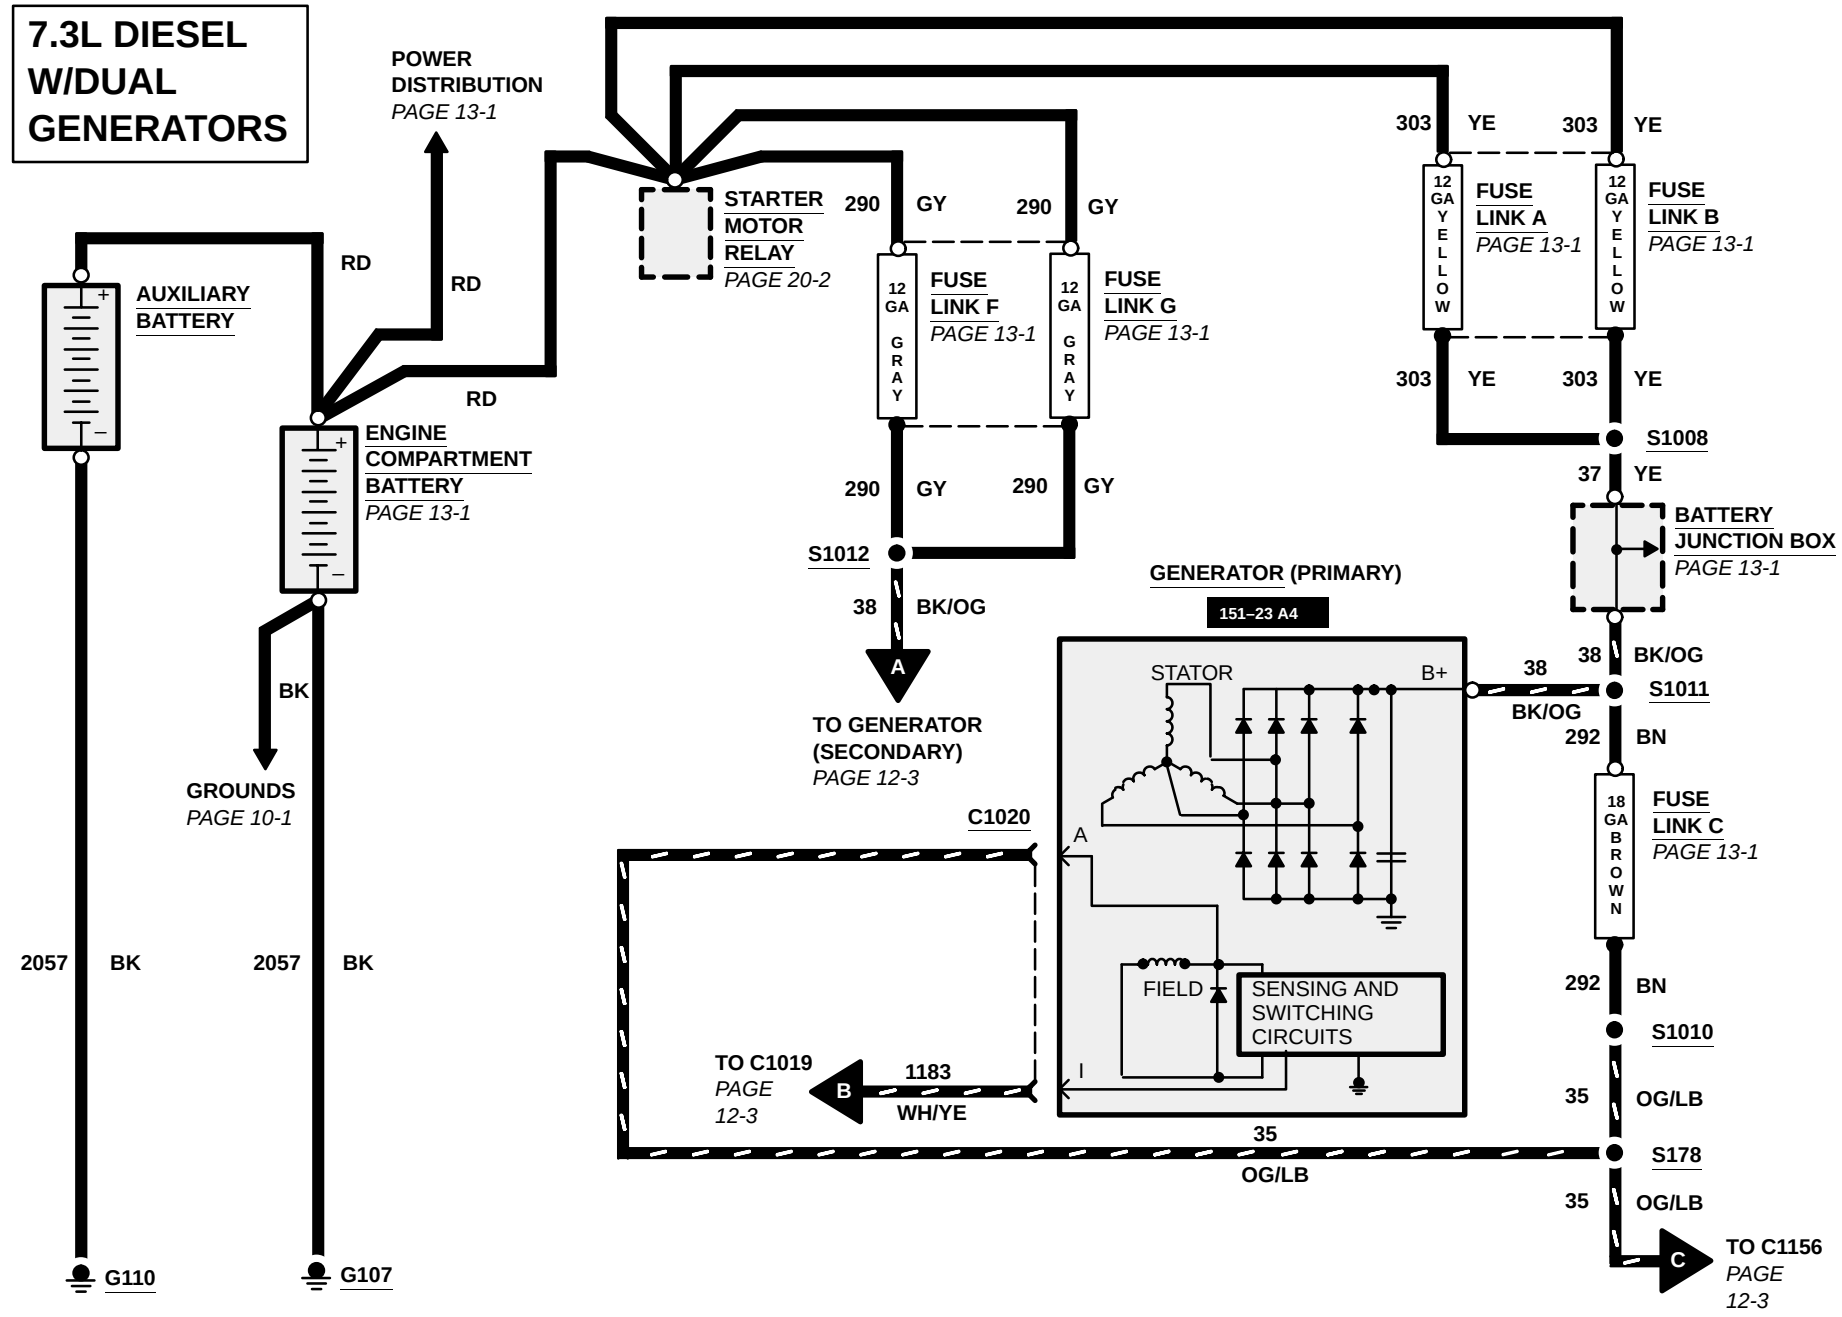
7.3L DIESEL W/DUAL GENERATORS
POWER DISTRIBUTION
PAGE 13-1
AUXILIARY BATTERY
RD
RD
RD
ENGINE COMPARTMENT BATTERY
PAGE 13-1
BK
GROUNDS
PAGE 10-1
2057 BK
2057 BK
G110
G107
STARTER MOTOR RELAY
PAGE 20-2
290 GY
290 GY
12 GA GRAY
FUSE LINK F
PAGE 13-1
12 GA GRAY
FUSE LINK G
PAGE 13-1
290 GY
290 GY
S1012
38 BK/OG
A
TO GENERATOR (SECONDARY)
PAGE 12-3
303 YE
303 YE
12 GA YELLOW
FUSE LINK A
PAGE 13-1
12 GA YELLOW
FUSE LINK B
PAGE 13-1
303 YE
303 YE
S1008
37 YE
BATTERY JUNCTION BOX
PAGE 13-1
GENERATOR (PRIMARY)
151–23 A4
STATOR
B+
38 BK/OG
38 BK/OG
S1011
292 BN
18 GA BROWN
FUSE LINK C
PAGE 13-1
C1020
A
FIELD
SENSING AND SWITCHING CIRCUITS
I
292 BN
S1010
35 OG/LB
TO C1019
PAGE 12-3
B
1183 WH/YE
35 OG/LB
S178
35 OG/LB
C
TO C1156
PAGE 12-3