3.0L

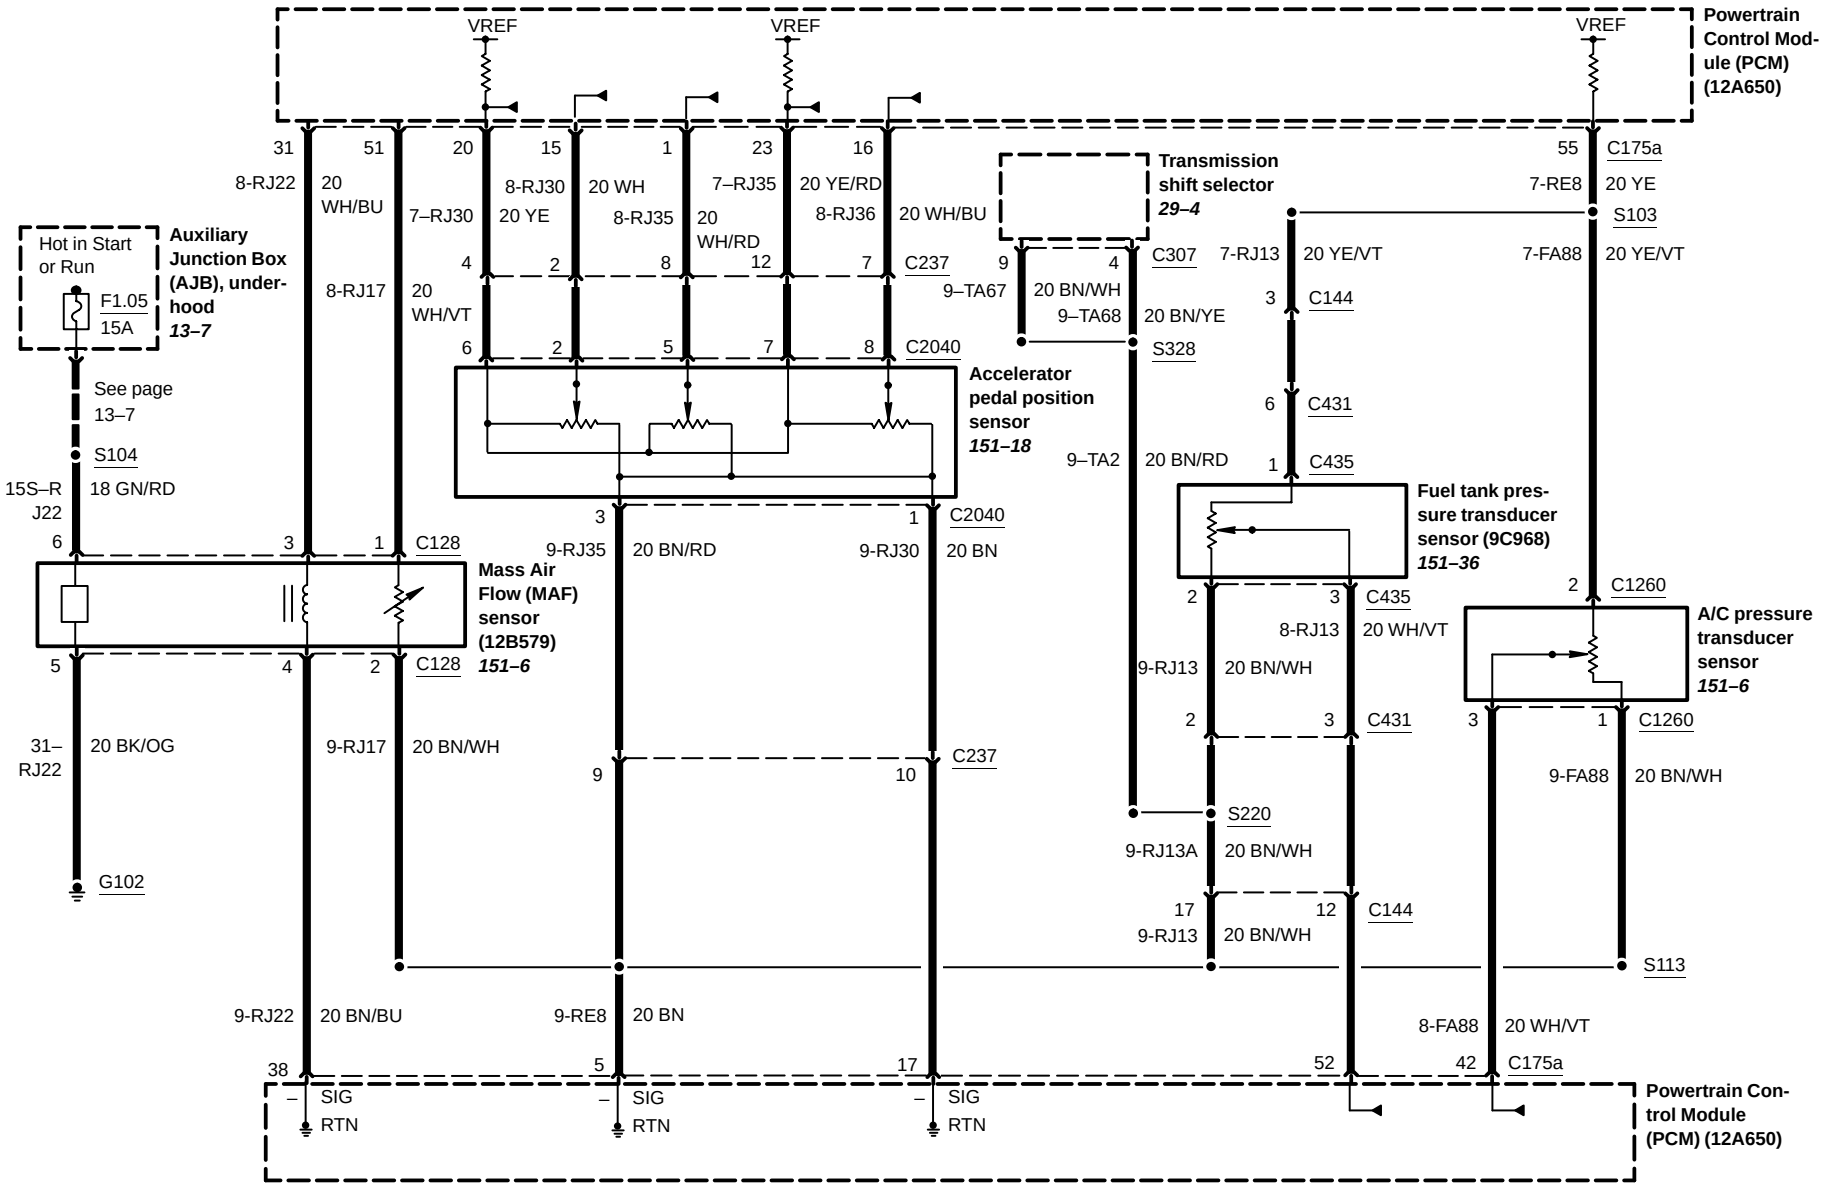
Powertrain Control Module (PCM) (12A650)
VREF
VREF
VREF
Transmission shift selector 29–4
Hot in Start or Run
F1.05 15A
Auxiliary Junction Box (AJB), underhood 13–7
See page 13–7
S104
15S–R J22
18 GN/RD
Mass Air Flow (MAF) sensor (12B579) 151–6
C128
Accelerator pedal position sensor 151–18
C2040
C237
C307
S328
C144
C431
C435
Fuel tank pressure transducer sensor (9C968) 151–36
C175a
S103
C1260
A/C pressure transducer sensor 151–6
S220
S113
G102
8-RJ22
20 WH/BU
7–RJ30
20 YE
8-RJ30
20 WH
8-RJ35
20 WH/RD
7–RJ35
20 YE/RD
8-RJ36
20 WH/BU
8-RJ17
20 WH/VT
9–TA67
9–TA68
20 BN/WH
20 BN/YE
9–TA2
20 BN/RD
7-RJ13
20 YE/VT
7-RE8
20 YE
7-FA88
20 YE/VT
9-RJ35
20 BN/RD
9-RJ30
20 BN
8-RJ13
20 WH/VT
9-RJ13
20 BN/WH
9-RJ13A
20 BN/WH
9-FA88
20 BN/WH
31–RJ22
20 BK/OG
9-RJ17
20 BN/WH
9-RJ22
20 BN/BU
9-RE8
20 BN
8-FA88
20 WH/VT
SIG
RTN
Powertrain Control Module (PCM) (12A650)