C1252 (GY)

12A581

Vacuum warning switch

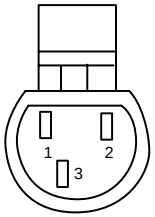

F03275

Pin	Circuit	Circuit function
1	640 (RD/YE)	Voltage supplied in Start and Run (overload protected)
2	57 (BK)	Ground
3	512 (TN/LG)	Brake indicator, control

C1253 (BK)

12A581

Fuel pump

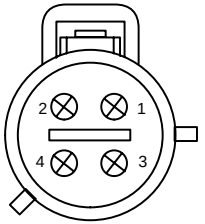

F04263

Pin	Circuit	Circuit function
1	–	not used
2	787 (PK/BK)	Fuel pump, Power
3	57 (BK)	Ground
4	–	not used

C1254 (BK)

Natural Gas Vehicle (NGV) timer jumper

12A581

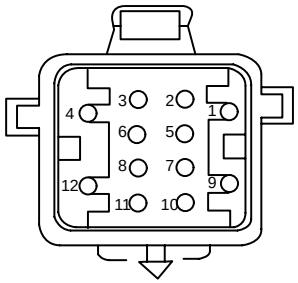

F12157

Pin	Circuit	Circuit function
1	1501 (BK)	Ground
2	651 (BK/YE)	Ground
3	1503 (BK/LB)	Signal Ground
4	570 (BK/WH)	Ground
5	32 (RD/LB)	not used
6	–	not used
7	–	not used
8	–	not used
9	16 (RD/LG)	Voltage supplied in Start and Run (overload protected)
10	–	not used
11	–	not used
12	1500 (RD/WH)	Voltage supplied in Start and Run (overload protected)

14K069

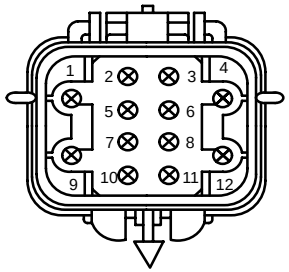

F12060

Pin	Circuit	Circuit function
1	1501 (BK)	Ground
2	1503 (BK/LB)	Ground
3	1503 (BK/LB)	Ground
4	1501 (BK)	Ground
5	–	not used
6	–	not used
7	–	not used
8	–	not used
9	1500 (RD/WH)	Voltage supplied in Start and Run (overload protected)
10	1502 (BK/YE)	not used
11	1502 (BK/YE)	not used
12	1500 (RD/WH)	Voltage supplied in Start and Run (overload protected)