C107

12A654

B135
Cylinder–head temperature sensor (6G004)

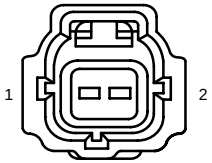

F02111

Pin	Circuit	Circuit function
1	1102 (YE/LG)	Cylinder–head temperature sensor (6G004), to, Powertrain Control Module (PCM) (12A650)
2	359 (GY/RD)	signal, return

C110

12A581

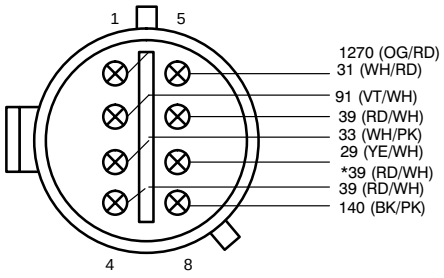

F08050

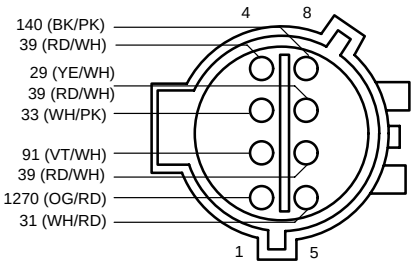

F08263

C111

12B637

P66
Coil On Plug (COP) 1 (12029)

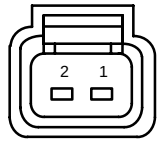

F02331

Pin	Circuit	Circuit function
1	16 (RD/LG)	Voltage supplied in Start and Run (overload protected)
2	1024 (LG/WH)	Coil On Plug (COP) 1 (12029), control

C112

12B637

P67
Coil On Plug (COP) 2 (12029)

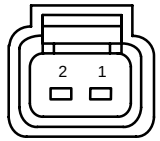

F02331

Pin	Circuit	Circuit function
1	16 (RD/LG)	Voltage supplied in Start and Run (overload protected)
2	1026 (PK/WH)	Coil On Plug (COP) 2 (12029), control

C113

12B637

P68
Coil On Plug (COP) 3 (12029)

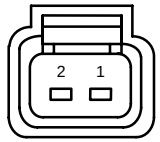

F02331

Pin	Circuit	Circuit function
1	16 (RD/LG)	Voltage supplied in Start and Run (overload protected)
2	1028 (WH/PK)	Coil On Plug (COP) 3 (12029), control