C4104b

14405

A7
ABS control module
(2C219)

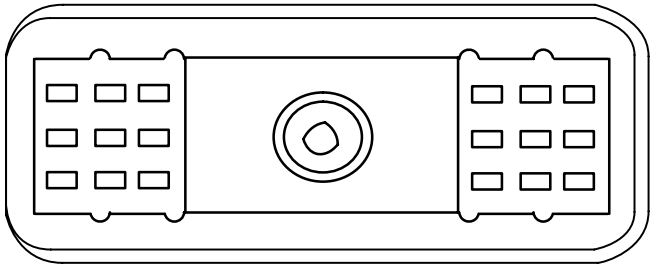

F18023

Pin	Circuit	Circuit function
A1	689 (DB)	Air bag, dedicated ground
B1	604 (OG/RD)	Wheel speed sensor, right front (2C204) +
C1	630 (WH/PK)	Air bag center sensor, to, Electronic Crash Sensor (ECS) module
D1	609 (OG/YE)	Voltage supplied at all times (overload protected)
E1	620 (WH/YE)	Height sensor, right front
F1	619 (PK/WH)	Wheel speed sensor, left front (2C205) –
A2	–	not used
B2	–	not used
C2	–	not used
D2	–	not used
E2	524 (PK/BK)	Wheel speed sensor, right rear –
F2	519 (LG/BK)	Wheel speed sensor, left rear –
A3	–	not used
B3	–	not used
C3	–	not used
D3	–	not used
E3	523 (RD/PK)	Wheel speed sensor, right rear +
F3	518 (LG/RD)	Wheel speed sensor, left rear +

C4105

14405

Y256
Rear air spring sole-
noid

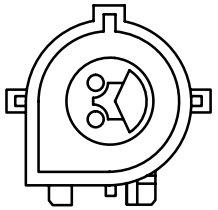

F02080

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	1195 (BN/OG)	Air suspension height sensor (3C131), rear, feed

C4165

14405

K396
Exhaust brake relay
1

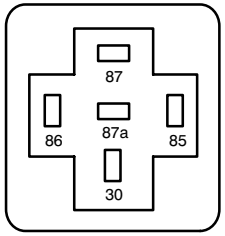

F05137

Pin	Circuit	Circuit function
30	3850 (LG/VT)	Engine cooling fan relay, control
85	57 (BK)	Ground
86	1064 (YE/LB)	Exhaust Pressure Regulator (EPR), to, Powertrain Control Module (PCM) (12A650)
87	1066 (GY/LB)	Exhaust Back Pressure (EBP) sensor, to, Powertrain Control Module (PCM) (12A650)
87A	–	not used