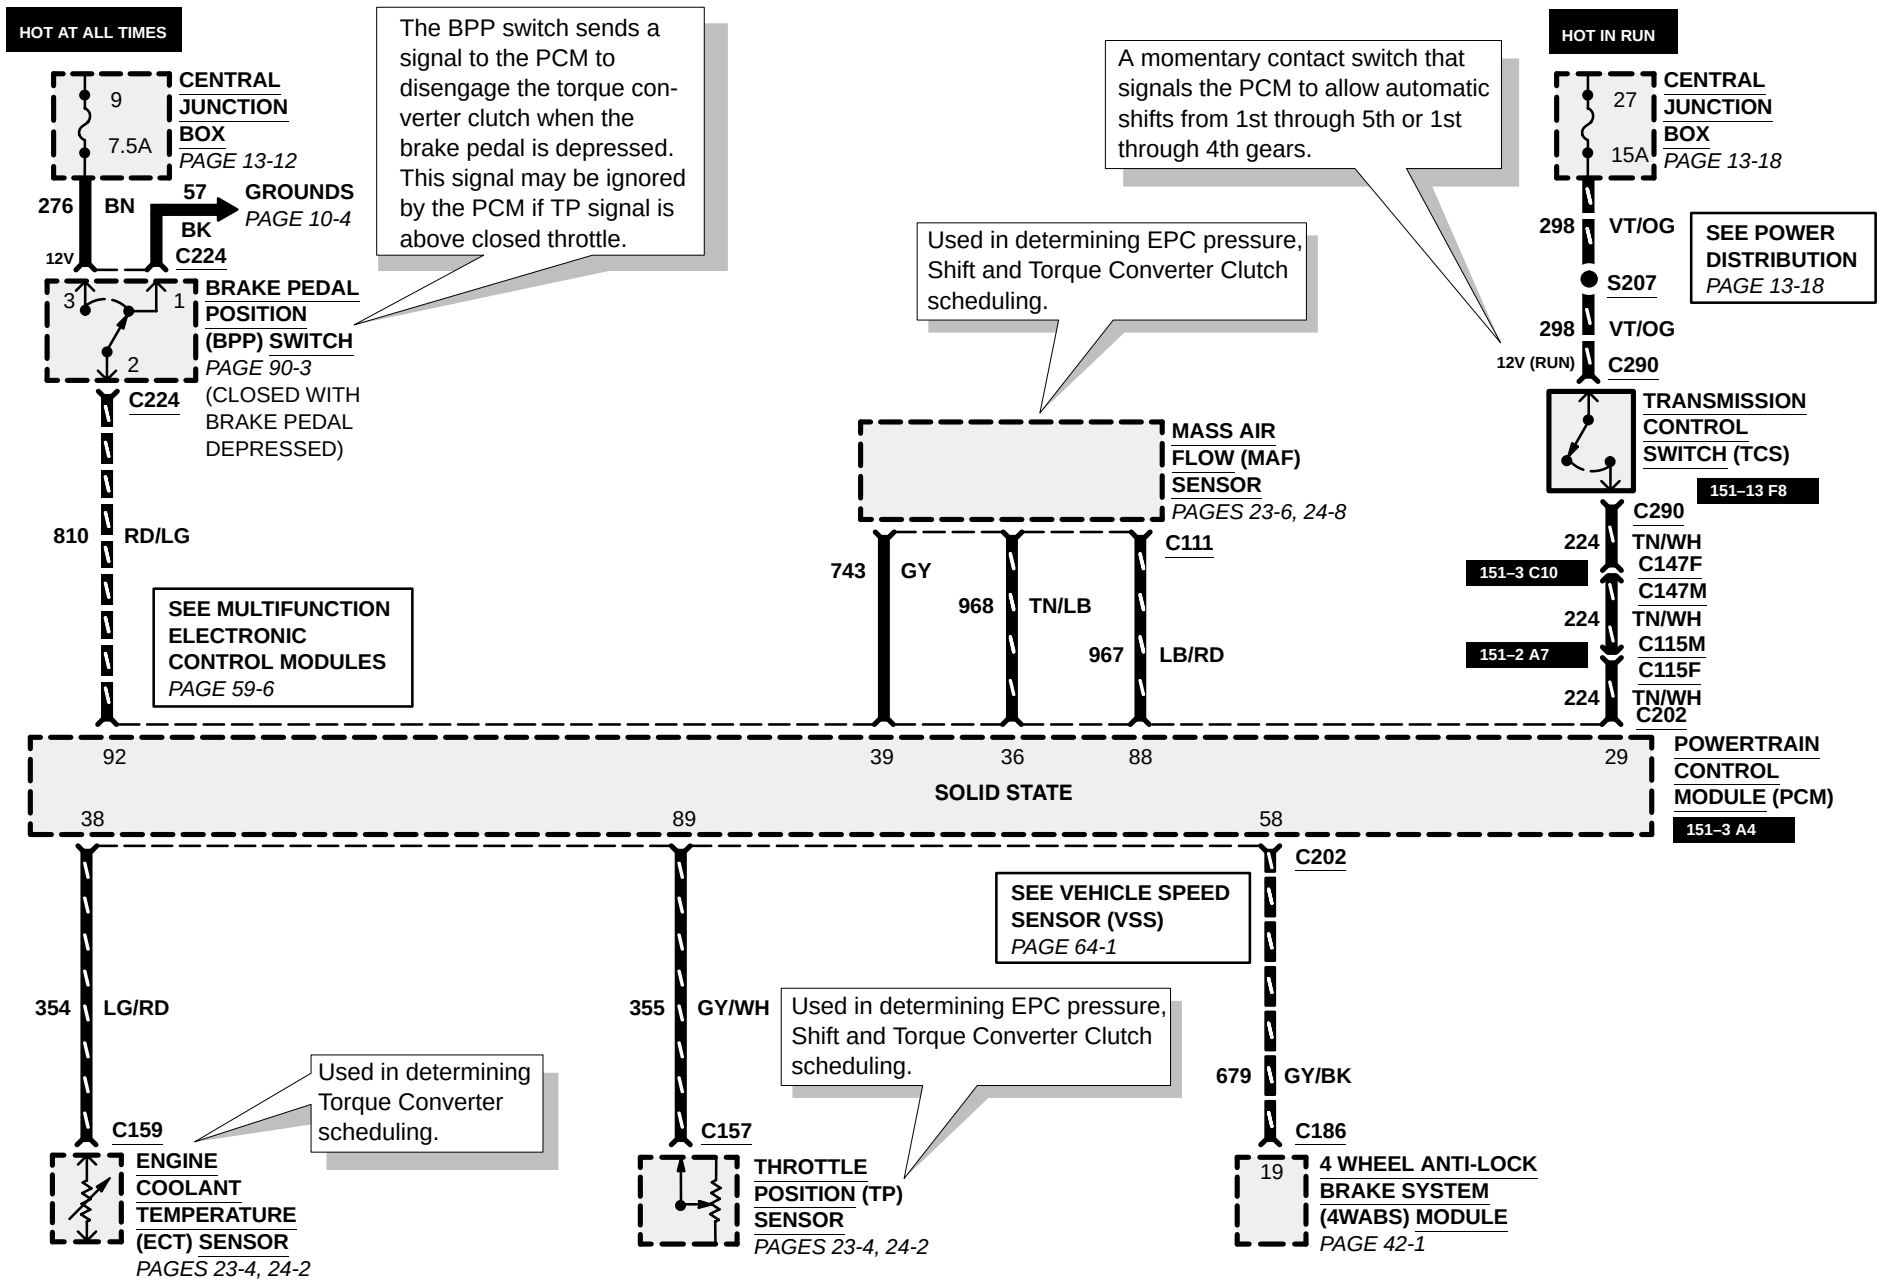
HOT AT ALL TIMES
CENTRAL JUNCTION BOX
PAGE 13-12
9
7.5A
276 BN
57 BK
GROUNDS
PAGE 10-4
12V
C224
BRAKE PEDAL POSITION (BPP) SWITCH
PAGE 90-3
(CLOSED WITH BRAKE PEDAL DEPRESSED)
3
1
2
C224
810 RD/LG
The BPP switch sends a signal to the PCM to disengage the torque converter clutch when the brake pedal is depressed. This signal may be ignored by the PCM if TP signal is above closed throttle.
SEE MULTIFUNCTION ELECTRONIC CONTROL MODULES
PAGE 59-6
Used in determining EPC pressure, Shift and Torque Converter Clutch scheduling.
MASS AIR FLOW (MAF) SENSOR
PAGES 23-6, 24-8
743 GY
968 TN/LB
967 LB/RD
C111
A momentary contact switch that signals the PCM to allow automatic shifts from 1st through 5th or 1st through 4th gears.
HOT IN RUN
CENTRAL JUNCTION BOX
PAGE 13-18
27
15A
298 VT/OG
S207
298 VT/OG
12V (RUN)
C290
SEE POWER DISTRIBUTION
PAGE 13-18
TRANSMISSION CONTROL SWITCH (TCS)
151–13 F8
C290
224 TN/WH
151–3 C10
C147F
C147M
224 TN/WH
151–2 A7
C115M
C115F
224 TN/WH
C202
92
39
36
88
29
SOLID STATE
38
89
58
POWERTRAIN CONTROL MODULE (PCM)
151–3 A4
C202
SEE VEHICLE SPEED SENSOR (VSS)
PAGE 64-1
354 LG/RD
355 GY/WH
679 GY/BK
Used in determining Torque Converter scheduling.
Used in determining EPC pressure, Shift and Torque Converter Clutch scheduling.
C159
C157
C186
ENGINE COOLANT TEMPERATURE (ECT) SENSOR
PAGES 23-4, 24-2
THROTTLE POSITION (TP) SENSOR
PAGES 23-4, 24-2
19
4 WHEEL ANTI-LOCK BRAKE SYSTEM (4WABS) MODULE
PAGE 42-1