C806

14026

Sliding door contact switch, right

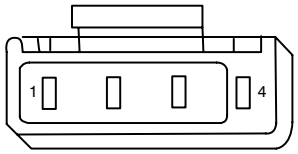

F04329

Pin	Circuit	Circuit function
1	802 (OG/RD)	Speaker, right rear (18808) +
2	117 (PK/BK)	Door lock, output
3	118 (PK/OG)	Door unlock, output
4	803 (BN/PK)	Speaker, right rear (18808) –

C807 (BK)

14026

Sliding door contact switch, right

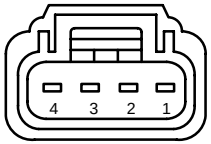

F04162

Pin	Circuit	Circuit function
1	803 (BN/PK)	Speaker, right rear (18808) –
2	118 (PK/OG)	Door unlock, output
3	117 (PK/BK)	Door lock, output
4	802 (OG/RD)	Speaker, right rear (18808) +

C813 (BK)

14026

Speaker, right middle

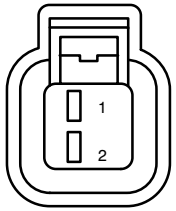

F02069

Pin	Circuit	Circuit function
1	802 (OG/RD)	Speaker, right rear (18808) +
2	803 (BN/PK)	Speaker, right rear (18808) –

C816 (NA)

14026

Side door ajar switch, right

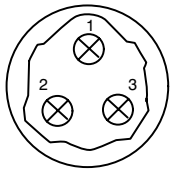

F03261

Pin	Circuit	Circuit function
1	–	not used
2	54 (LG/YE)	Voltage supplied at all times (overload protected)
3	53 (BK/LB)	Interior lamps, control

C817 (WH)

14026

Side door lock actuator, right

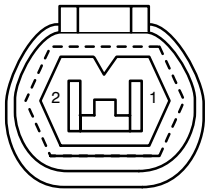

F02639

Pin	Circuit	Circuit function
1	117 (PK/BK)	Door lock, output
2	118 (PK/OG)	Door unlock, output