-96

C896

14401

P13
Clock spring

F09024

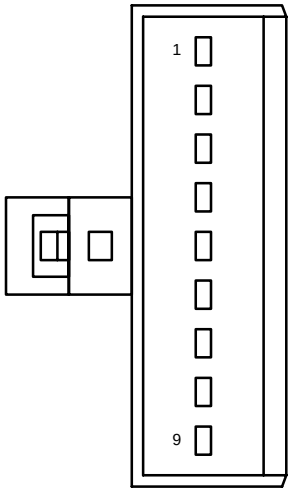

Pin	Circuit	Circuit Function
1	15S-JA48 (GN/BK)	Voltage, ignition switch in Start or Run (not overload protected)
2	91S-JA48 (BK/GN)	Ground, switched
3	15-PG13 (GN/YE)	Voltage, ignition switch in Start or Run (not overload protected)
4	9-PG13 (BN)	Sensor signal return (reference/ground)
5	8-PG13 (WH)	Sensor signal
6	91S-GJ7 (BK/BU)	Ground, switched
7	91-PG30 (BK/WH)	Ground
8	91S-JA8 (BK/OG)	Ground, switched
9	15S-JA8 (GN/RD)	Voltage, ignition switch in Start or Run (not overload protected)

C897

14K733

N21
Engine compart-
ment switch



F02058

Pin	Circuit	Circuit Function
1	31-GL7 (BK)	Ground
2	31S-GL7 (BK/YE)	Ground, switched