-4

C15 (BU)

14401

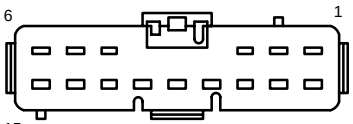

F15009

P91
Central Junction
Box (CJB)

Pin	Circuit	Circuit Function
1	31S-LB25 (BK/BU)	Ground, switched
2	15-GB6 (GN/YE)	Voltage, ignition switch in Start or Run (not overload protected)
	15-DA4 (GN/BK)	Voltage, ignition switch in Start or Run (not overload protected)
	15-GB6 (GN/YE) +	Voltage, ignition switch in Start or Run (not overload protected)
	15-GL37 (GN/BK)	Voltage, ignition switch in Start or Run (not overload protected)
3	15-GG14 (GN/RD) +	Voltage, ignition switch in Start or Run (not overload protected)
	15-LG27 (GN/BK)	Voltage, ignition switch in Start or Run (not overload protected)
	15-GG14 (GN/RD)	Voltage, ignition switch in Start or Run (not overload protected)
4	31S-HB1 (BK/BU)	Ground, switched
	15S-HB2 (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected), switched
5	8-EE8 (WH/BU)	Sensor signal
	32-KA9C (WH/BU)	Switched between: Battery voltage, Ground or Open
6	8-KA19 (WH/BK)	Sensor signal
	32-KA9D (WH/BU)	Switched between: Battery voltage, Ground or Open
7	91S-GJ7 (BK/BU)	Ground, switched
	31S-GL43 (BK/GN) +	Ground, switched
	91S-GJ7 (BK/BU)	Ground, switched
8	29-LB25 (OG/BU)	Voltage supplied at all times (overload protected)
9	91-DA1 (BK/YE)	Ground
	29-LE29 (OG/BK)	Voltage supplied at all times (overload protected)
10	91S-JA14A (BK/GN)	Ground, switched
	29S-LE18 (OG/YE) +	Voltage supplied at all times (overload protected), switched
	29S-LF5 (OG/BU)	Voltage supplied at all times (overload protected), switched
11	8-AA36 (WH)	Sensor signal
	29S-LF21 (OG/BK)	Voltage supplied at all times (overload protected), switched
12	29S-LE18 (OG/YE)	Voltage supplied at all times (overload protected), switched
	15-CF6 (GN/YE)	Voltage, ignition switch in Start or Run (not overload protected)
13	31S-GL5 (BK/BU)	Ground, switched
	31S-GL5A (BK/BU)	Ground, switched

-5

Pin	Circuit	Circuit Function
14	31S-GL9 (BK/YE)	Ground, switched
	31S-GL8 (BK/YE) +	Ground, switched
	31S-GL9 (BK/YE)	Ground, switched
	31S-GL8 (BK/YE) +	Ground, switched
	31S-GL16 (BK/BU)	Ground, switched
	15S-TA38B (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected), switched
15	31S-AA7 (BK/BU)	Ground, switched
	15S-LG9 (GN/BK)	Voltage, ignition switch in Start or Run (not overload protected), switched