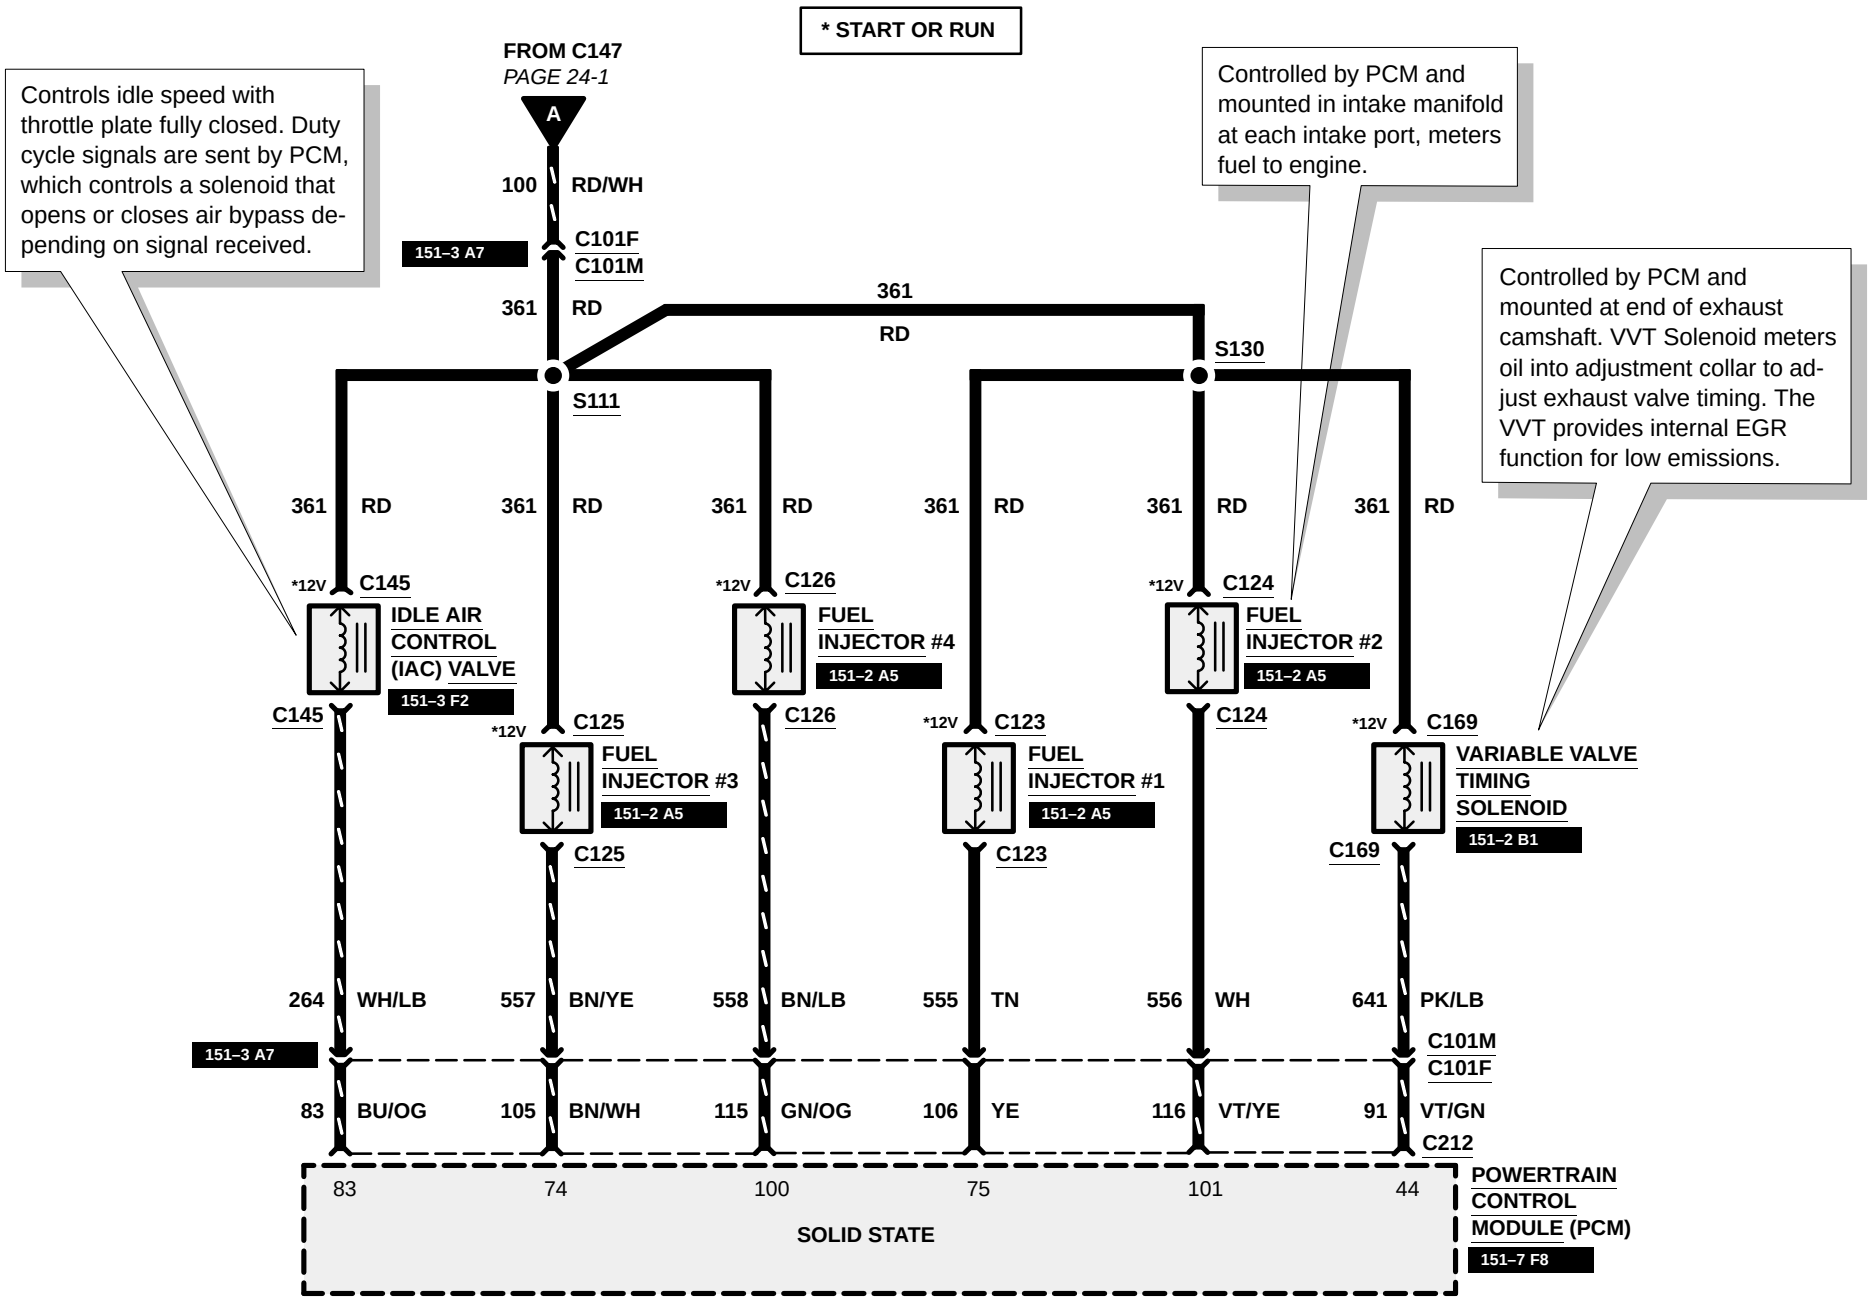
* START OR RUN
FROM C147
PAGE 24-1
A
Controls idle speed with throttle plate fully closed. Duty cycle signals are sent by PCM, which controls a solenoid that opens or closes air bypass depending on signal received.
Controlled by PCM and mounted in intake manifold at each intake port, meters fuel to engine.
Controlled by PCM and mounted at end of exhaust camshaft. VVT Solenoid meters oil into adjustment collar to adjust exhaust valve timing. The VVT provides internal EGR function for low emissions.
100 RD/WH
151–3 A7
C101F
C101M
361 RD
361 RD
S130
S111
361 RD
361 RD
361 RD
361 RD
361 RD
361 RD
*12V C145
IDLE AIR CONTROL (IAC) VALVE
151–3 F2
*12V C126
FUEL INJECTOR #4
151–2 A5
*12V C124
FUEL INJECTOR #2
151–2 A5
*12V C125
FUEL INJECTOR #3
151–2 A5
*12V C123
FUEL INJECTOR #1
151–2 A5
*12V C169
VARIABLE VALVE TIMING SOLENOID
151–2 B1
C145
C125
C126
C124
C123
C169
264 WH/LB
557 BN/YE
558 BN/LB
555 TN
556 WH
641 PK/LB
151–3 A7
C101M
C101F
83 BU/OG
105 BN/WH
115 GN/OG
106 YE
116 VT/YE
91 VT/GN
C212
83
74
100
75
101
44
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
151–7 F8