C118 (BK)

12B637

Coil On Plug (COP) 8 (12029)

* Navigator

F02371

Pin	Circuit	Circuit function
1	16 (RD/LG)	Voltage supplied in Start and Run (overload protected)
	*1029 (WH/RD)	Coil On Plug (COP) 8 (12029), control
2	1029 (WH/RD)	Coil On Plug (COP) 8 (12029), control
	*16 (RD/LG)	Voltage supplied in Start and Run (overload protected)

C120 (BK)

12614

Power steering valve solenoid (3783)

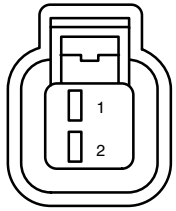

F02069

Pin	Circuit	Circuit function
1	413 (LG)	Power steering valve solenoid (3783) –
2	412 (OG/LB)	Power steering valve solenoid (3783) +

C121 (BK)

12B637

Power steering pressure switch

* Early production

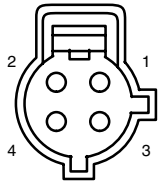

F04195

Pin	Circuit	Circuit function
1	*359 (GY/RD)	signal, return
2	*351 (BN/WH)	Reference, voltage
3	*328 (YE/LG)	Power steering pressure switch, signal
4	–	not used

C122 (BK)

12A581

Speed control servo (9C735)

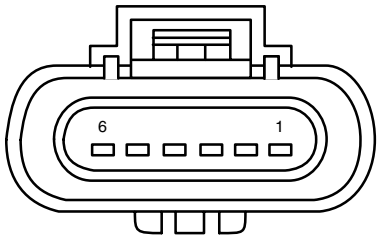

F06169

Pin	Circuit	Circuit function
1	1928 (RD/WH)	Voltage supplied in Start and Run (overload protected)
2	1926 (VT/YE)	Speed control servo (9C735), signal C
3	1925 (PK/BK)	Speed control servo (9C735), signal B
4	1924 (DG/WH)	Speed control servo (9C735), signal A
5	1927 (TN)	Speed control servo (9C735), common
6	307 (BK/YE)	Brake pressure switch (2B264), output

C124 (BK)

12A581

Brake fluid level switch (2L414)

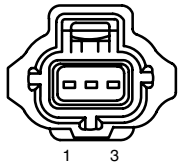

F03247

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	512 (TN/LG)	Brake indicator, control
3	531 (DG/YE)	Brake fluid level switch (2L414), signal