-4

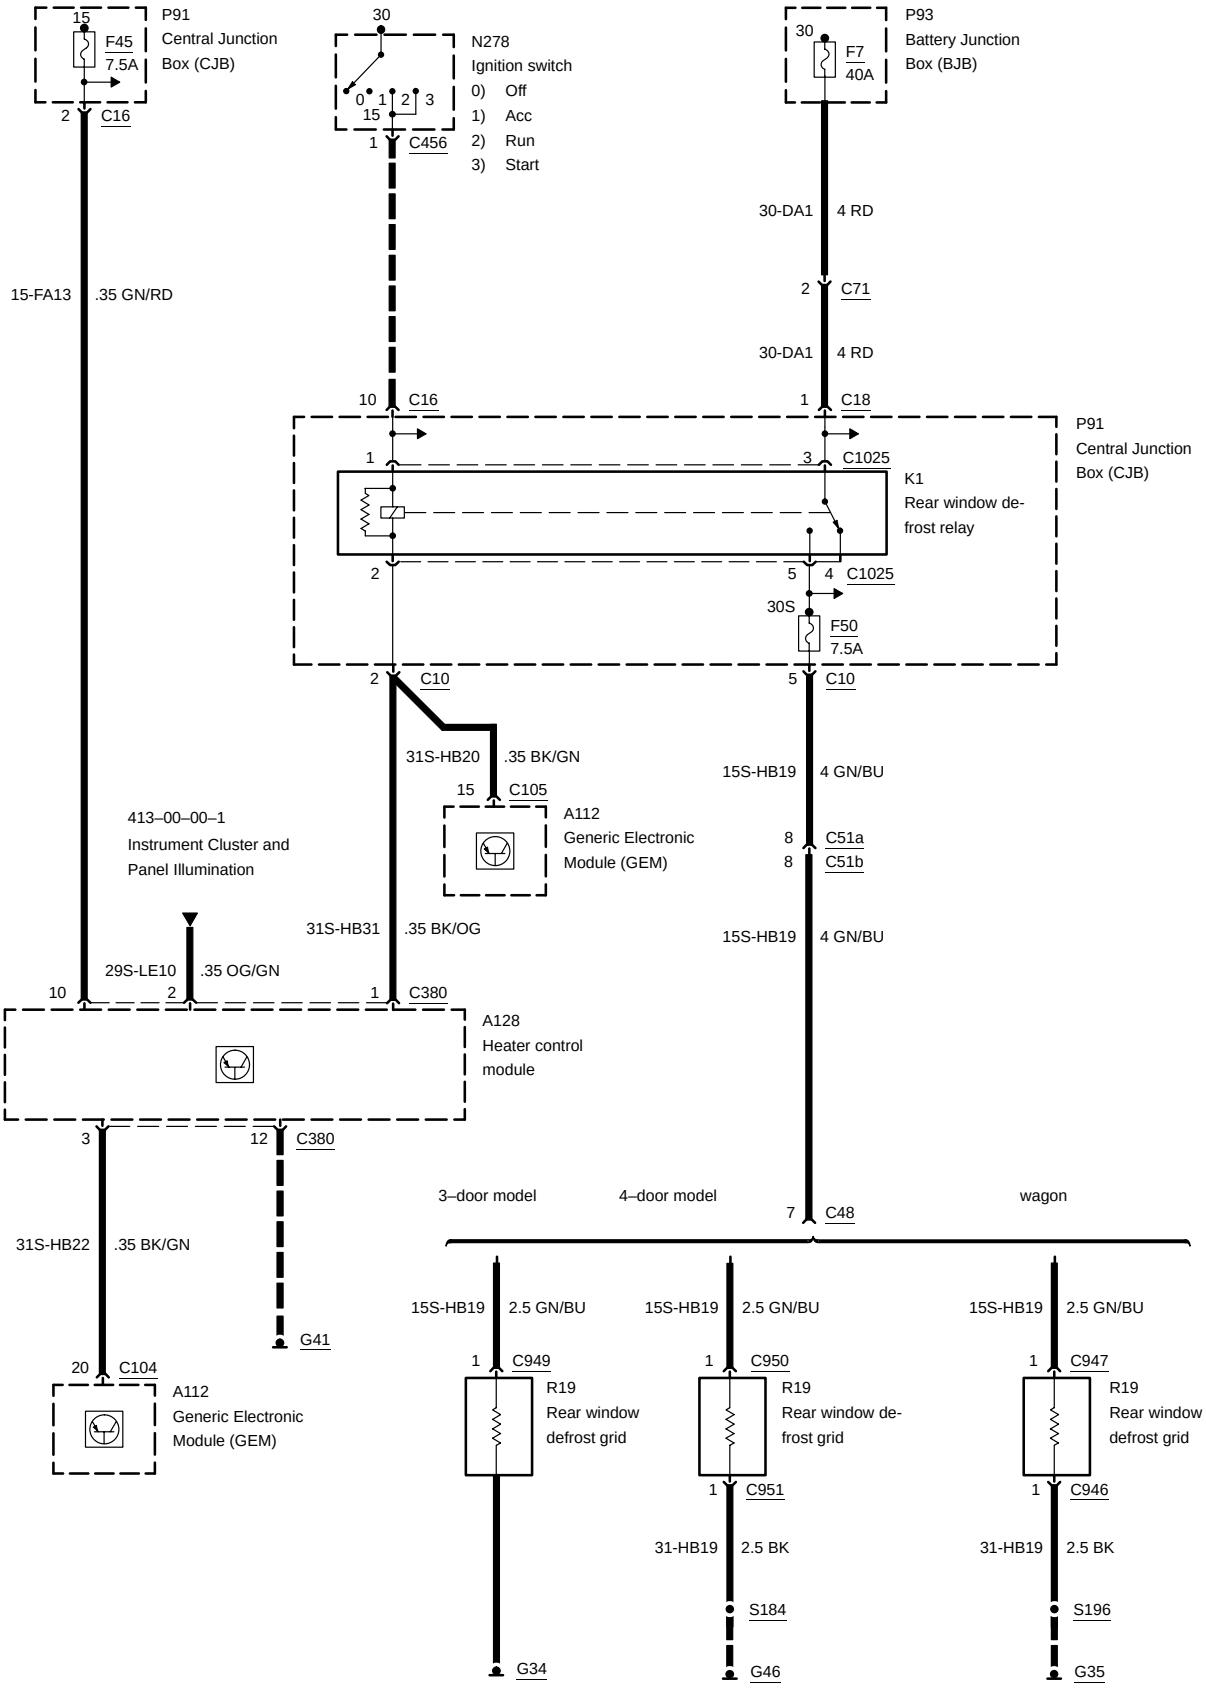
P91
Central Junction
Box (CJB)
F45
7.5A
C16
N278
Ignition switch
0) Off
1) Acc
2) Run
3) Start
C456
P93
Battery Junction
Box (BJB)
F7
40A
30-DA1 4 RD
C71
30-DA1 4 RD
C18
15-FA13 .35 GN/RD
C16
C1025
K1
Rear window de-
frost relay
C1025
30S
F50
7.5A
C10
C10
31S-HB20 .35 BK/GN
C105
A112
Generic Electronic
Module (GEM)
15S-HB19 4 GN/BU
C51a
C51b
413–00–00–1
Instrument Cluster and
Panel Illumination
31S-HB31 .35 BK/OG
15S-HB19 4 GN/BU
29S-LE10 .35 OG/GN
C380
A128
Heater control
module
C380
3–door model
4–door model
wagon
C48
31S-HB22 .35 BK/GN
G41
15S-HB19 2.5 GN/BU
15S-HB19 2.5 GN/BU
15S-HB19 2.5 GN/BU
C949
C950
C947
R19
Rear window
defrost grid
R19
Rear window de-
frost grid
R19
Rear window
defrost grid
C104
A112
Generic Electronic
Module (GEM)
C951
C946
31-HB19 2.5 BK
31-HB19 2.5 BK
S184
S196
G34
G46
G35