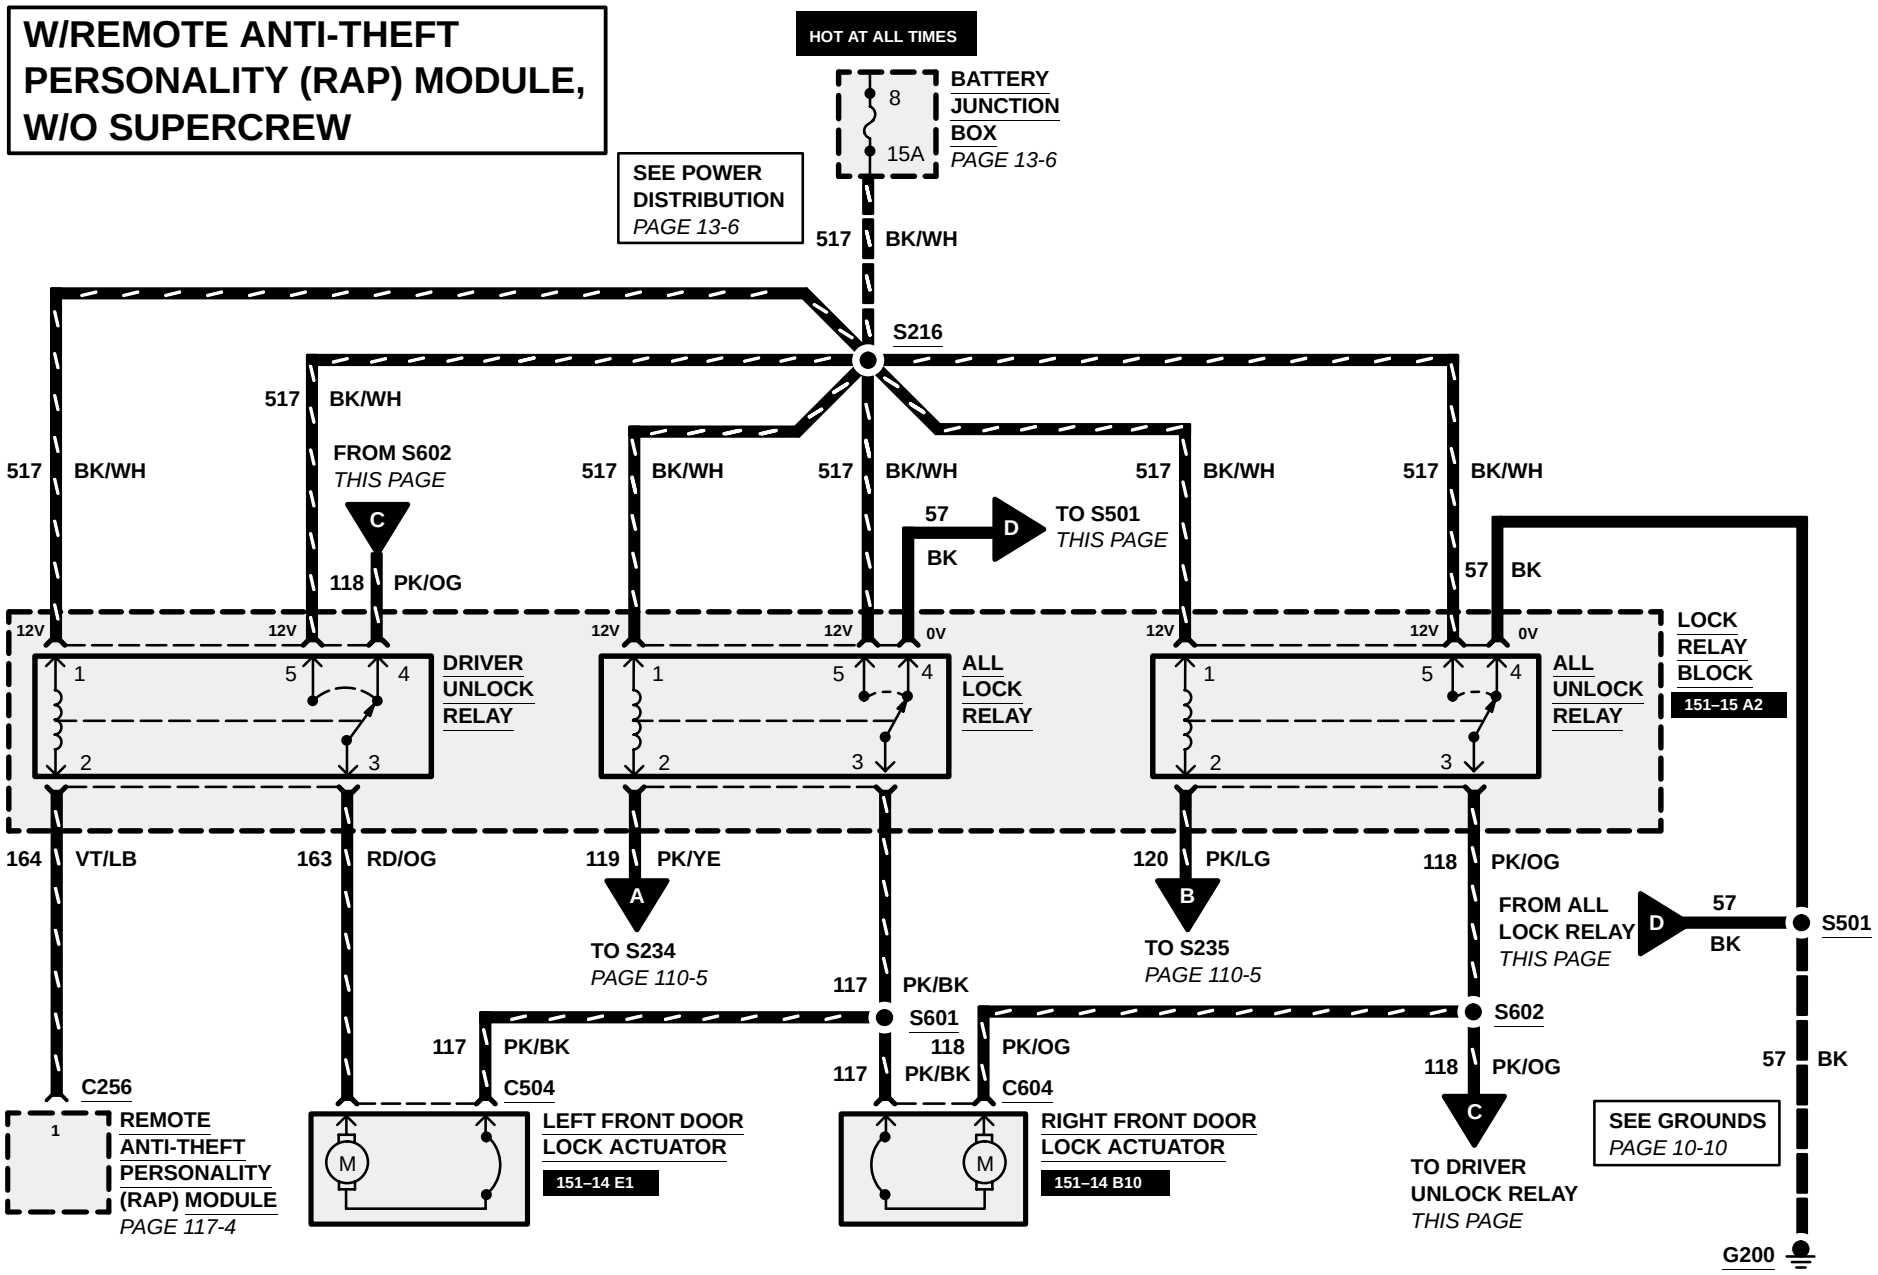
W/REMOTE ANTI-THEFT PERSONALITY (RAP) MODULE, W/O SUPERCREW
HOT AT ALL TIMES
BATTERY JUNCTION BOX
PAGE 13-6
8
15A
SEE POWER DISTRIBUTION
PAGE 13-6
517 BK/WH
S216
FROM S602
THIS PAGE
C
118 PK/OG
57 BK
D
TO S501
THIS PAGE
LOCK RELAY BLOCK
151–15 A2
DRIVER UNLOCK RELAY
ALL LOCK RELAY
ALL UNLOCK RELAY
12V
0V
164 VT/LB
163 RD/OG
119 PK/YE
120 PK/LG
118 PK/OG
A
TO S234
PAGE 110-5
B
TO S235
PAGE 110-5
FROM ALL LOCK RELAY
THIS PAGE
S501
117 PK/BK
S601
S602
C256
REMOTE ANTI-THEFT PERSONALITY (RAP) MODULE
PAGE 117-4
C504
C604
LEFT FRONT DOOR LOCK ACTUATOR
151–14 E1
RIGHT FRONT DOOR LOCK ACTUATOR
151–14 B10
TO DRIVER UNLOCK RELAY
THIS PAGE
SEE GROUNDS
PAGE 10-10
G200