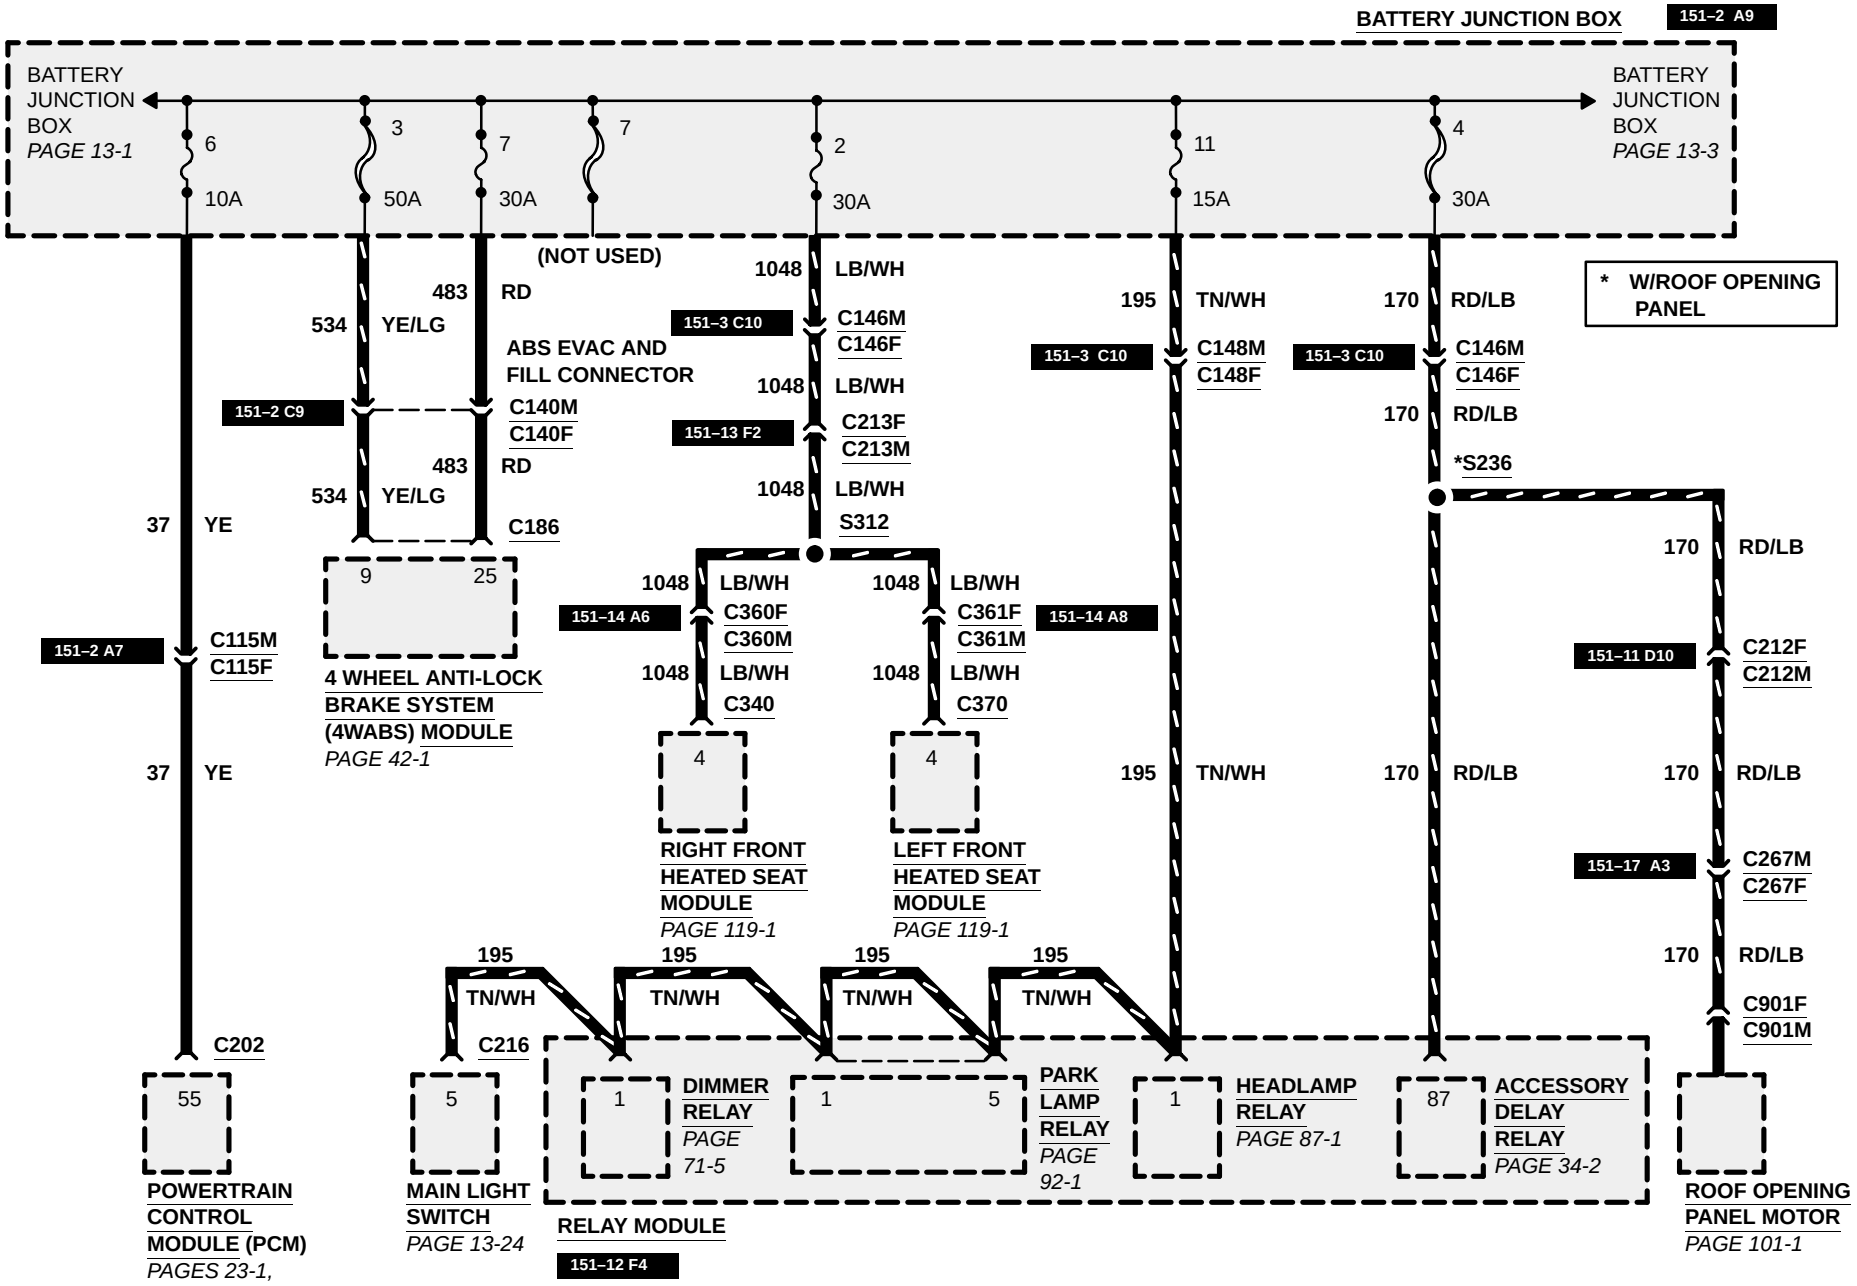
BATTERY JUNCTION BOX
151–2 A9
BATTERY JUNCTION BOX PAGE 13-1
BATTERY JUNCTION BOX PAGE 13-3
6
10A
3
50A
7
30A
7
(NOT USED)
2
30A
11
15A
4
30A
* W/ROOF OPENING PANEL
1048 LB/WH
151–3 C10
C146M
C146F
ABS EVAC AND FILL CONNECTOR
1048 LB/WH
151–13 F2
C213F
C213M
1048 LB/WH
S312
195 TN/WH
151–3 C10
C148M
C148F
170 RD/LB
151–3 C10
C146M
C146F
170 RD/LB
*S236
483 RD
534 YE/LG
151–2 C9
C140M
C140F
483 RD
534 YE/LG
37 YE
C186
9
25
4 WHEEL ANTI-LOCK BRAKE SYSTEM (4WABS) MODULE
PAGE 42-1
151–2 A7
C115M
C115F
37 YE
C202
55
POWERTRAIN CONTROL MODULE (PCM)
PAGES 23-1, 24-1, 25-1
1048 LB/WH
151–14 A6
C360F
C360M
1048 LB/WH
C340
4
RIGHT FRONT HEATED SEAT MODULE
PAGE 119-1
1048 LB/WH
C361F
C361M
1048 LB/WH
C370
4
LEFT FRONT HEATED SEAT MODULE
PAGE 119-1
151–14 A8
195 TN/WH
195 TN/WH
170 RD/LB
170 RD/LB
170 RD/LB
151–11 D10
C212F
C212M
151–17 A3
C267M
C267F
170 RD/LB
C901F
C901M
195 TN/WH
C216
195 TN/WH
195 TN/WH
195 TN/WH
5
MAIN LIGHT SWITCH
PAGE 13-24
1
DIMMER RELAY
PAGE 71-5
1
5
PARK LAMP RELAY
PAGE 92-1
1
HEADLAMP RELAY
PAGE 87-1
87
ACCESSORY DELAY RELAY
PAGE 34-2
RELAY MODULE
151–12 F4
ROOF OPENING PANEL MOTOR
PAGE 101-1