C382

14A699

B204
Backrest forward/
rearward sensor



F03056

Pin	Circuit	Circuit Function
1	41A (OG/WH)	position sense
2	43 (OG/LB)	Backrest forward/rearward sensor - position sense
3	44A (OG/RD)	position sense

C389 (WH)

14A699

N421
Power seat switch,
left

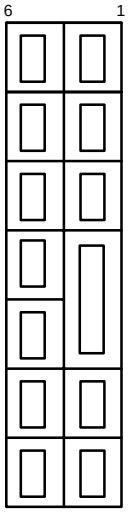

F12095

Pin	Circuit	Circuit Function
1	38A (BN/WH)	switch sense
2	–	not used
3	46 (YE/WH)	Backrest rearward, input
4	36 (YE/LG)	Front height motor, Down, input
5	38B (BN/WH)	switch sense
6	47 (GY)	Fwd/Rwd motor, rearward, input
7	39 (LG/BK)	Fwd/Rwd motor, Forward, input
8	35 (RD/LG)	Backrest forward, input
9	–	not used
10	–	not used
11	–	not used
12	37 (RD/LG)	Front height motor, Up, input

C392

VF3862

A270
Video cassette play-
er



F12119

Pin	Circuit	Circuit Function
1	57 (BK)	Video cassette player – Ground
2	16 (YE/WH)	Voltage supplied at all times (overload protected)
3	18 (BK)	Voltage in Run or Accessory (overload protected)
4	–	not used
5	–	not used
6	255 (PK/DG)	Video cassette player, control
7	245 (YE/RD)	Video cassette player – audio, Left +
8	235 (VT/YE)	Video cassette player – audio, Left –
9	225 (DB/RD)	Video cassette player – audio, Right +
10	215 (PK/BK)	Video cassette player – audio, Right –
11	205 (BK/WH)	Video cassette player – Video display +
12	195 (OG/PK)	Video cassette player – Video display –