C421

12A522

A147
Powertrain control module
(PCM)

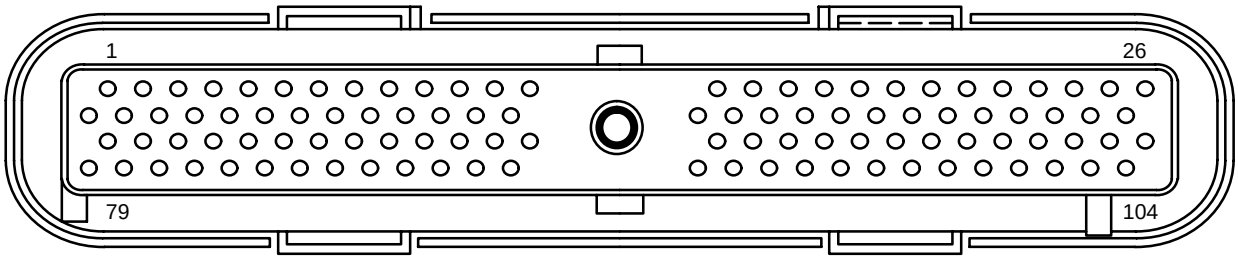

F104001

Pin	Circuit	Circuit Function
1	–	not used
2	91S-RD7 (BK/OG)	Ground, switched
3	–	not used
4	–	not used
5	–	not used
6	91S-TA23 (BK/YE)	Ground, switched
7	–	not used
8	91S-RJ16 (BK/BU)	Ground, switched
9	8-GA7 (WH/RD)	Sensor signal
10	–	not used
11	91S-TA24 (BK/BU)	Ground, switched
12	8-GA7 (WH/RD)	Sensor signal
	8-GG18 (WH/BK)	Sensor signal
13	8-RA1 (WH/BU)	Sensor signal
14	–	not used
15	5-RE8 (BU)	Data link, bus negative
16	4-RE8 (GY)	Data link, bus positive
17	91S-PA17 (BK/WH)	Ground, switched
18	–	not used
19	10-GL37 (GY/OG)	Signal 2 (Y–direction, reverse, downward)
20	91S-RL12 (BK/BU)	Ground, switched

Pin	Circuit	Circuit Function
21	8-RJ4 (WH/RD)	Sensor signal
22	9-RJ4 (BN/RD)	Sensor signal return (reference/ground)
23	–	not used
24	91-RE8A (BK/YE)	Ground
25	91-RE21 (BK/RD)	Ground
26	9-RR1 (BN/BU)	Sensor signal return (reference/ground)
27	31S-BB12 (BK/YE)	Ground, switched
28	8-RE2 (WH/VT)	Sensor signal
29	15S-TA21 (GN/BK)	Voltage, ignition switch in Start or Run (not overload protected), switched
30	–	not used
31	8-CE6 (WH)	Sensor signal
32	9-RJ18 (BN/YE)	Sensor signal return (reference/ground)
33	9-RJ29 (BN/BU)	Sensor signal return (reference/ground)
34	33-XL7 (YE/GN)	Switched between: Battery voltage, Ground or Open
35	8-RJ25 (WH/BU)	Sensor signal
36	9-RJ22 (BN/BU)	Sensor signal return (reference/ground)
37	8-TA26 (WH/RD)	Sensor signal
38	8-RJ6 (WH/GN)	Sensor signal

Pin	Circuit	Circuit Function
39	8-RJ17 (WH/VT)	Sensor signal
40	15S-RE16 (GN/BK)	Voltage, ignition switch in Start or Run (not overload protected), switched
41	15S-RE9 (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected), switched
42	31S-GL36 (BK/BU)	Ground, switched
	91S-RL20 (BK/RD)	Ground, switched
43	8-GH6 (WH)	Sensor signal
44	31S-GL36 (BK/BU)	Ground, switched
45	91S-RL27 (BK/RD)	Ground, switched
46	–	not used
47	91S-PA25 (BK/GN)	Ground, switched
48	8-GB10 (WH/BK)	Sensor signal
49	–	not used
50	–	not used
51	91-RE8C (BK/YE)	Ground
52	9-RR2 (BN/GN)	Sensor signal return (reference/ground)
53	8-GL37 (WH/GN)	Sensor signal
54	91S-RH5 (BK/BU)	Ground, switched
55	29-RE8 (OG/YE)	Voltage supplied at all times (overload protected)
56	91S-RL25 (BK/BU)	Ground, switched
57	8-RJ18 (WH/BK)	Sensor signal
58	8-RJ29 (WH/BU)	Sensor signal
	8-RJ29A (WH/BU)	Sensor signal
59	8-BA9 (WH/GN)	Sensor signal
60	8-RJ14 (WH)	Sensor signal
61	8-RJ26 (WH/GN)	Sensor signal

Pin	Circuit	Circuit Function
62	8-RJ13 (WH/VT)	Sensor signal
63	8-RJ11 (WH/GN)	Sensor signal
64	8-BB6 (WH)	Sensor signal
	8-TA9 (WH/GN)	Sensor signal
65	33-XL2 (YE/RD)	Switched between: Battery voltage, Ground or Open
	8-RJ7 (WH/BU)	Sensor signal
66	–	not used
67	91S-RL3 (BK/OG)	Ground, switched
68	91S-PA7 (BK/BU)	Ground, switched
69	91S-FA11 (BK/YE)	Ground, switched
70	91S-RL10 (BK/WH)	Ground, switched
71	15-RE8 (GN/YE)	Voltage, ignition switch in Start or Run (not overload protected)
72	–	not used
73	91S-RJ14 (BK/YE)	Ground, switched
74	–	not used
75	–	not used
76	9-RJ3 (BN/WH)	Sensor signal return (reference/ground)
	9-RE8A (BN)	Sensor signal return (reference/ground)
77	91-RE8B (BK/YE)	Ground
78	9-RR3 (BN/YE)	Sensor signal return (reference/ground)
79	–	not used
80	91S-TA20 (BK/WH)	Ground, switched
81	91S-TA17 (BK/RD)	Ground, switched
82	31S-BB12 (BK/YE)	Ground, switched
	31S-TA9 (BK/GN)	Ground, switched

Pin	Circuit	Circuit Function
83	91S-RL9 (BK/YE)	Ground, switched
84	8-TA27 (WH/VT)	Sensor signal
85	8-RJ3 (WH/VT)	Sensor signal
86	91S-PA13 (BK/BU)	Ground, switched
87	9-RJ18 (BN/YE)	Sensor signal return (reference/ground)
	8-RJ15 (WH/RD)	Sensor signal
88	8-RJ22 (WH/BU)	Sensor signal
89	8-RJ28 (WH)	Sensor signal
90	7-RE8 (YE)	Voltage D.C. supplied at all times (sensor)
91	9-RE8 (BN)	Sensor signal return (reference/ground)
92	15S-RE13 (GN/RD)	Voltage, ignition switch in Start or Run (not overload protected), switched
93	91S-RJ14 (BK/YE)	Ground, switched
94	91S-RL15 (BK/RD)	Ground, switched
95	91S-RL13 (BK/OG)	Ground, switched
96	91S-RL11 (BK/YE)	Ground, switched
97	15-RE8A (GN/YE)	Voltage, ignition switch in Start or Run (not overload protected)
98	–	not used
99	91S-RJ15 (BK/BU)	Ground, switched
100	91S-RJ25 (BK/OG)	Ground, switched
101	91S-RJ26 (BK/GN)	Ground, switched
102	91S-TA25 (BK/OG)	Ground, switched
103	91-RE8 (BK/YE)	Ground
104	8-GL37 (WH/GN)	Sensor signal