C603

14A005

A173
Door lock unit, passenger side front
(5421812)

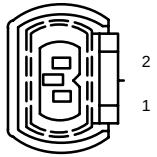

F02116

Pin	Circuit	Circuit Function
1	33-AA20 (YE/BU)	Switched between: Battery voltage, Ground or Open
2	32-AA21 (WH/GN)	Switched between: Battery voltage, Ground or Open

C604

14A005

N105
Window adjust switch, passenger side

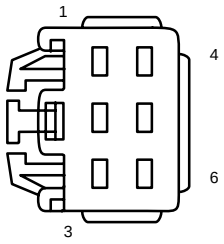

F06213

Pin	Circuit	Circuit Function
1	7S-AJ48 (YE/VT)	Voltage D.C. supplied at all times (sensor), switch
2	10-AJ18 (GY/WH)	Signal 2 (Y–direction, reverse, downward)
3	7-AJ18 (YE/VT)	Voltage D.C. supplied at all times (sensor)
4	–	not used
5	8-AJ18 (WH/VT)	Sensor signal
6	7S-AJ47 (YE/BK)	Voltage D.C. supplied at all times (sensor), switch

C605

14A005

N205
Door lock switch, passenger side
(14028)

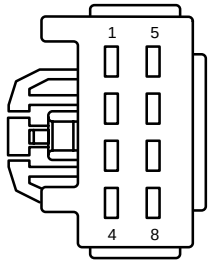

F08193

Pin	Circuit	Circuit Function
1	31-LH42 (BK/BU)	Ground
2	–	not used
3	8-AA21 (WH/GN)	Sensor signal
4	31-AA37 (BK/WH)	Ground
5	7-LH42 (YE/RD)	Voltage D.C. supplied at all times (sensor)
6	–	not used
7	8-AA20 (WH/BU)	Sensor signal
8	–	not used