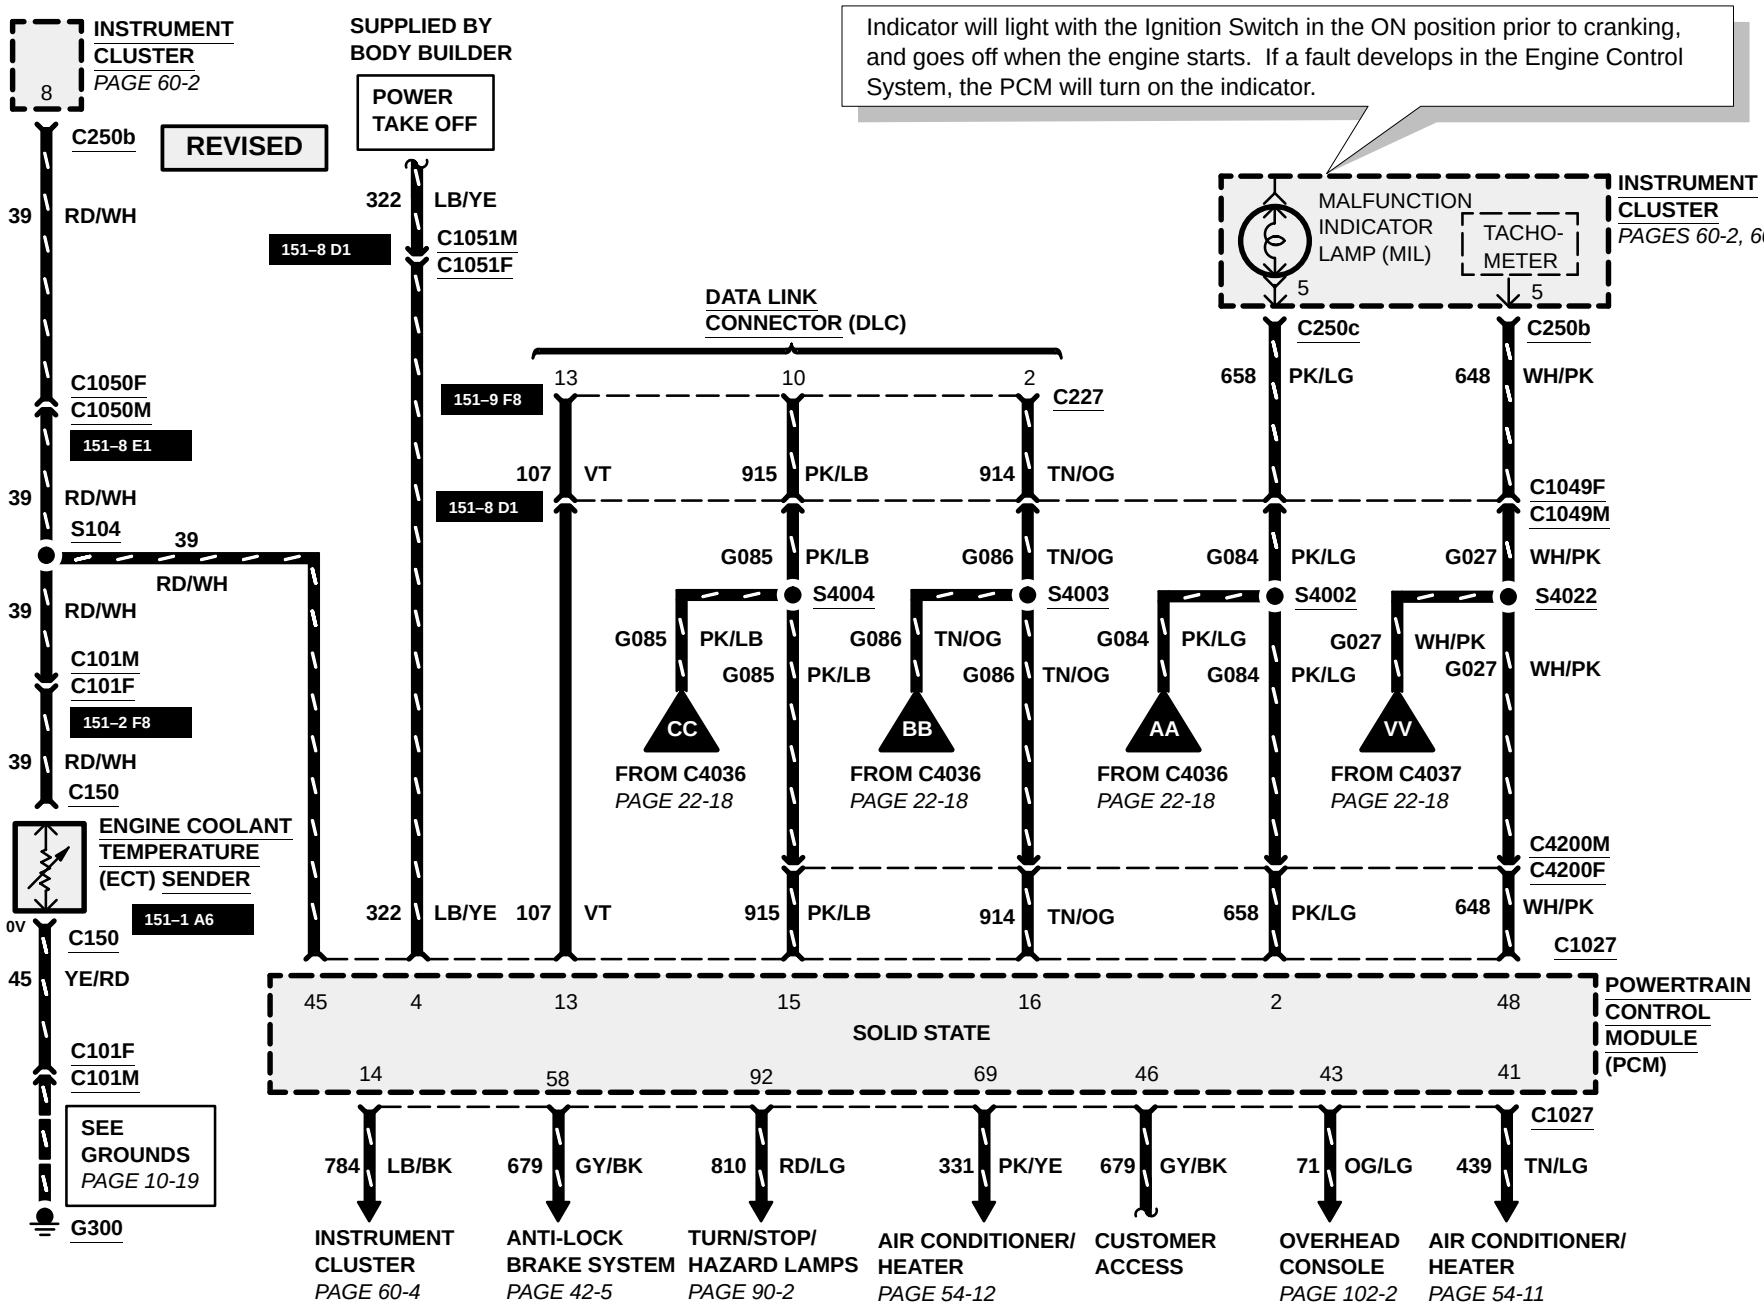
INSTRUMENT CLUSTER
PAGE 60-2
8
SUPPLIED BY BODY BUILDER
POWER TAKE OFF
REVISED
C250b
39 RD/WH
322 LB/YE
151–8 D1
C1051M
C1051F
Indicator will light with the Ignition Switch in the ON position prior to cranking, and goes off when the engine starts. If a fault develops in the Engine Control System, the PCM will turn on the indicator.
MALFUNCTION INDICATOR LAMP (MIL)
TACHO-METER
INSTRUMENT CLUSTER
PAGES 60-2, 60-5
DATA LINK CONNECTOR (DLC)
C250c
C250b
658 PK/LG
648 WH/PK
C1050F
C1050M
151–8 E1
151–9 F8
13
10
2
C227
107 VT
915 PK/LB
914 TN/OG
151–8 D1
C1049F
C1049M
39 RD/WH
S104
G085 PK/LB
G086 TN/OG
G084 PK/LG
G027 WH/PK
S4004
S4003
S4002
S4022
C101M
C101F
151–2 F8
CC
BB
AA
VV
FROM C4036 PAGE 22-18
FROM C4036 PAGE 22-18
FROM C4036 PAGE 22-18
FROM C4037 PAGE 22-18
C150
ENGINE COOLANT TEMPERATURE (ECT) SENDER
151–1 A6
0V
45 YE/RD
C4200M
C4200F
C1027
POWERTRAIN CONTROL MODULE (PCM)
SOLID STATE
45
4
13
15
16
2
48
14
58
92
69
46
43
41
784 LB/BK
679 GY/BK
810 RD/LG
331 PK/YE
679 GY/BK
71 OG/LG
439 TN/LG
SEE GROUNDS PAGE 10-19
G300
INSTRUMENT CLUSTER
PAGE 60-4
ANTI-LOCK BRAKE SYSTEM
PAGE 42-5
TURN/STOP/ HAZARD LAMPS
PAGE 90-2
AIR CONDITIONER/ HEATER
PAGE 54-12
CUSTOMER ACCESS
OVERHEAD CONSOLE
PAGE 102-2
AIR CONDITIONER/ HEATER
PAGE 54-11