## C615b (BK)

**14A005**

Exterior rear view mirror, right

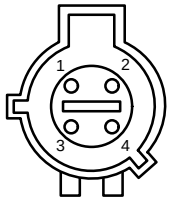

F04082

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 957 (VT/WH) | Right mirror, Up/Down mirror movement, position, signal |
| 2 | 958 (GY/RD) | feed |
| 3 | 954 (DG/WH) | Right mirror, Right/Left mirror movement, position, signal |
| 4 | 955 (GY) | common |

* with memory

## C627

**14A005**

Seat adjust switch, passenger side front

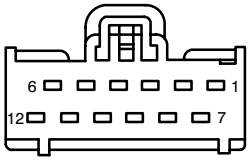

F12137

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 985 (RD/LB) | Rear height motor, Up |
| 2 | 918 (GY) | Passenger seat backrest motor – Rearward |
| 3 | 919 (GY/BK) | Passenger seat backrest motor – Forward |
| 4 | 989 (RD/LG) | Rear height motor, Up |
| 5 | 988 (YE/LG) | Rear height motor, Down |
| 6 | – | not used |
| 7 | 57 (BK) | Ground |
| 8 | 984 (YE/LB) | Front height motor, Down |
| 9 | 986 (YE/WH) | Fwd/Rwd motor, Rearward |
| 10 | 987 (RD/WH) | Fwd/Rwd motor, Forward |
| 11 | 490 (RD) | Voltage supplied at all times (overload protected) |
| | *566 (DG) | |
| 12 | – | not used |

## C630

**14323**

Seat heater switch, passenger side

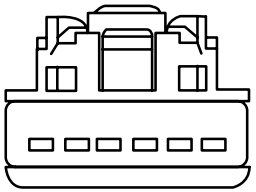
F06301

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 57 (BK) | Ground |
| 2 | 1255 (WH/RD) | Climate controlled seat module, Low |
| 3 | 1018 (LG/OG) | indicator, Low |
| 4 | 1019 (TN/LB) | indicator, High |
| 5 | 964 (DB/LG) | Voltage in Run or Accessory (overload protected) |
| 6 | 1020 (DG/VT) | Climate controlled seat module, High |

## C700 (BK)

**14A005**

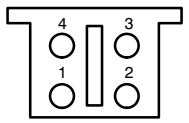

F04271

(1) 57 (BK)
(2) 131 (VT/OG)

**14A511**

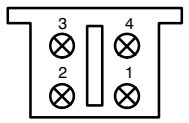

F04271

(3) 53 (BK/LB)
(4) 484 (OG/BK)