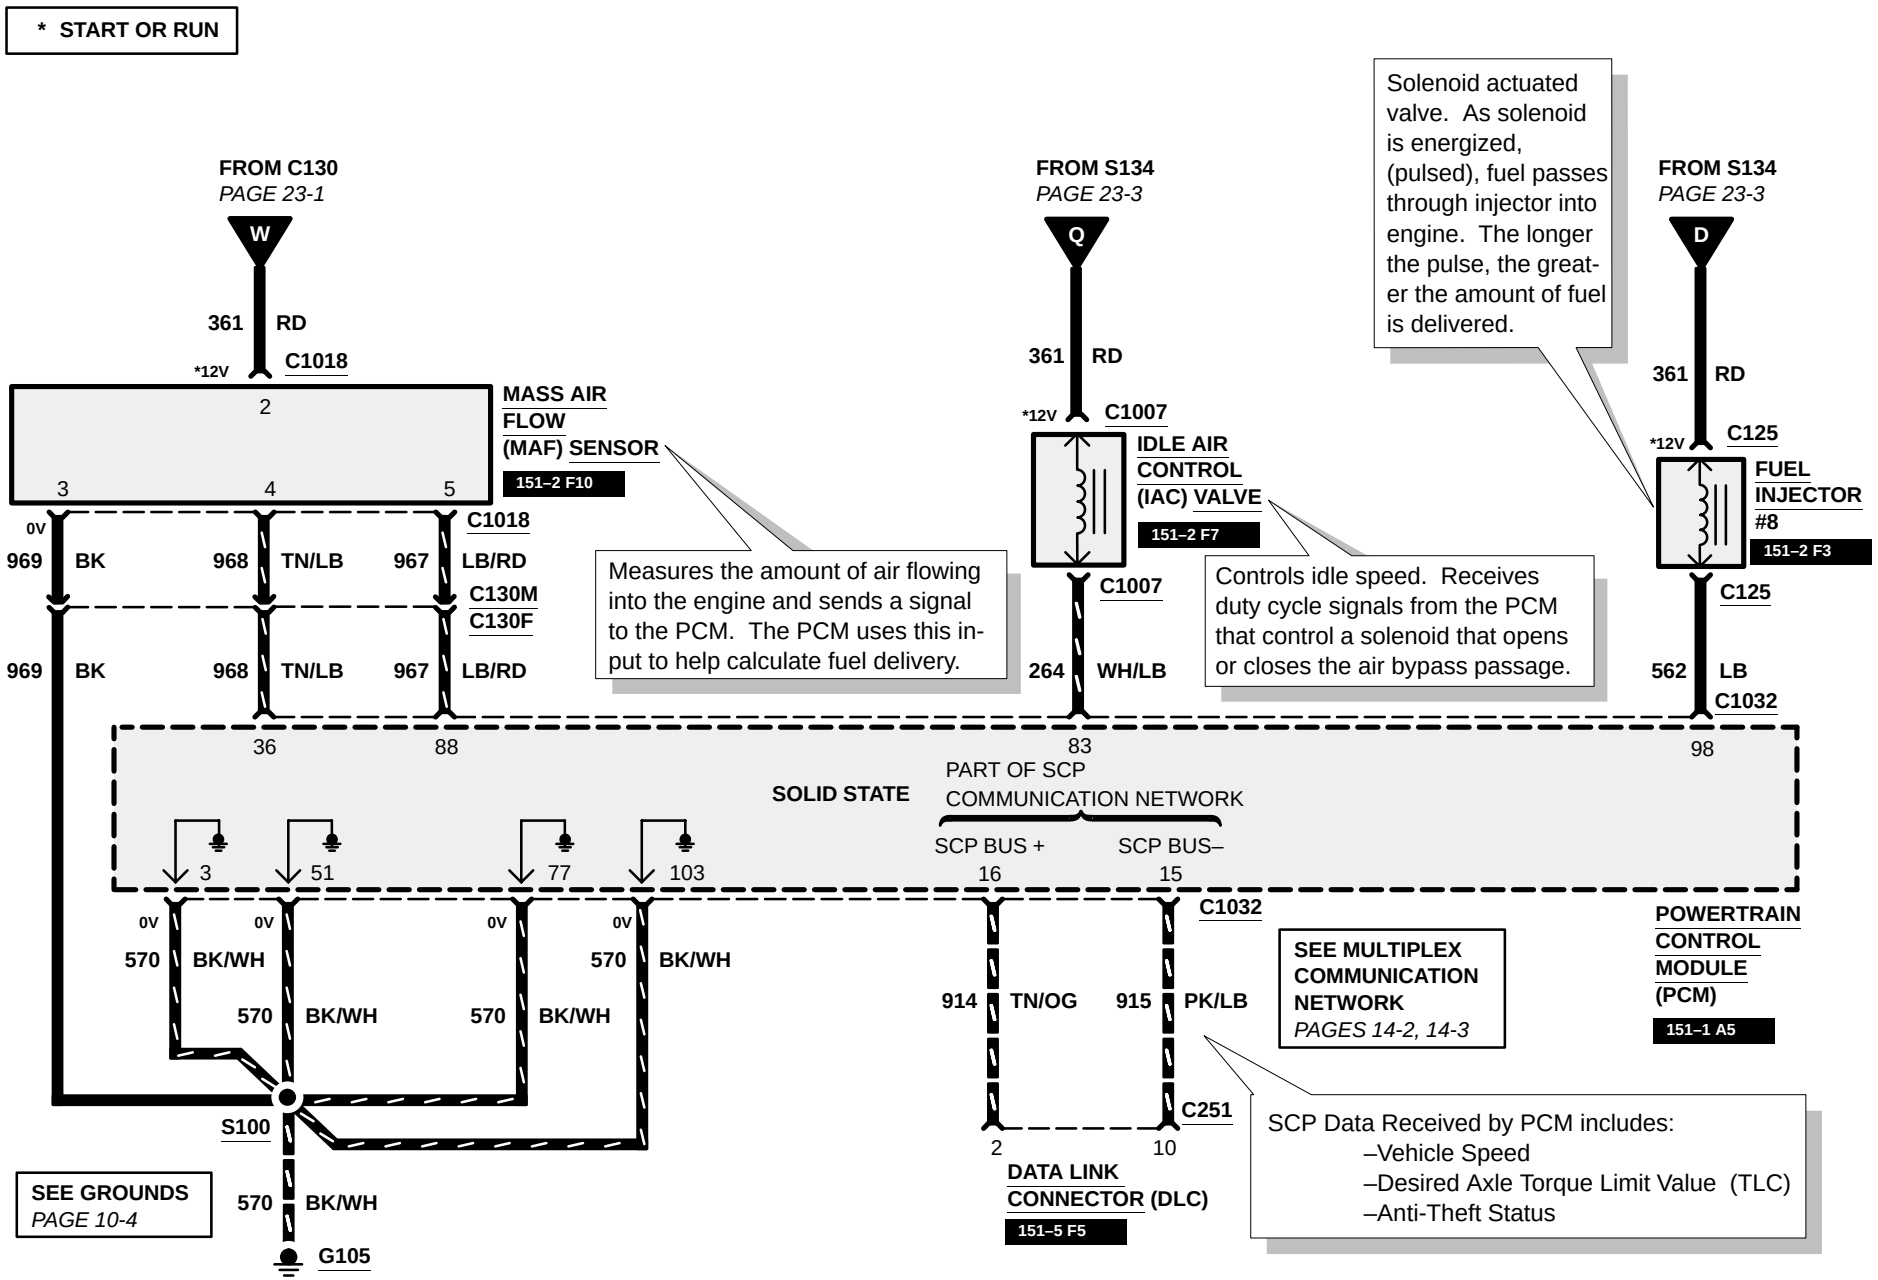
* START OR RUN
FROM C130
PAGE 23-1
W
361 RD
*12V
C1018
2
MASS AIR FLOW (MAF) SENSOR
151–2 F10
3
4
5
0V
969 BK
968 TN/LB
967 LB/RD
C1018
C130M
C130F
969 BK
968 TN/LB
967 LB/RD
Measures the amount of air flowing into the engine and sends a signal to the PCM. The PCM uses this input to help calculate fuel delivery.
FROM S134
PAGE 23-3
Q
361 RD
*12V
C1007
IDLE AIR CONTROL (IAC) VALVE
151–2 F7
C1007
264 WH/LB
Controls idle speed. Receives duty cycle signals from the PCM that control a solenoid that opens or closes the air bypass passage.
Solenoid actuated valve. As solenoid is energized, (pulsed), fuel passes through injector into engine. The longer the pulse, the greater the amount of fuel is delivered.
FROM S134
PAGE 23-3
D
361 RD
*12V
C125
FUEL INJECTOR #8
151–2 F3
C125
562 LB
C1032
36
88
83
98
SOLID STATE
PART OF SCP COMMUNICATION NETWORK
SCP BUS +
SCP BUS–
3
51
77
103
16
15
0V
570 BK/WH
C1032
914 TN/OG
915 PK/LB
SEE MULTIPLEX COMMUNICATION NETWORK
PAGES 14-2, 14-3
POWERTRAIN CONTROL MODULE (PCM)
151–1 A5
S100
C251
2
10
DATA LINK CONNECTOR (DLC)
151–5 F5
SCP Data Received by PCM includes:
–Vehicle Speed
–Desired Axle Torque Limit Value (TLC)
–Anti-Theft Status
SEE GROUNDS
PAGE 10-4
570 BK/WH
G105