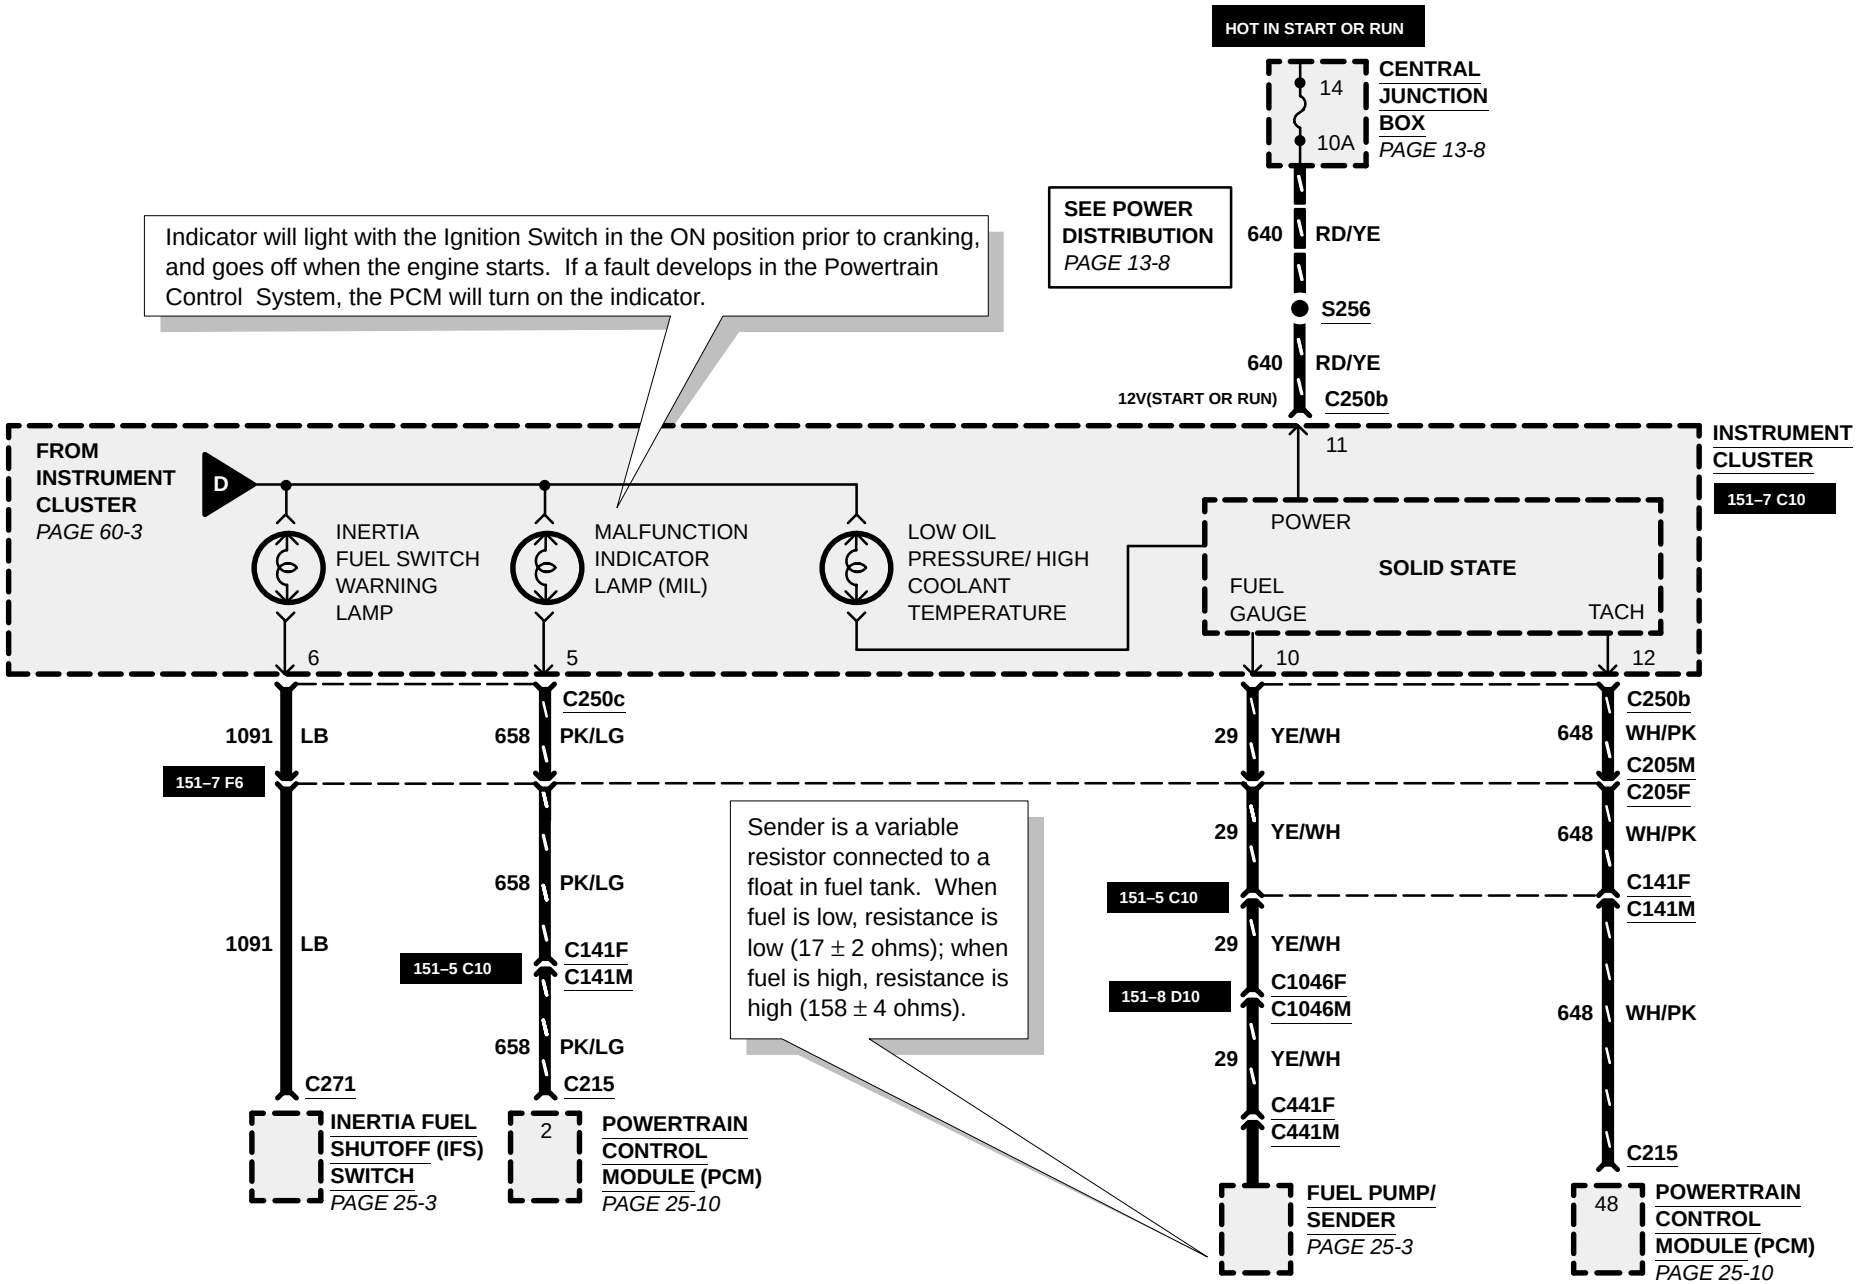
HOT IN START OR RUN
CENTRAL JUNCTION BOX
PAGE 13-8
14
10A
SEE POWER DISTRIBUTION
PAGE 13-8
640 RD/YE
S256
640 RD/YE
12V(START OR RUN)
C250b
11
INSTRUMENT CLUSTER
151–7 C10
Indicator will light with the Ignition Switch in the ON position prior to cranking, and goes off when the engine starts. If a fault develops in the Powertrain Control System, the PCM will turn on the indicator.
FROM INSTRUMENT CLUSTER
PAGE 60-3
D
INERTIA FUEL SWITCH WARNING LAMP
MALFUNCTION INDICATOR LAMP (MIL)
LOW OIL PRESSURE/ HIGH COOLANT TEMPERATURE
POWER
SOLID STATE
FUEL GAUGE
TACH
6
5
10
12
1091 LB
658 PK/LG
C250c
29 YE/WH
C250b
648 WH/PK
151–7 F6
C205M
C205F
29 YE/WH
648 WH/PK
658 PK/LG
C141F
C141M
151–5 C10
1091 LB
C141F
C141M
29 YE/WH
151–8 D10
C1046F
C1046M
658 PK/LG
29 YE/WH
648 WH/PK
C441F
C441M
C271
C215
C215
INERTIA FUEL SHUTOFF (IFS) SWITCH
PAGE 25-3
2
POWERTRAIN CONTROL MODULE (PCM)
PAGE 25-10
Sender is a variable resistor connected to a float in fuel tank. When fuel is low, resistance is low (17 ± 2 ohms); when fuel is high, resistance is high (158 ± 4 ohms).
FUEL PUMP/ SENDER
PAGE 25-3
48
POWERTRAIN CONTROL MODULE (PCM)
PAGE 25-10